

# MOD YOUR PROP WITH MOTION ACTIVATED LIGHT AND MIST!



TEKKY

## MISTING MODULE™

Item #59084. **MISTING MODULE™** is a trademark of Tekky.

Copyright © 2020 Tekky. All Rights Reserved.

Manufactured for: Tekky, Orland Park, IL 60467 USA

MADE IN CHINA

### DIY MISTING HALLOWEEN PROP EERIE MIX OF LIGHTS & MIST!

#### SETTING UP YOUR MISTING MODULE™

KEEP ALL PLASTIC AND WIRE PARTS  
AWAY FROM CHILDREN

1. Use a small screwdriver to remove the (2) screws that release the battery compartment located on bottom of the MISTING MODULE™. Pull to slide battery compartment out for access to batteries. See Fig. 1
2. Remove screw on battery compartment and insert (3) brand new "AA" alkaline batteries into the battery compartment. Replace screw and re-insert battery compartment into the bottom of MISTING MODULE™. Replace (2) screws that secure battery compartment to bottom of item.
3. Twist water bottle (seated on bottom of MISTING MODULE™) COUNTER-CLOCKWISE to remove. See Fig. 2
4. Fill water bottle with clean, cool, room temperature water only. (Do not use oil/essential oil/fragrance/perfume.) See Fig. 3
5. Replace water bottle, twisting the bottle in a CLOCKWISE direction.  
**NOTE:** Make sure not to over-tighten the bottle.
6. Place switch (located on bottom of item) to the "ON" position to operate in "TIMER" mode: lights and misting operation with four minute breaks; move in front of item during four minute break to instantly restart scary sequence.
7. Place switch to "CONSTANT" to operate item in continuous play mode.  
**NOTE:** First fill of tank could take up to 2 minutes of use to start misting effect.

#### FOR BEST RESULTS:

- Keep "function" switch in the "OFF" position when not in use.
- Place unit on place mat or towel if you are operating on a wood or easily damaged surface.
- Unit will stop misting when water level becomes too low.

#### BOTTOM OF MISTING MODULE™

FIG. 1  
BATTERY  
COMPARTMENT

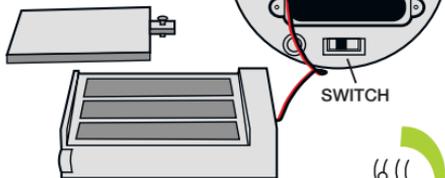


FIG. 2  
Turn  
handle  
counter-  
clockwise  
to access  
WATER  
BOTTLE.




FIG. 3  
Fill  
WATER  
BOTTLE  
with  
clean  
water.



#### **3AA** Batteries Required (not included)

#### BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

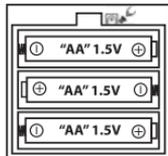

#### **⚠ WARNING! CHOKING HAZARD—Small Parts.**

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.

Water capacity: 48 ml (1.62 fl oz)

INDOOR USE. SURFACE WASHABLE ONLY. All new materials: plastic, metal.

**TekkyDesign.com**