







BOOGIE MAN

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

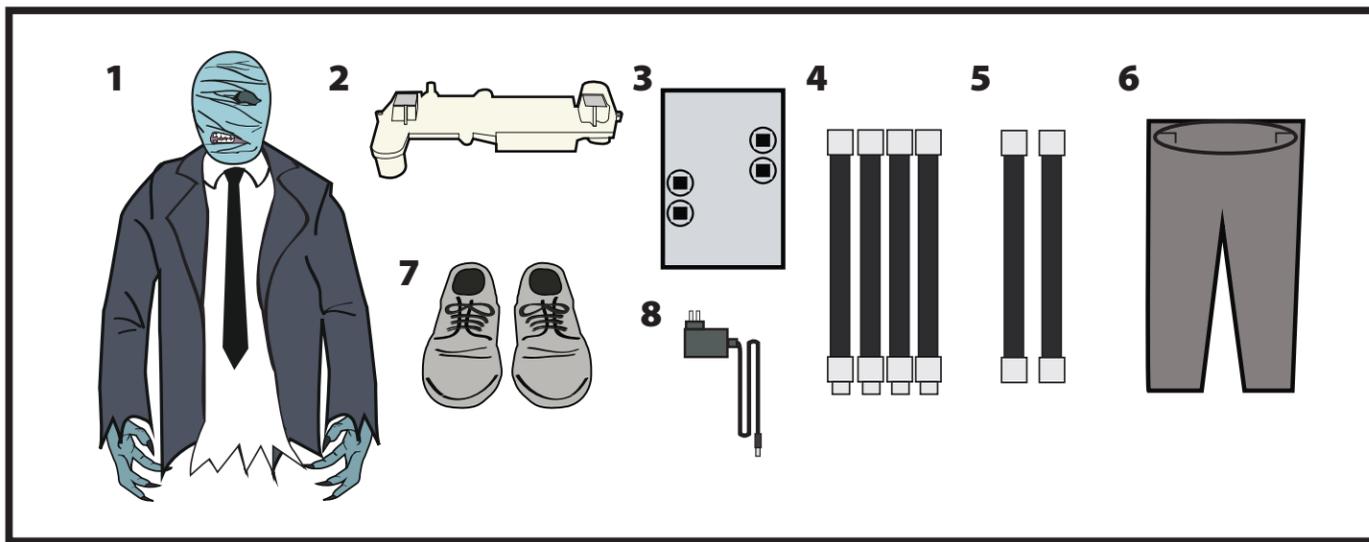


1. Snap lock four telescoping **LEG POLES** to the **WOODEN BASE**. (Match **A TO A**) Press until it clicks into place.
2. Holding the four **TELESCOPING LEG POLES** near the base, extend the poles upwards with your other hand until all four poles are locked into place. The poles are fully extended when you hear two audible clicks.
3. Slide **SHOES** over the **LEG POLES** connected to the **WOODEN BASE**.
4. Slide **PANTS WITH BRACKET** over **LEG POLES** connected to the **WOODEN BASE**.
5. Snap lock the **PLASTIC BASE** to **LEG POLES**. (Match **B to B**)
6. Pull **PANTS WITH BRACKET** up and attach to holes on either side of the **MODULE** inserting prongs facing down.
7. Firmly hold and extend both **UPPER POLES**. Poles are fully extended when you hear an audible click.
8. Snap lock **UPPER POLES** to the module located inside the clothes of the **UPPER BODY**. (Match **D to D**)

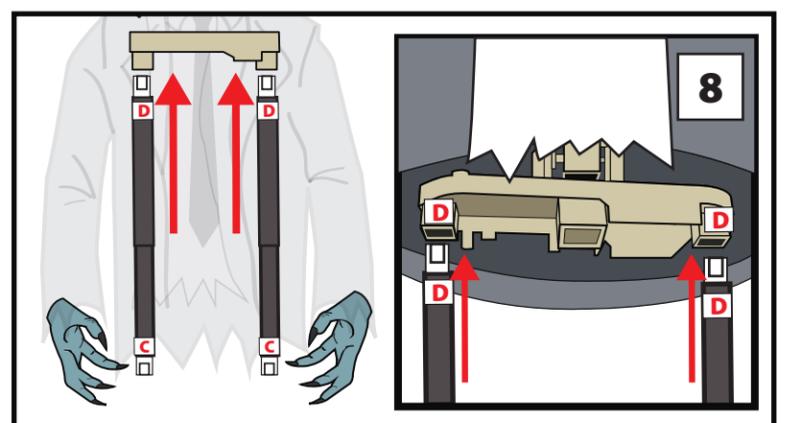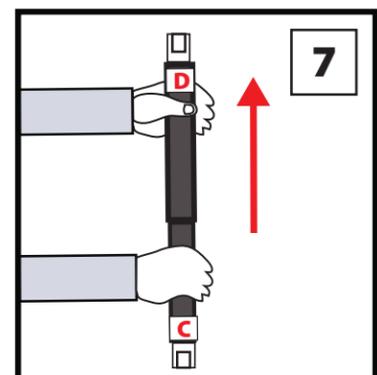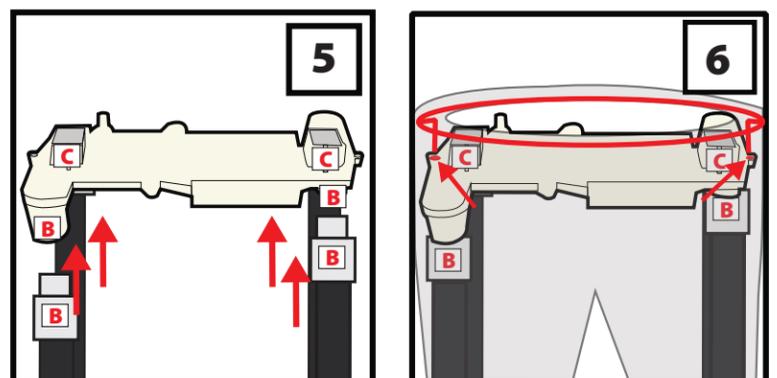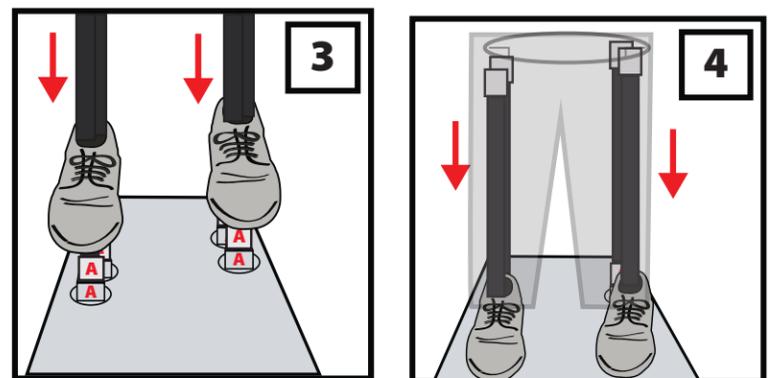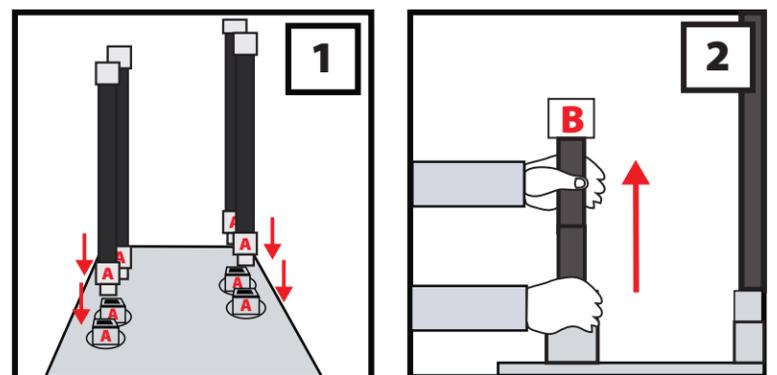


9. Connect **UPPER BODY** to **PLASTIC BASE**. Snap Lock **UPPER POLES** to **PLASTIC BASE**. (Match **C** to **C**)

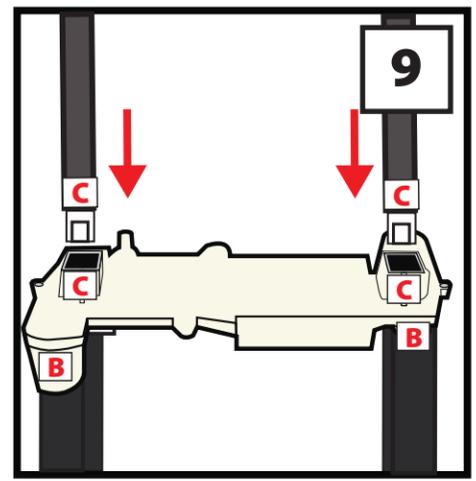

10. Connect **6V2A ADAPTER** or insert 4 AA alkaline batteries into the module located underneath the clothing of the **UPPER BODY**.

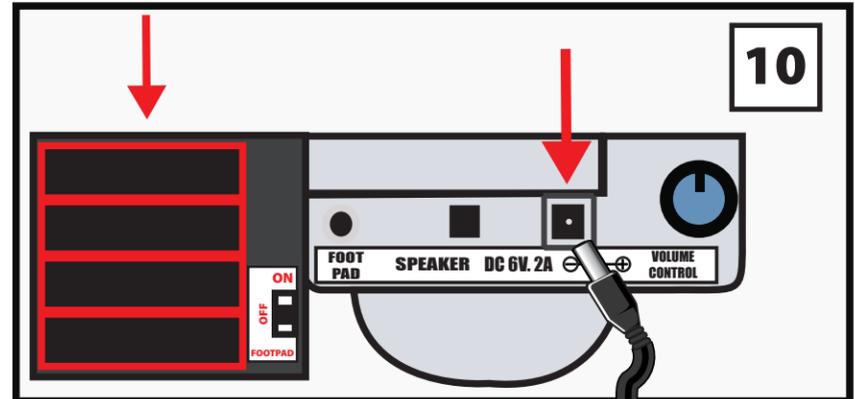

11. Turn the switch to the **ON** position to operate in **Sound** or **Motion** activation mode. Make a loud sound (clap), or move in front of the item to activate. Turn item **OFF** when not in use.

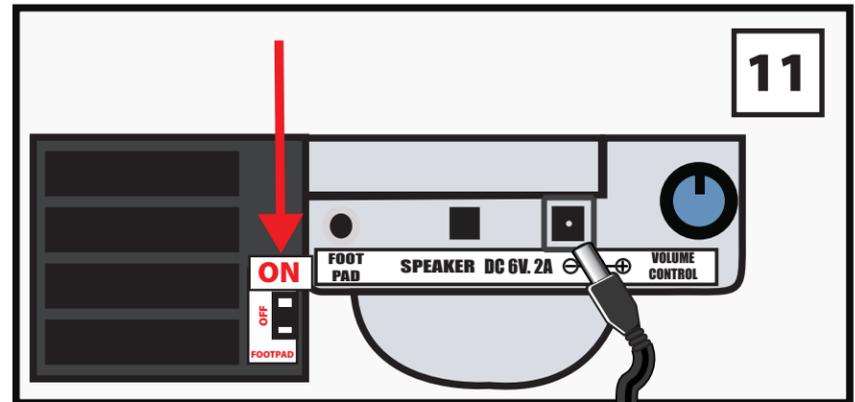

12. Adjust volume control knob as needed.

13. Pull down shirt and position arms out to the side as shown in photo below.

Optional Footpad Setup Instructions


Follow steps #1 through #10 on initial installation first.

1. Connect the cable from the optional footpad to the jack labeled FOOTPAD located on the module.

2. Turn the switch on the base to the 'ON' position to enable FOOTPAD activation.

3. (Go to instruction 12 and continue setup)
Step on FOOTPAD to activate the scary sequence.

*Footpads are sold separately and can be purchased at www.tekkyaccessories.com

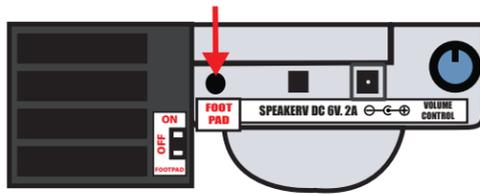


Optional External Speaker Setup Instructions

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled **SPEAKER JACK** located on top of the **BASE**.

2. Use volume knob on external speaker to control volume levels.

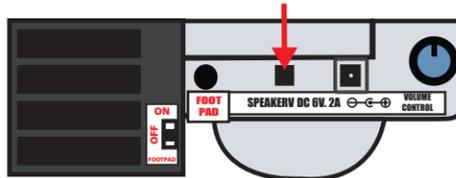


FOR FOOTPADS, ADAPTERS, AND ALL OTHER ACCESSORIES, PLEASE VISIT: www.tekkyaccessories.com

SMART PHONE SCAN SETUP VIDEO



BATTERY DIAGRAM

MODULE

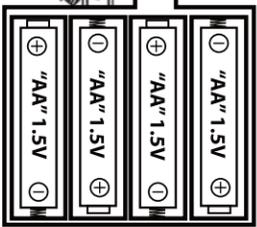

BATTERY INSTRUCTIONS AND CAUTIONS:

- Use only the batteries recommended.
- Remove batteries when not in use.
- Do NOT use rechargeable batteries.
- Be sure to insert the batteries with the correct polarity +/-.
- Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium.
- Always dispose of exhausted batteries properly.

**ADULT SUPERVISION IS RECOMMENDED
WHEN CHANGING BATTERIES.**

WARNING

**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY
FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION**



visit us at tekkydesign.com

Surface Washable Only.

ALL NEW MATERIALS : WOOD, METAL,
PLASTIC, FOAM, POLYESTER,
POLYESTER FIBER

Requires 4 'AA' Batteries (Not included)
or 6V 2A DC adapter (included)

BOOGIE MAN is a trademark of Tekky Toys.
Copyright © 2015 Tekky Toys.
All Rights Reserved.

MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go
to tekkydesign.com for assistance.