

Easy to follow Instructions

Parts List


Item #73521

PROP—BIRTH OF A CREATURE


Please read all instructions
Carefully before assembling.

Care & Storage Instructions:

Store product in its original package.

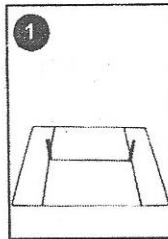


Metal Base

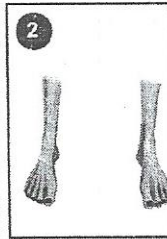


1 pair of feet




The body

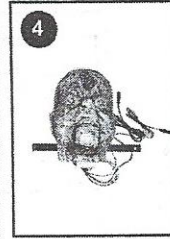


Movement structure
and baby's head

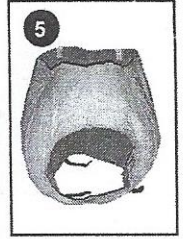


The body support

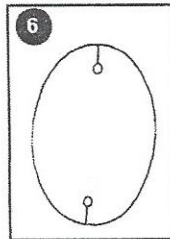


big hoop

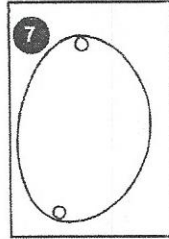


Small hoops

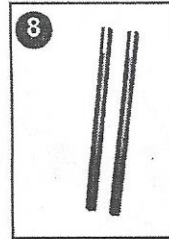

Connecting pipes

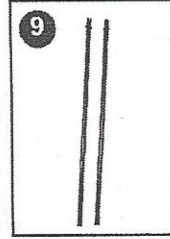


Bottom leg supports

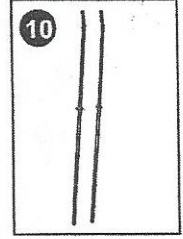


Upper leg supports


Finished Picture

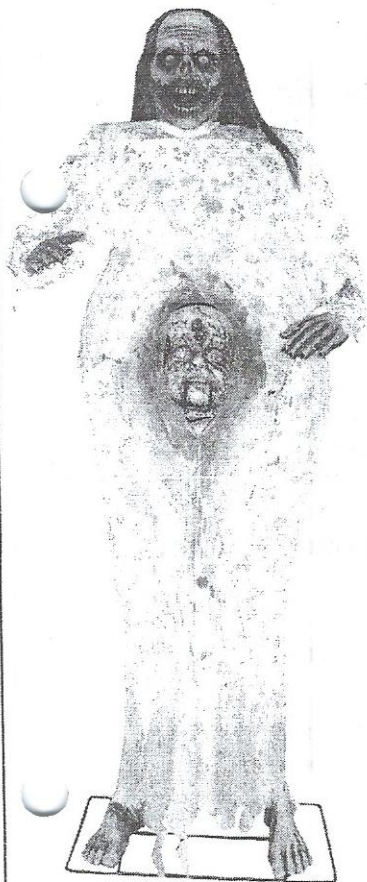


Assembly Instructions:

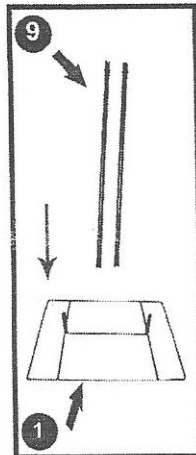


STEP 1
Insert the bottom leg
supports to the base.

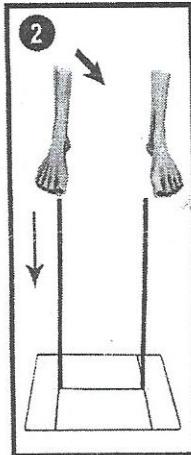


STEP 2
Insert left & right foot
through each leg
support.

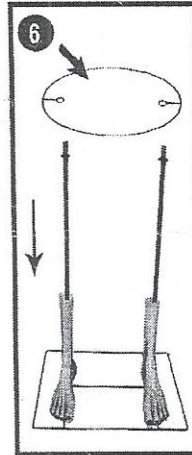


STEP 3
Insert the big hoop
into the bottom leg
supports

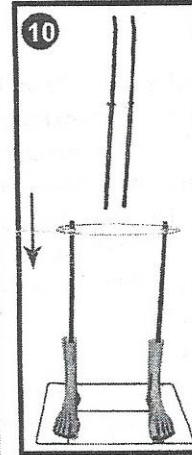


STEP 4
Insert the upper leg
supports into the
bottom leg supports.

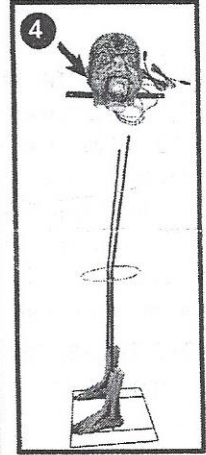


STEP 5
The baby's head is
supported by screws
in the upper leg
supports.

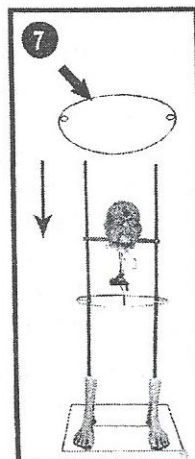


STEP 6
Insert the small hoop
into the upper leg
supports.

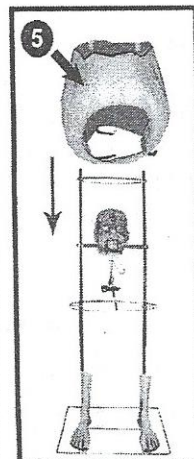


STEP 7
Insert the body support
into the upper leg
supports, and the
magic stick fixed.

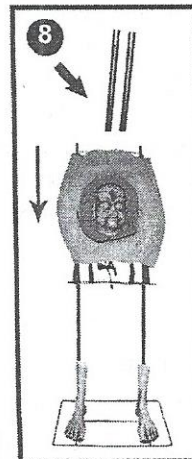

STEP 8
Insert the Connecting
pipes into the upper
leg supports.

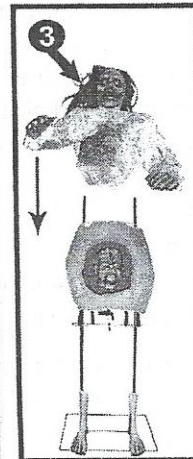

STEP 9
Install the body in
the body supports.

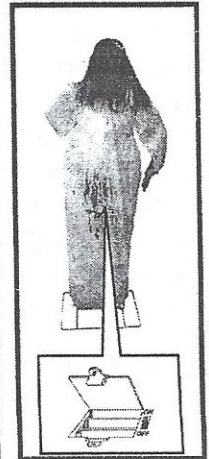

STEP 10
Install the battery
or connect the adapter
and turn on the
power switch.



Not intended for use
in play by children
under 14 years of age.



©2014
FORUM NOVELTIES INC.
Melville, NY 11747

MADE IN CHINA / FABRIQUE EN CHINE


Uses ordinary household current;

Adapter- Input: AC100V -240V

Output: 6V=1.6A

.For indoor use

.Voice activation

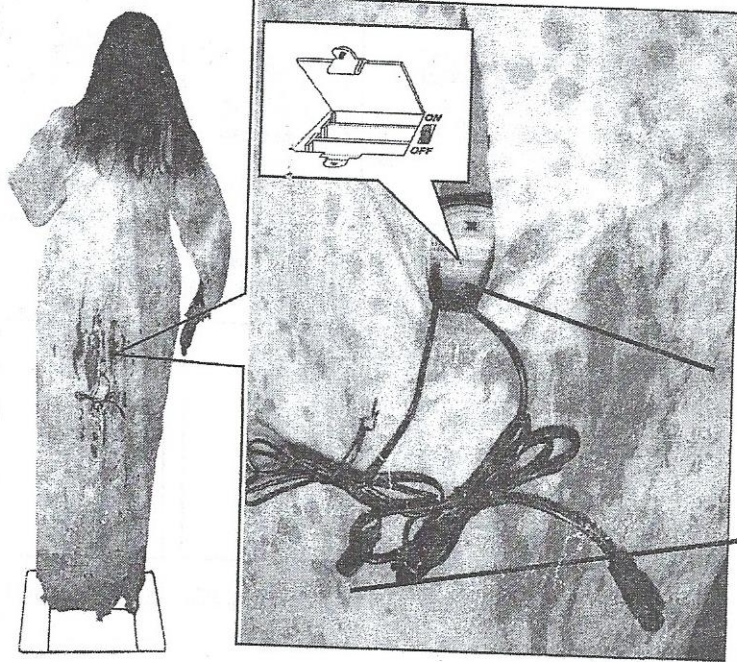

Animated Prop

Battery and AC adapter instructions

Battery installation and replacement.

For use with electric,

AC Adapter sold separately.



– Requires 3 “AA” Batteries (not included)

– Battery removal and replacement requires adult supervision

BATTERY WARNING: • Do NOT use rechargeable (nickel-cadmium) batteries • Do NOT recharge NON-rechargeable batteries • Do NOT mix old batteries with new or different types of batteries • Do NOT mix alkaline standard (carbon-zinc) batteries or rechargeable (nickel-cadmium) batteries • Do NOT place batteries near open flame or heat • Remove batteries from product before storing for an extended period of time • Only batteries of the same or equivalent type as recommended are to be used • Batteries are to be inserted with the correct polarity • Exhausted batteries are to be removed • The supply terminals are not to be short circuited • Retain the above information for future reference.

TO REPLACE BATTERIES:

1. Remove battery compartment screw. 2. Pull back battery compartment tab. 3. Lift battery compartment lid. 4. Remove old batteries & install new batteries with negative (–) ends touching springs.

BATTERY DISPOSAL- This product contains batteries and electronics that may be harmful to the environment; they should not be discarded with normal household waste but taken to your local collection centre for recycling. Please retain this information for future reference.

– Requiert 3 piles “AA” (non incluses)

– Présence d’un adulte requise pour retirer ou changer les piles

Avertisseur de batterie: • N’utilisez PAS de piles rechargeables (nickel-cadmium) • NE rechargez PAS des piles NON rechargeables • NE mélangez PAS les piles neuves et les piles usagées, ni différents types de piles • NE mélangez PAS les piles alcalines ordinaires (charbon-zinc) et les piles rechargeables (nickel-cadmium) • NE placez PAS les piles à proximité d’une flamme nue ou d’une source de chaleur • Retirez les piles de l’appareil si vous ne devez pas utiliser ce dernier pendant un certain temps • Utilisez uniquement des piles de même type ou les piles de type équivalent conseillées • Respectez la polarité en installant les piles • Retirez les piles usagées du jouet • Ne mettez pas les bornes d’alimentation en court-circuit • Conservez les informations ci-dessus en vue d’une consultation ultérieure.

Para reemplazar las pilas:

1. Retirez la vis del compartimento de las pilas. 2. Tirez sur le taquet du compartiment des piles. 3. Soulevez le couvercle du compartiment des piles. 4. Retirez les piles usagées et installez les piles neuves de façon à ce que les pôles négatifs (–) touchent les ressorts.

Batteries usagées - Ce produit contient des batteries et composants électroniques susceptibles de nuire à l’environnement; Ils ne doivent pas être jetés avec les déchets ménagers mais être portés aux centres de collecte locaux de recyclage. Veuillez conserver ces instructions à titre de référence ultérieure.