


CREEPY GREETER

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

PARTS




1. HEAD AND CLOTHES
2. METAL POLES
3. BASE

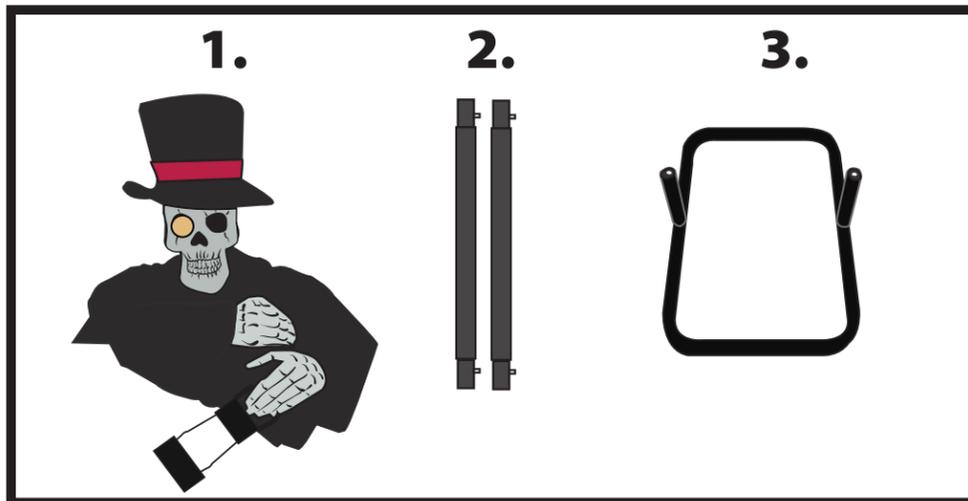

1. Insert **METAL POLES** into **BASE**.
Poles are secure when metal snap lock pins are locked in place.
2. Lower **HEAD AND CLOTHES** onto **METAL POLES** secured to **BASE**. **HEAD AND CLOTHES** are secured when metal snap lock pins are locked in place.
3. Connect 6V2A ADAPTER (sold separately) or insert 3 AA alkaline batteries (not included) into the battery compartment located under the **HEAD AND CLOTHES**.

Note: Turn switch on the battery compartment to **ON** to operate in Sound/Motion activation mode. Make a loud sound (clap) or move in front of item to activate. Leave switch in **OFF** position when not in use.

4. Pose Creepy Greeter for un-life like appearance!

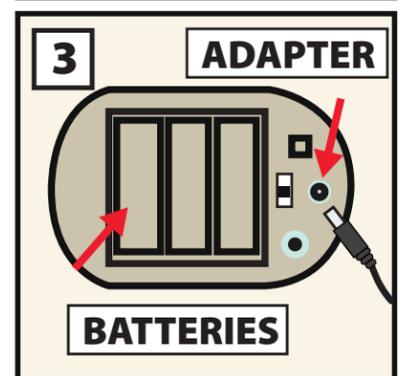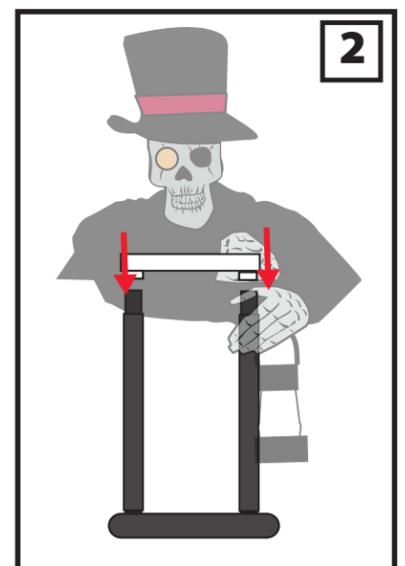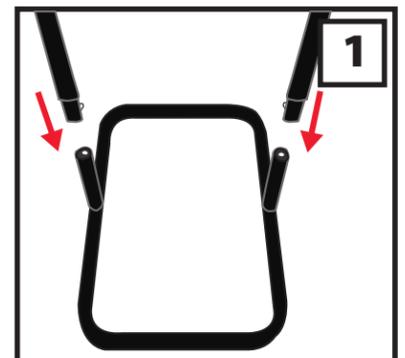


Optional Footpad Setup

Follow steps #1 through 3 on initial installation first.

1. Connect the cable from the optional footpad to the FOOTPAD jack located on the battery compartment.
2. Turn the switch on the battery compartment into the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence. (go to instruction #4 to continue setup)

*Footpads are sold separately and can be purchased at www.tekkytoys.com

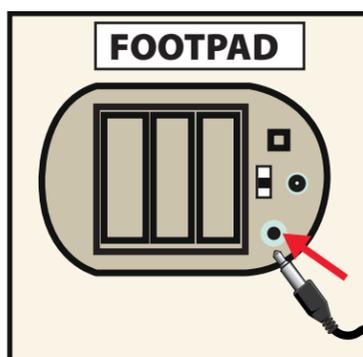

SMART PHONE SCAN SETUP VIDEO



visit us at tekkytoys.com

Requires 3 'AA' Batteries or optional DC adapter (6V 2A) sold separately.

Surface washable only.

ALL NEW MATERIALS:
PLASTIC, POLYESTER,
POLYESTER FIBER

CREEPY GREETER

is a trademark of Tekky Toys.

Copyright © 2014 Tekky Toys.

All Rights Reserved.

Made in China

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkytoys.com for assistance.

Tekky Toys Hours of Operation: Monday - Friday 9am to 5pm CST

T: 708-478-8424 a: support@tekkytoys.com

visit us: tekkytoys.com