



**TEKKY**

# **DROP DOWN PORTRAIT™**

**FLICKERING LED CANDLES!  
STARTLING SURPRISE!  
LIGHTS, SOUNDS...ACTION!**

## **SOUND AND MOTION ACTIVATED OPERATING INSTRUCTIONS**

**KEEP ALL PLASTIC AND WIRE PARTS  
AWAY FROM CHILDREN**

1. Insert 3 brand new "AA" alkaline batteries into the battery compartment located on back of DROP DOWN PORTRAIT™.
2. Place switch to the "ON" position.
3. Make a loud sound (clap) or wave hand in front of item to activate scary sequence!

**NOTE:** Leave switch in the "OFF" position when not in use.

**SURFACE WASHABLE ONLY.**

All new materials: plastic.

Item #50011.

DROP DOWN PORTRAIT™ is a trademark of Tekky.

Copyright © 2020 Tekky. All Rights Reserved.

Manufactured for:

Tekky, Orland Park, IL 60467 USA

MADE IN CHINA

**TekkyDesign.com**


**3AA**

**Batteries  
Required\***

\*not included

## **BATTERY INSTRUCTIONS AND CAUTIONS**

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

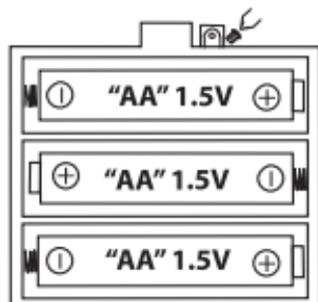

**WARNING! CHOKING HAZARD—Small Parts.**

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.