


ELECTRIFIED MANIAC WITH ELECTRIC BOX

INSTALLATION AND OPERATING INSTRUCTIONS











KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

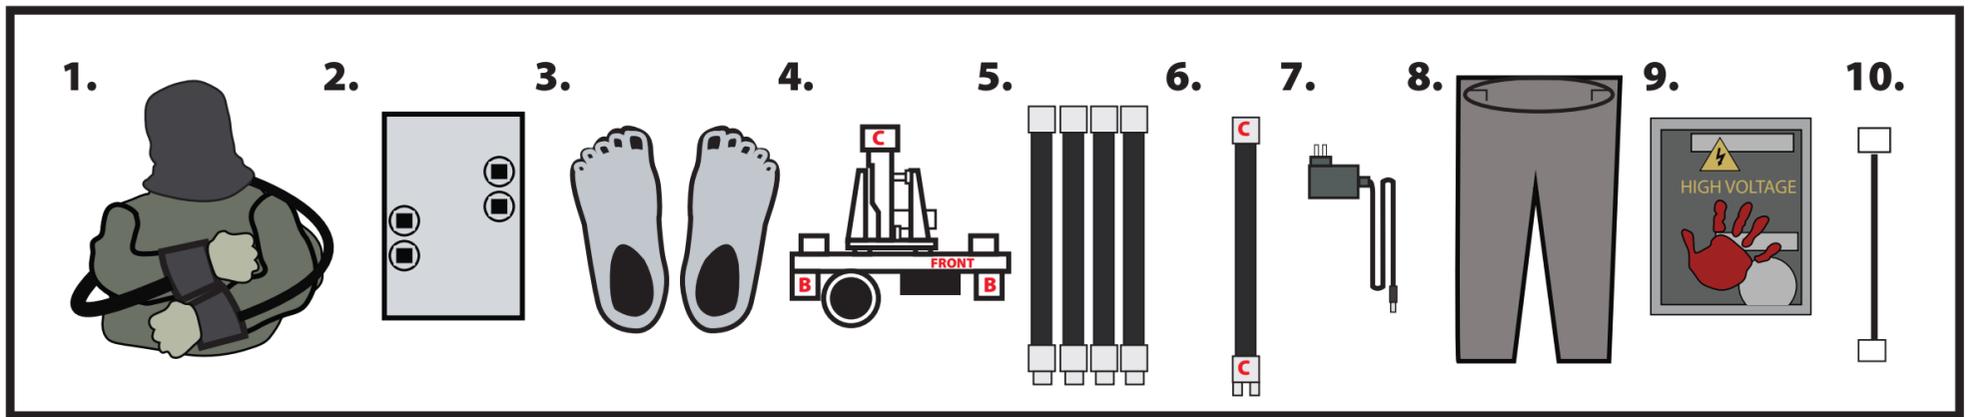

PARTS

1. UPPER BODY
2. WOODEN BASE
3. FEET
4. MODULE
5. TELESCOPING LEG POLES
6. CENTER POLE
7. ADAPTER
8. PANTS WITH BRACKET
9. ELECTRIC BOX
10. MIT CABLE

- 1.) Snap lock four telescoping **LEG POLES** to the **WOODEN BASE**. (Match **A TO A**) Press until it clicks into place.
- 2.) Holding the four **TELESCOPING LEG POLES** near the base, extend the poles upwards with your other hand until all four poles are locked into place. The poles are fully extended when you hear two audible clicks.
- 3.) Slide **FEET** over the **LEG POLES** connected to the **WOODEN BASE**.
- 4.) Slide **PANTS WITH BRACKET** over **LEG POLES** connected to the **WOODEN BASE**.
- 5.) Snap lock the **MODULE** to **LEG POLES**. (Match **B to B**)
Note: **MODULE** labeled *FRONT* should be pointing same way as the front of the **FEET**.
- 6.) Pull **PANTS WITH BRACKET** up and attach to holes on either side of the **MODULE** inserting prongs facing down.
- 7.) Snap lock **CENTER POLE** to the **UPPER BODY** (Match **C to C**)
- 8.) Snap lock **CENTER POLE** to the **MODULE** (Match **C to C**)
- 9.) Connect cable located under clothes to cable coming from **MODULE**. (Match **D to D**)
- 10.) Take the rubber band with metal fastener connected to the cuff on hand, and push the metal fastener through the hole on the other cuff on hand to lock the hands together.

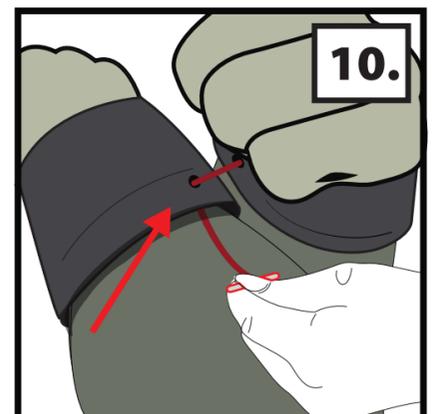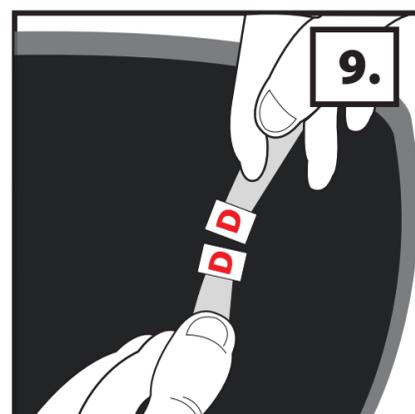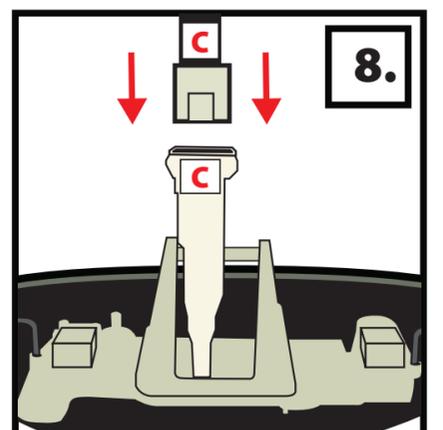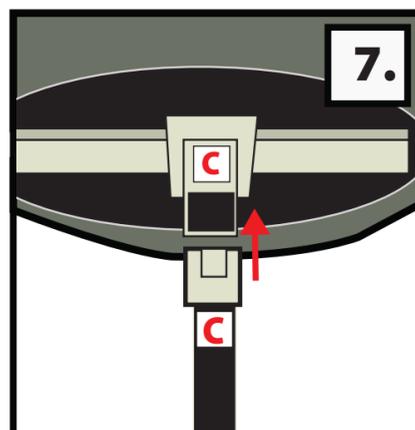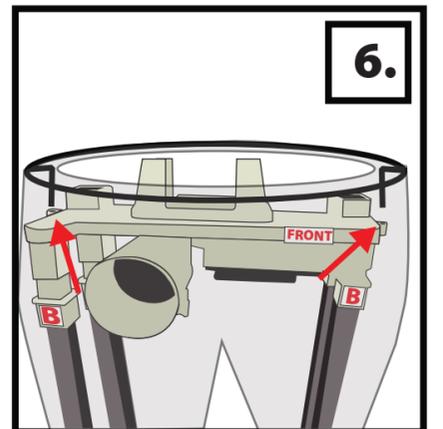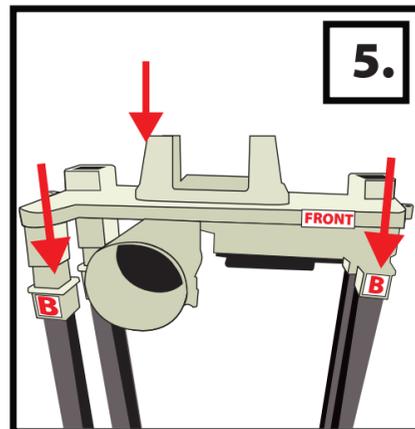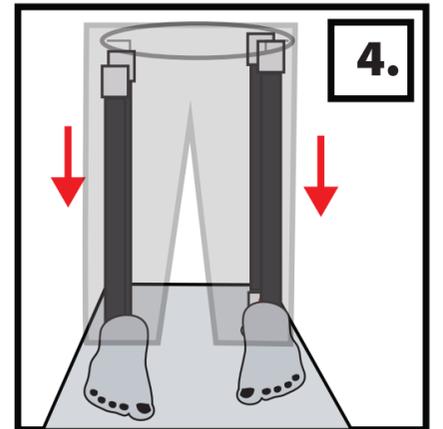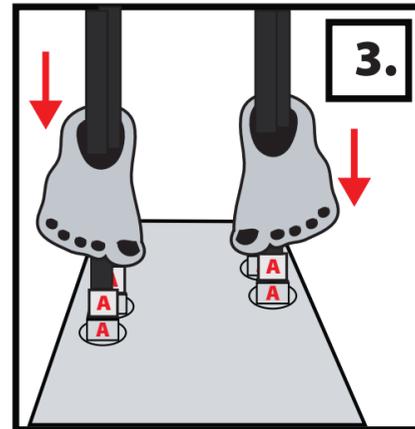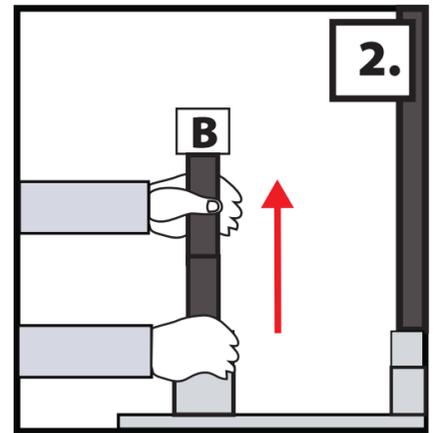
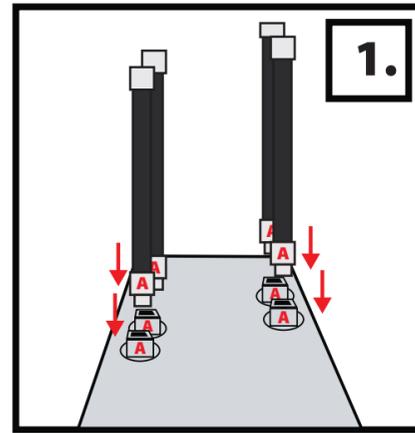


- 11) Connect 6V 2A **ADAPTER** (included) or insert 4 AA alkaline batteries (not included) into the battery compartment. (See illustration 11a)

Note: Turn the switch to the **ON** position to operate in Sound or Motion activation mode. Make a loud sound (clap), or move in front of the item to activate. Turn the switch to **MOTION** to operate in Motion activation only. Turn item **OFF** when not in use.

- 12.) Pull the shirt down and adjust arms for "un"life-like appearance.


- 13.) Adjust sound with **VOLUME CONTROL KNOB** located on the **MODULE** as needed.

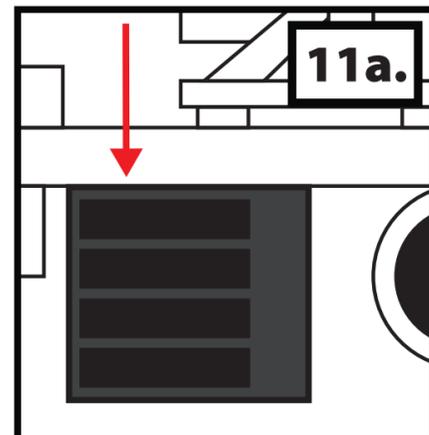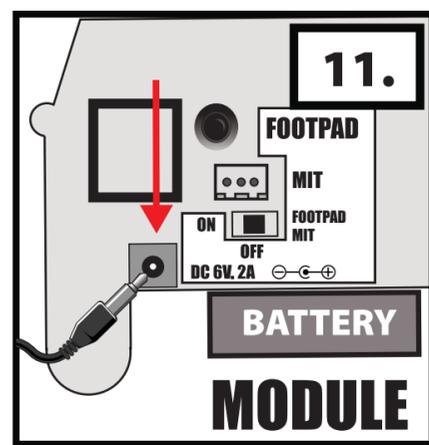

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.

**MULTIPLE ITEM TRIGGER SET-UP
FOR USE WITH ELECTRIC BOX**

- 1.) Hang **ELECTRIC BOX** in desired location.
- 2.) Locate **MIT CABLE** and insert cable into the MIT jack located on Electrified Maniac's **MODULE** and MIT jack on **ELECTRIC BOX**.
- 3.) Switch Electrified Maniac to Footpad / MIT mode to trigger Electrified Maniac using **ELECTRIC BOX**. Turn item off when not in use.
- 4.) Turn switch on **ELECTRIC BOX** to ON position.
- 5.) Press the button on top of the **ELECTRIC BOX** to activate **ELECTRIC BOX** and automatically activate Electrified Maniac.

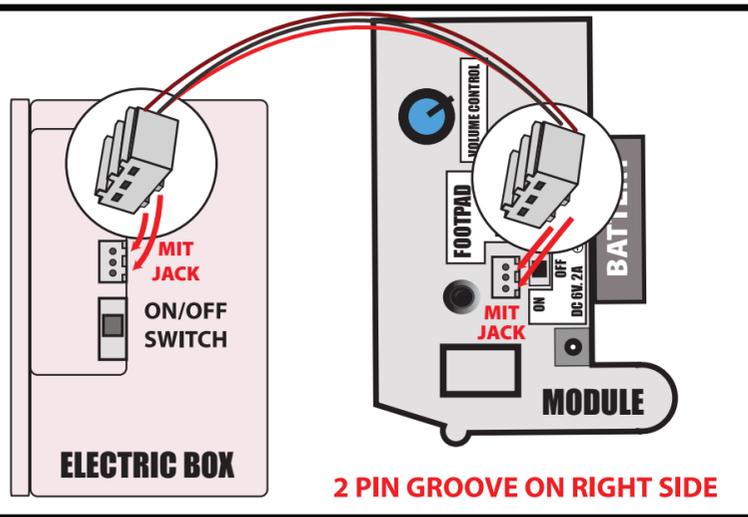

Optional Footpad Setup

Follow steps #1 through #11 on initial installation first.

1. Connect the cable from the optional footpad to the jack labeled FOOTPAD located on the module.
2. Turn the switch on the module to the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence. (go to instruction #12 to continue setup)

*Footpads are sold separately and can be purchased at www.tekkytoys.com

**SMART PHONE SCAN
SETUP VIDEO**



visit us at tekkytoys.com

Surface Washable Only.
ALL NEW MATERIALS:
Metal, Wood, Plastic, Polyester,
Polyester Fiber, Foam

Electrified Maniac:
Requires 4 'AA' Batteries (Not included)
or 6V 2A DC adapter (included)
ELECTRIFIED MANIAC is a trademark
of Tekky Toys. Copyright © 2014 Tekky Toys.
All Rights Reserved. **MADE IN CHINA**

Electric Box:
Requires 3 'AA' Batteries (Not included)
ELECTRIC BOX is a trademark
of Tekky Toys. Copyright © 2014 Tekky Toys.
All Rights Reserved. **MADE IN CHINA**

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to
www.tekkytoys.com for assistance.

Tekky Toys Hours of Operation: Monday - Friday 9am to 5pm CST
T: 708-478-8424 E: support@tekkytoys.com
visit us: tekkytoys.com

