

EASY SETUP

- 1. REMOVE ITEM FROM PACKAGING. THROW AWAY ANY EXCESS PACKING MATERIALS THAT MAY HAVE BEEN USED TO PROTECT THE ITEM DURING SHIPPING.
- 2. STRAIGHTEN AND POSITION WITCH'S HAT TO YOUR LIKING.
- 3. LOCATE BATTERY COMPARTMENT WHICH IS LOCATED INSIDE THE CAULDRON. LIFT UP FABRIC HOLE ON THE BACK OF THE CAULDRON TO EXPOSE BASE. INSERT FRESH NEW ALKALINE BATTERIES INTO BATTERY COMPARTMENT ON BASE, OR CONNECT DC ADAPTER (SEE SPECS BELOW).
- 4. TURN SWITCH ON TOP OF BASE TO 'ON' TO OPERATE IN SOUND ACTIVATION MODE. CLAP OR MAKE A LOUD SOUND TO ACTIVATE.

Optional Footpad Setup

Follow initial installation instructions first.

- 1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on the base.
- 2. Place the switch on the base into the 'FOOTPAD' position to enable FOOTPAD activation.
- 3. Step on FOOTPAD to activate the scary sequence.
- *footpads are sold separately and can be purchased at **www.tekkytoys.com**

FOR INDOOR OR SHELTERED OUTDOOR USE

Outdoor Warnings:

For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32° F). Tekky Toys recommends using fresh alkaline batteries for best operating performance.

Warning: This item is not a toy. For Decoration only. Small parts, choking hazard. This product is intended for use by persons 14 years of age and older. Not intended for use by children 13 years of age and younger.

ALL NEW MATERIALS PLASTIC, POLYESTER

Surface Washable only.

Evil Cauldron Witch™ is a trademark of Tekky Toys. Copyright © 2008 Tekky Toys. All Rights Reserved MADE IN CHINA

Powered by Battery (4"AA") or 6V 2A DC Adapter (optional) Optional footpad and/or DC Adapter are sold separately and can be purchased at www.tekkytoys.com.

Requires 4"AA" Batteries

Evil Cauldron WitchTM Item #56524





