


# SET UP AND OPERATING INSTRUCTIONS FOR M36850 SITTING REGAN

## THE EXORCIST

TM and © Warner Bros. Entertainment, Inc. (s13)

REMEMBER: WHEN POSING HER ARMS, BRACE THE SHOULDER WITH ONE HAND.

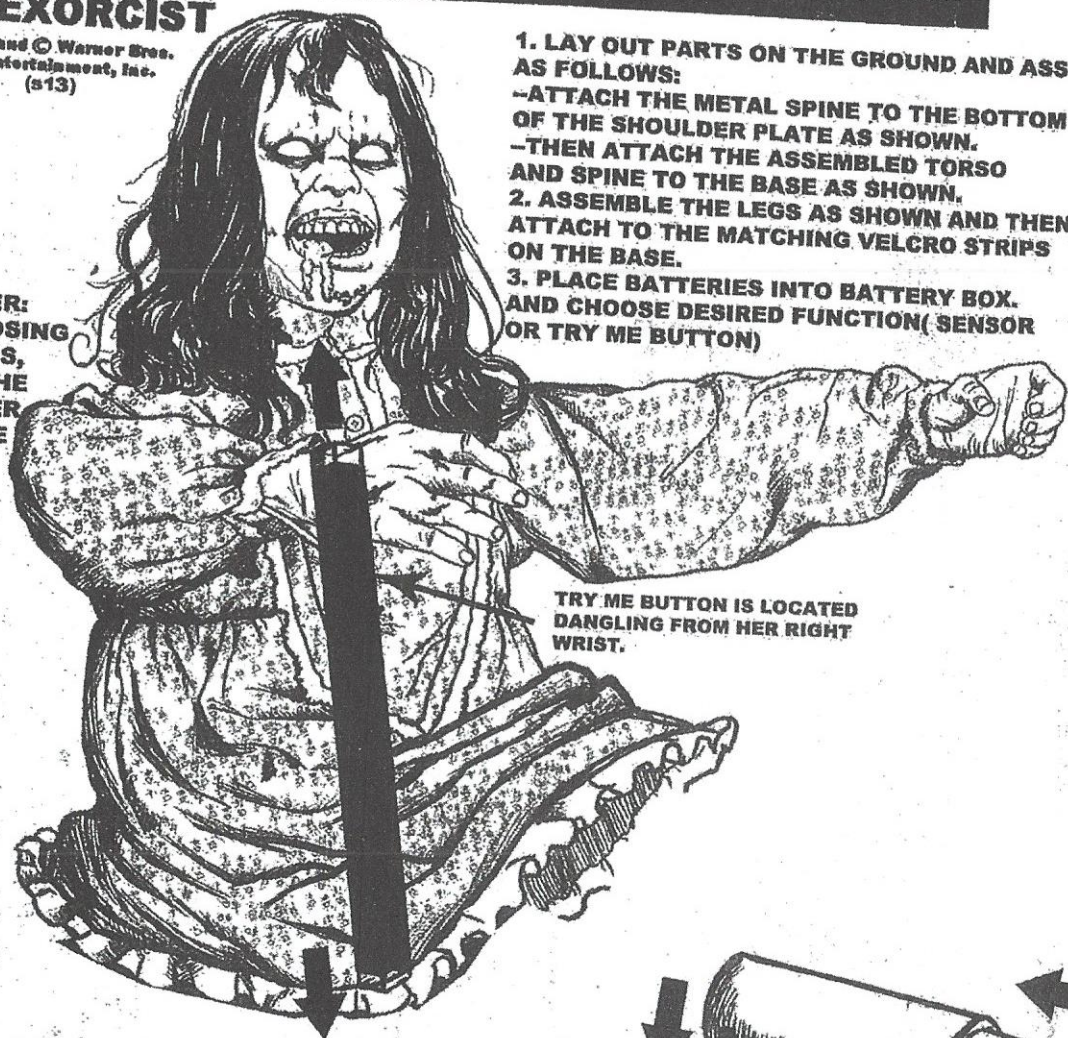

1. LAY OUT PARTS ON THE GROUND AND ASSEMBLE AS FOLLOWS:

-ATTACH THE METAL SPINE TO THE BOTTOM OF THE SHOULDER PLATE AS SHOWN.


-THEN ATTACH THE ASSEMBLED TORSO AND SPINE TO THE BASE AS SHOWN.

2. ASSEMBLE THE LEGS AS SHOWN AND THEN ATTACH TO THE MATCHING VELCRO STRIPS ON THE BASE.

3. PLACE BATTERIES INTO BATTERY BOX.

AND CHOOSE DESIRED FUNCTION( SENSOR OR TRY ME BUTTON)

TRY ME BUTTON IS LOCATED DANGLING FROM HER RIGHT WRIST.

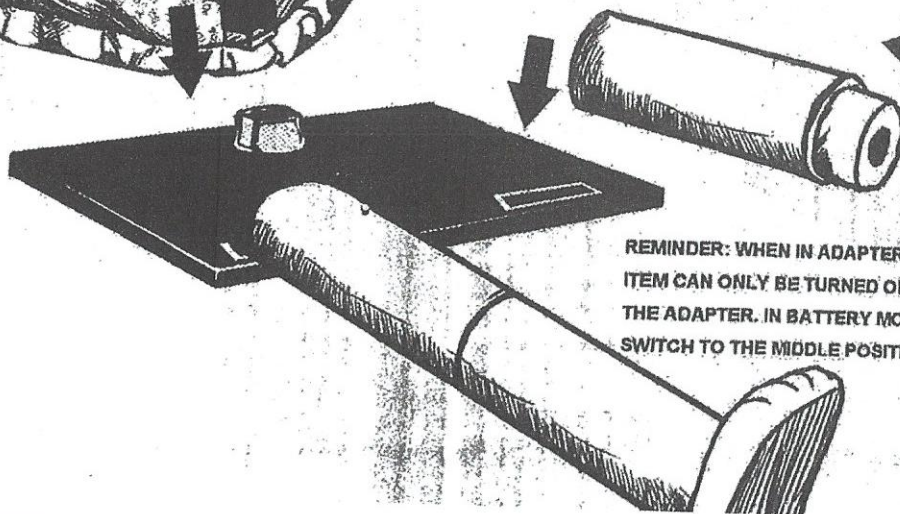


REMEMBER: WHEN IN ADAPTER MODE, THE ITEM CAN ONLY BE TURNED OFF BY UNPLUGGING THE ADAPTER. IN BATTERY MODE, SLIDE THE SWITCH TO THE MIDDLE POSITION TO TURN OFF.

Battery installation and replacement must be done by adult only.

- Do NOT use rechargeable (nickel-cadmium) batteries
- Do NOT recharge NON-rechargeable batteries
- Do NOT mix old batteries with new or different types of batteries
- Do NOT mix alkaline standard (carbon-zinc) batteries or rechargeable (nickel-cadmium) batteries
- Do NOT place batteries near open flame or heat
- Remove batteries from product before storing for an extended period of time
- Only batteries of the same or equivalent type as recommended are to be used
- Batteries are to be inserted with the correct polarity
- Exhausted batteries are to be removed from the toy
- The supply terminals are not to be short circuited
- **DISPOSAL** - This product contains batteries and electronics that may be harmful to the environment; they should not be discarded with normal household waste but taken to your local collection centre for recycling.
- Please retain this information for future reference.

SENSOR

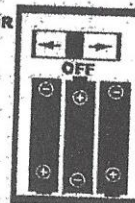

TRY ME

THIS ITEM REQUIRES 3 AA BATTERIES (BATTERIES NOT INCLUDED) AND IT COMES WITH AN ADAPTER AS WELL.



REMEMBER: ANY BLANKET PLACED ON THE ITEM SHOULD ONLY REACH UP TO BELOW HER BELLY.

NOTE: IN CASE ADAPTER IS LOST, PLEASE USE ONLY 4.5V 1.6A ADAPTER REPLACEMENT