



CHAPTER TWO™

IT CHAPTER 2 and all related characters and elements © &™
Warner Bros. Entertainment Inc. WB SHIELD and NL LOGO: © &™
WBEL. (s20)

FLYING BALLOON

SETTING UP YOUR FLYING BALLOON

For the best performance, we highly recommend keeping the cable perfectly horizontal (illus. A). Any incline or decline in the cable may cause the FLYING BALLOON to run poorly or stop!

- Be sure cable is pulled as tight as possible!!

THE STRING MUST BE EXTREMELY TIGHT FOR ITEM TO FUNCTION OPTIMALLY.

- Refer to illustrations B and C above for tips on fastening cable ends so there is no slack in the line.
- Install cable away from walkways and high enough to avoid contact with people walking. It is recommended to have a barrier below the assembly to deter people from walking near the FLYING BALLOON cable. Location needs to be inaccessible to pedestrians, bicyclists, vehicles or other traffic.

BATTERY INSTALLATION

1. Gently unscrew the bottom of the balloon counter-clockwise exposing the battery cover. **See Fig. 1**
2. Remove the battery cover and insert 3 AA batteries. (not included) **See Fig. 2**
3. Replace the bottom of the balloon by screwing it back on, in a clock-wise motion.

OPERATING INSTRUCTIONS

A 3-way switch is located near the battery compartment on the bottom of the BALLOON. FLYING BALLOON has 3 operating modes: ON (NO sound) / OFF / ON (with creepy sound)


FLYING BALLOON is sound activated. Clap your hands or make a loud noise to begin the “flying” action. FLYING BALLOON will travel back and forth along the cable, automatically reversing directions when reaching the cable end (or cable clips).

OPERATING TIPS


- Keep the cable free of debris, leaves, twigs, ice, etc.
- Keep the FLYING BALLOON away from tree branches or other obstructions which may hinder movement.
- Position the two clips along cable to STOP the FLYING BALLOON where desired (illus D).

OPERATING YOUR FLYING BALLOON OUTDOORS


For best overall performance, we recommend you bring your FLYING BALLOON indoors during adverse weather conditions (extreme cold, strong winds and/or rain). FLYING BALLOON is intended for use outdoors in sheltered areas and in temperatures above freezing (32°F). We recommend using alkaline batteries for best operating performance.

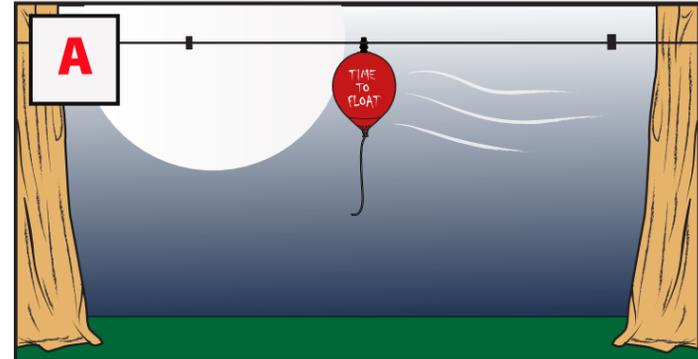


KEEP CABLE TIGHT AND HORIZONTAL AS POSSIBLE

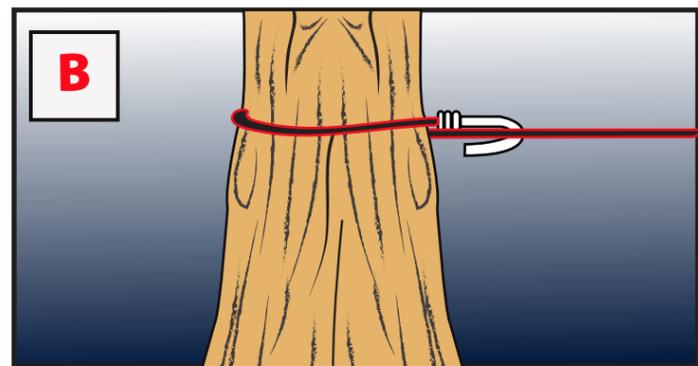


HOOK THE CABLE AROUND A TREE

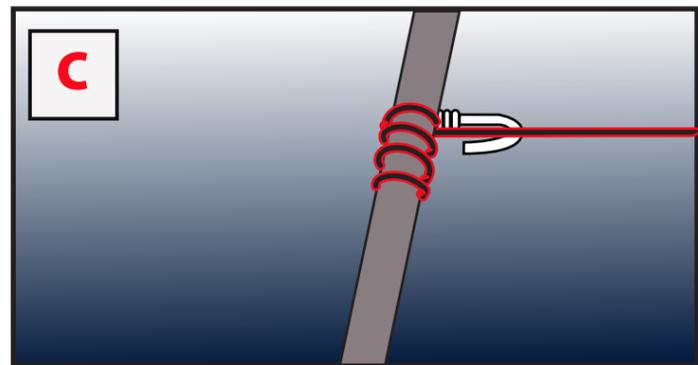

WIND CABLE AROUND OBJECT AND TIGHTEN SECURING THE HOOK.

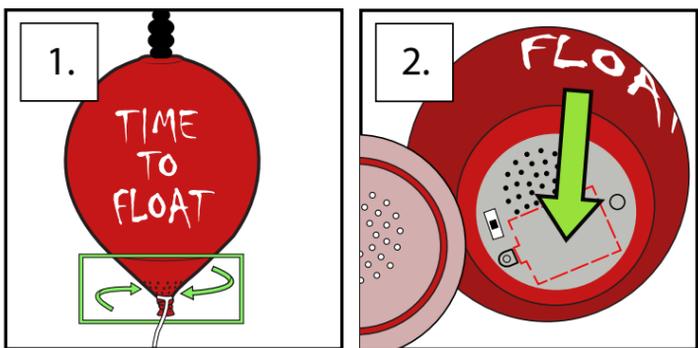

THE BALLOON REVERSES DIRECTION WHEN CONTACTING THE ADJUSTABLE CABLE CLIPS

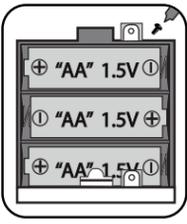

BATTERY INSTRUCTIONS AND CAUTIONS
 Battery installation and removal should be performed by an adult.
 Remove batteries when not in use.
 Use only batteries recommended in the instructions.
 Do not mix new and used batteries.
 Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
 Be mindful to insert batteries with the correct polarity (+/-) as indicated.
 Remove all exhausted batteries.
 Rechargeable batteries are only to be charged under adult supervision.
 Rechargeable batteries are to be removed from the item before being charged.
 Non-rechargeable batteries are not to be recharged.
 The supply terminals are not to be short-circuited.
 Always dispose of exhausted batteries properly.
 Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.
LONG CORD STRANGULATION HAZARD. USE WITH ADULT SUPERVISION.
KEEP AWAY FROM FLAMES AND DIRECT HEAT SOURCES.



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.

IT CHAPTER 2 and all related characters and elements © &™ Warner Bros. Entertainment Inc. WB SHIELD and NL LOGO: © &™ WBEL. (s20)
U.S.A. PATENT NO. 6,796,871

Requires 3 AA batteries (not included)
ALL NEW MATERIALS: PLASTIC, FABRIC
Surface washable only.
MADE IN CHINA