


# FOGGING PUMPKIN TOTEM

## INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

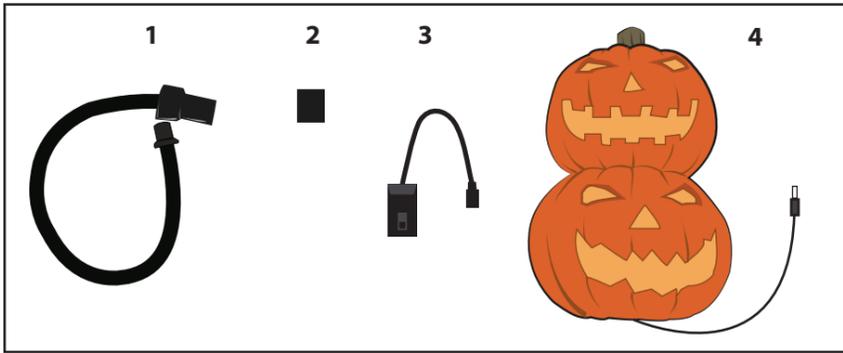



1. FOG TUBE
2. ADAPTER
3. SWITCH BOX
4. MGO PUMPKIN



**\*\*MAKE SURE MGO PUMPKIN IS SET TO THE "OFF" POSITION AND YOUR FOG MACHINE IS NOT TURNED ON\*\***


**\*\* 400 WATT FOG MACHINE RECOMMENDED\*\***

1. Plug cord located on **MGO PUMPKIN** into the **SWITCH BOX**. (MATCH A TO A)
2. Plug fog tube into **MGO PUMPKIN** (MATCH B TO B)
3. Plug **FOG TUBE (LABELED C)** around the nozzle on your fog machine. (fog machine not included and must be purchased separately.)

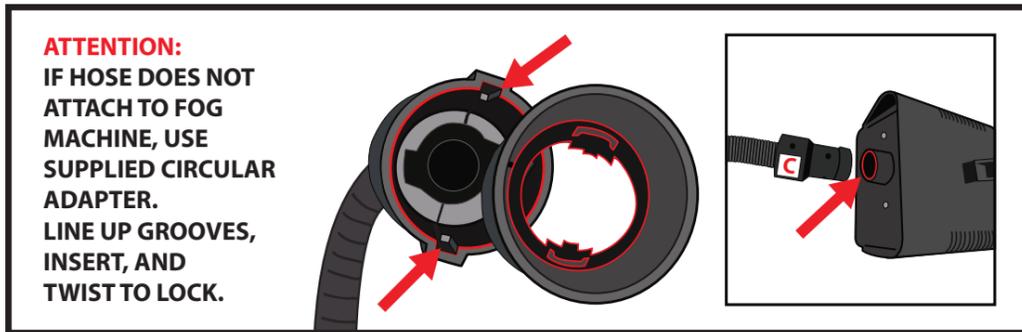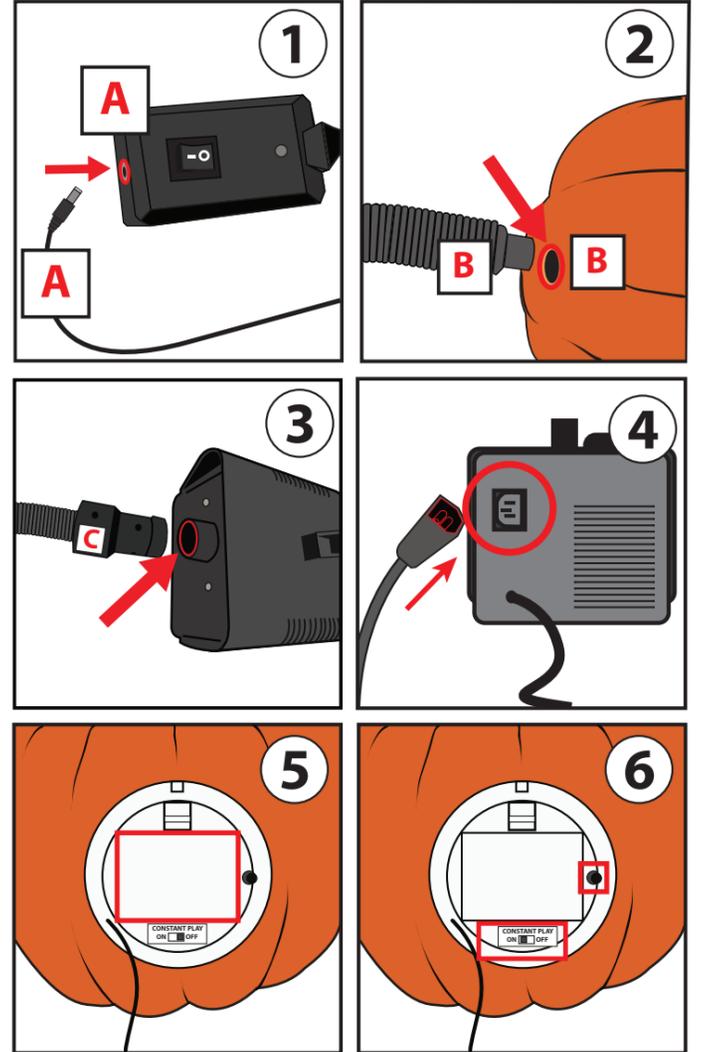

**ATTENTION:**  
IF HOSE DOES NOT ATTACH TO FOG MACHINE, USE SUPPLIED CIRCULAR ADAPTER. LINE UP GROOVES, INSERT, AND TWIST TO LOCK.

4. Plug **SWITCH BOX** into the fog machine's control input.
5. Insert 3 AA alkaline batteries (not included) into the battery compartment located on the back of the **MGO PUMPKIN**
6. Turn the switch to **ON** to operate in Sound or Motion activation mode. Adjust volume control as needed.
7. Make sure your fog machine is heated up properly, then depress the switch to "I" position on the **SWITCH BOX** to activate. The LED on the **SWITCH BOX** will light up when the fog machine is heated up and ready to fog.  
If fog does not appear after the item is activated, make sure the switch is in the correct position and the LED light is illuminated.
8. With the switch in "ON" position, make a loud sound (clap), or move in front of the item to activate. Item will function with 1.5 minute breaks between cycles, or clap during the 1.5 minute break to instantly start the item playing again. Move the switch to the middle "CONSTANT PLAY" position for non stop item activation. Leave switch on MGO PUMPKIN in OFF position when not in use.

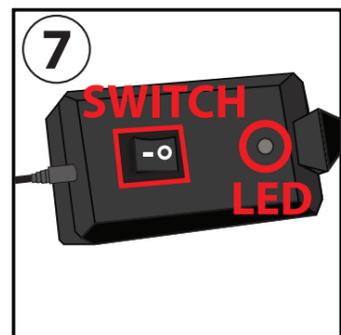

**TEKKY**

visit us at [tekkydesign.com](http://tekkydesign.com)  
Requires 3 'AA' Batteries (not included)

ALL NEW MATERIALS:  
PLASTIC, WIRE, MGO  
Surface washable only.

FOGGING PUMPKIN is a trademark of Tekky Toys.  
Copyright © 2015 Tekky Toys.  
All Rights Reserved.  
MADE IN CHINA

### Outdoor Warnings:


For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather conditions (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32° F). Tekky Toys recommends using heavy-duty, alkaline batteries for best operating performance.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.  
This product is intended for use by persons 15 years of age and older.  
Not intended for use by children ages 14 years and younger.

**WARNING**  
**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.**  
**STAY CLEAR OF ITEM WHILE OPERATING.**  
**DO NOT PLACE ITEM ON UNEVEN GROUND.**  
**DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION**  
**\*\* FOR INDOOR USE ONLY\*\***



**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go to [www.tekkydesign.com](http://www.tekkydesign.com) for assistance.

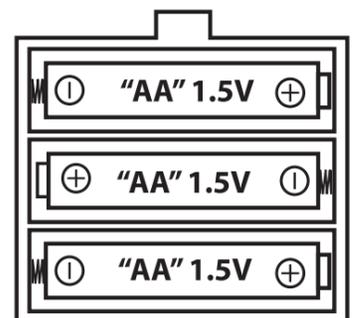

### Battery Instructions and Cautions

- Use only the batteries recommended by the manufacturer.
  - Remove batteries when not in use.
  - Do NOT use rechargeable batteries.
  - Be sure to insert the batteries with the correct polarity +/-.
  - Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium or rechargeable.
  - Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.
- ADULT SUPERVISION RECOMMENDED WHEN CHANGING BATTERIES.