



FLYING GHOST™

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

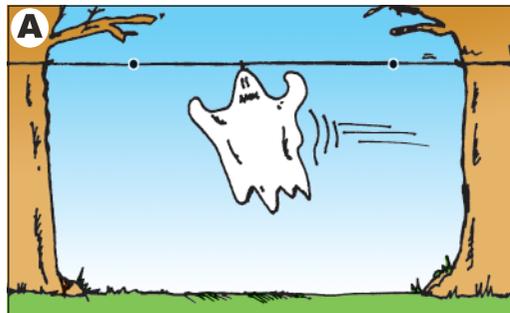


Keep cable as tight and horizontal as possible.

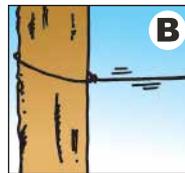

Hook cable around tree.

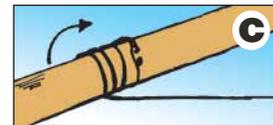

 Wind cable around object. Tighten cable before winding.



Ghost will STOP at cable clip and reverse direction. One clip on each end. Top of Ghost module. Position clips along cable to stop ghost where desired.

SETTING UP YOUR FLYING GHOST

For the best performance, we highly recommend keeping the cable **perfectly horizontal** (illus. A). **Any incline or decline in the cable may cause the Flying Ghost to run poorly or stop!**

- Be sure cable is pulled **as tight as possible!!**
- Refer to illustrations **B** and **C** above for tips on fastening cable ends so there is **no slack in the line**.

OPERATING INSTRUCTIONS

A 3-way switch is located near the battery compartment at the bottom of the plastic module. The Flying Ghost has 3 operating modes:

OFF, **ON** (with creepy sounds), and  (ON with NO sounds).


Flying Ghost is sound activated. Clap your hands or make a loud noise to begin the 'flying' action. The ghost will travel back and forth along the cable, automatically reversing directions when reaching the cable end (or cable clips).

OPERATING TIPS

- For the best (and scariest) arm movement, bend the wire arms in a "U" shape, as shown on the side of this carton.
- Keep the cable free of debris, leaves, twigs, ice, etc.
- Keep ghost away from tree branches or other obstructions, which may hinder movement.
- Position the two clips along cable to STOP the ghost where desired (illus. D).

OPERATING YOUR GHOST OUTDOORS

For best overall performance, we recommend you bring your Flying Ghost™ indoors during adverse weather conditions (extreme cold, strong winds and/or rain). Flying Ghost™ is intended for use outdoors in sheltered areas and in temperatures above freezing (32°F). Tekky Toys recommends using heavy-duty, alkaline batteries for best operating performance.

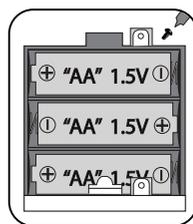

BATTERY INSTRUCTIONS AND CAUTIONS:

- Use only the batteries recommended.
- Remove batteries when not in use.
- Do NOT use rechargeable batteries.
- Be sure to insert the batteries with the correct polarity +/-.
- Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium.
- Always dispose of exhausted batteries properly.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

⚠ WARNING: Strangulation Risk! Keep cable away from children. This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

ALL NEW MATERIALS:
POLYESTER, POLYESTER FIBER FILL



Surface washable only.

Requires 3 "AA" batteries, **NOT** included.

SCARY FLYING GHOST is a trademark of Tekky Toys.

Copyright © 2004 Tekky Toys. All Rights reserved.

Protected by U.S. and International Patents.



TEKKY

www.tekkytoys.com



DO NOT RETURN THIS ITEM TO THE STORE!

If experiencing technical difficulties, please go to www.tekkytoys.com for assistance.