

OPERATION INSTRUCTIONS:


1. Plug the Adapter into a standard power outlet and adjust the settings on the Function Control Box as desired.

2. Settings:

Sensor: This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.


O/OFF/Try Me: This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad. The item will operate for one audio cycle with each Try Me activation. Refer to Assembly Instructions Step3 for further details.

I / ON : This switch mode will continuously operate the lights, sound, and animation of the item.

 : Raise or lower the volume using the volume control turn dial, turn and click all the way down to turn the volume off.

FOG MACHINE ADAPTER INSTRUCTION:

- Use the (W) Fog Machine Adapter only with SVI 400 Watt Fog Machine (Not Included).
- Connect the 3-prong plug of the (W) Fog Machine Adapter into the jack at the back of the Fog Machine.
- Connect the power cord of the Fog Machine into a power outlet.
- Turn the power switch of the Fog Machine to the "ON" position.
- After the Fog Machine warms up (approx. 5 minutes), the light on the (W) Fog Machine Adapter will turn on.
- Press the "ON" switch, The fog machine will be ready to produce fog.
- Press the "OFF" switch, the fog machine will produce fog only when the witch activates.
- Be sure to follow all safety precautions included with the Fog Machine during operation.

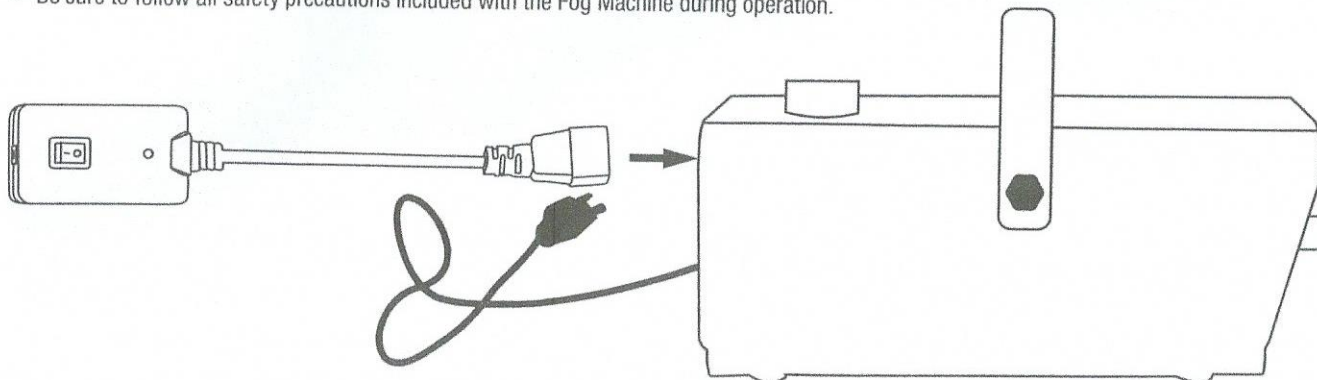

IMPORTANT SAFETY INSTRUCTIONS

Read Fog Machine instructions located in Fog Machine separated carton before operating.

Open the package and check for obvious damage during shipping. If found, discontinue use and contact the distributor.

