 
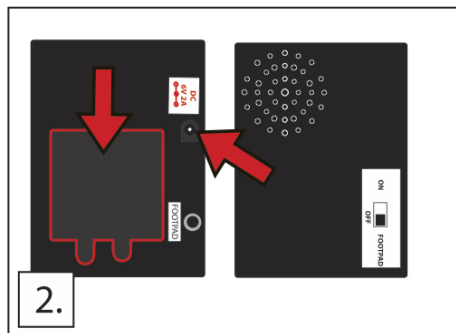 
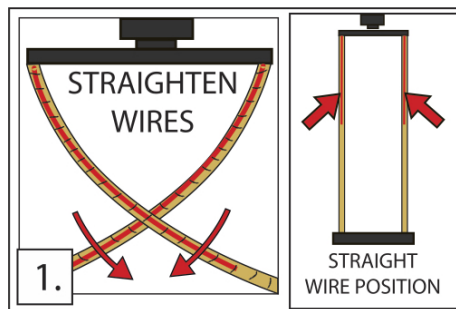 


GHOST SWING™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

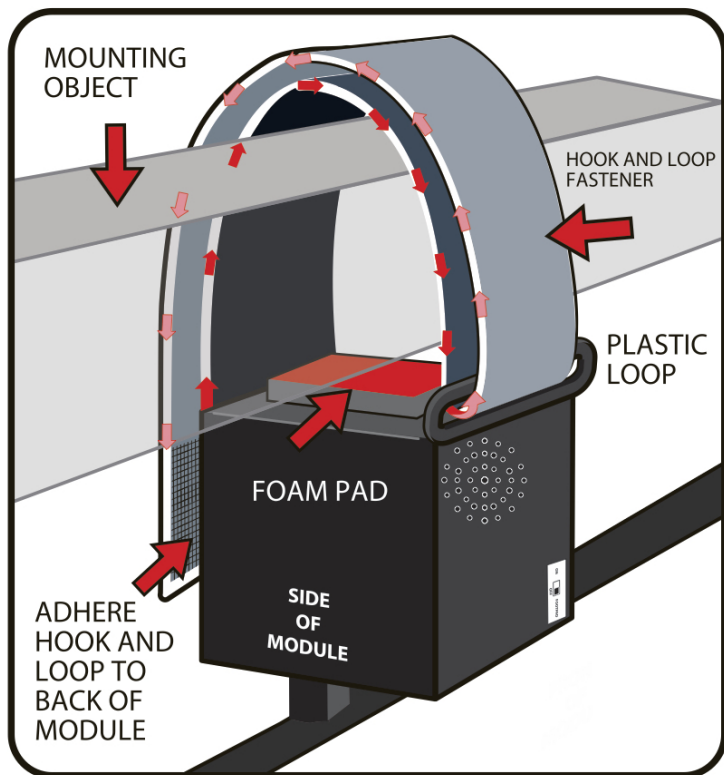

1. Unfold metal wires attached to the top of both ropes. See Illustration 1.
2. Connect 6V2A ADAPTER (not included) or insert 4 AA alkaline batteries into the battery compartment located on the MODULE.
3. Place foam piece on top of module against the object you are mounting to. (See MOUNTING OBJECT)
4. Wrap HOOK AND LOOP FASTENER over the top of the MOUNTING OBJECT, down through the PLASTIC LOOP in front of the MODULE back over the MOUNTING OBJECT and adhere to the HOOK AND LOOP FASTENER strip on the back side of the MODULE.

IMPORTANT: Pull HOOK AND LOOP FASTENER tight so module is very tightly secured to mounting object or swinging motion will not function.

5. Place the switch on the MODULE to the "ON" position.
6. Clap or make a loud noise to activate the scary sequence.

NOTE: Keep the switch in the "OFF" position when not in use.

 
OPERATION TIPS

- Hide or cut excess HOOK AND LOOP FASTENER for a more realistic look.
- Ghost Swing™ must be level when hung or it will not swing.

OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad to the jack labeled FOOTPAD located on the MODULE.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation
3. Step on the FOOTPAD to activate the scary sequence!

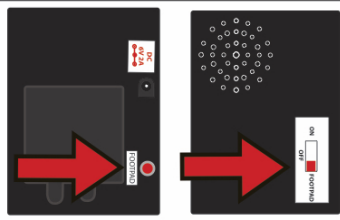

visit us at tekkydesign.com

Requires 4 AA batteries or
6V 2A ADAPTER (not included)

ALL NEW MATERIALS:
METAL, FABRIC, PLASTIC
Surface washable only.

GHOST SWING™
is a trademark of Tekky.
Copyright © 2018 Tekky.
All Rights Reserved.
MADE IN CHINA

* Footpads, adapters and all other accessories are sold separately and can be purchased at www.tekkyaccessories.com

Battery Diagram <p>Requires 4 "AA" Batteries (not included)</p>	BATTERY INSTRUCTIONS AND CAUTIONS Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.
<p>Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.</p>	
<p>WARNING DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY. STAY CLEAR OF ITEM WHILE OPERATING. DO NOT PLACE ITEM ON UNEVEN GROUND. DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION</p>	



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.

SMART PHONE SCAN SETUP VIDEO

