
# GRAVE GRABBER

# Installation and Operating Instructions

Keep all plastic and wire parts away from children.

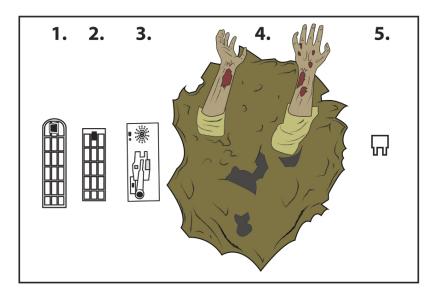

 
1. Insert SIDE FOOT and FRONT FOOT into the bottom of MODULE. Snap to lock. Match A to A and Match B to B.

**IMPORTANT**: Press to make sure each **FOOT** is flush with **MODULE**. To remove FOOT, insert plastic PLASTIC FOOT REMOVAL KEY (included) into holes on bottom to release locks, twist and pull.

- 2. Locate the pole underneath the ARMS AND FABRIC and insert the pole into the MODULE. Match C to C.
- 3. Locate the pole underneath the ARMS AND FABRIC. Insert the pole into the SIDE FOOT. Match D to D.
- 4. Connect 6V2A ADAPTER (not included) or insert 4 AA alkaline batteries into the battery compartment located on the MODULE.
- 5. Spread the fabric around the arms out evenly in all directions.
- 6. Reach underneath the ARMS AND FABRIC and turn switch on top of MODULE to ON to operate in Sound activation mode. Make a loud sound (clap) to activate. Leave switch in OFF position when not in use.

### OPTIONAL FOOTPAD SET UP FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- Insert the cable from the optional footpad into the jack labeled footpad on the module. Place the switch in the FOOTPAD position to enable
- 2. FOOTPAD activation
- 3. Step on the FOOTPAD to activate the scary sequence!



Footpads, adapters and all other accessories are sold separately and can be purchased at www.tekkyaccessories.com

**SMART PHONE SCAN** 



Requires 6V 2A ADAPTER or 4 AA batteries (not include

ALL NEW MATERIALS: METAL, FOAM, PLASTIC, POLYESTER
Surface washable only.





SETUP VIDEO





#### **PARTS**


- I. SIDE FOOT
- 2. FRONT FOOT
- 3. MODULE
- 4. ARMS AND FABRIC
- **5. FOOT REMOVAL KEY**

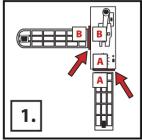

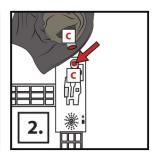


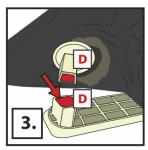

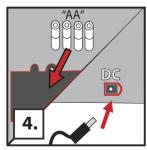

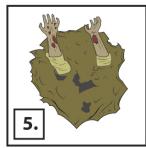

Battery

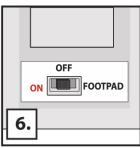

## BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated.

ing! This item is not a toy. For decoration only. Small parts, choking hazard This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger

#### WARNING

DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY. STAY CLEAR OF ITEM WHILE OPERATING DO NOT PLACE ITEM ON UNEVEN GROUND DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION

