



# SET-UP INSTRUCTIONS FOR 72" GRIM REAPER

## SET-UP INSTRUCTIONS:

**Assembling the Grim Reaper.** Carefully remove contents from the box.

**Step 1:** Please use metal support rods "F" and "G" to connect Right Foot "R" and Left Foot "L" together (as show in the diagram 1).

**Step 2:** Insert the metal support rods "A" and "B" into the top of the left foot and right foot base. shown in the diagram as section "R" and "L".



**Step 3:** Attach the "Hip Rods" section "C" into the base. (Please note the "Locking Pin" pictured in the blowup "Fig. 1-A") Once you have joined the two sections, push the "Locking Pin" and connect the metal support rods. When disassembling the grim reaper, reverse this procedure.

**Step 4:** Attach the metal support rods "D" into Hip Section "C". then insert the assembled section into the attachment hole located under the figure's body section (Figure 2).

**Step 5:** Attach Body Section "E" to section "D".

**Step 6:** Take the head and place above the body section and connect the "A" to "A" and "B" to "B" male and female. Attach the neck post to the body section.

**Step 7:** Place the hood over the skull and secure the hook and loop tabs. Adjust the posable wire arms and the costume to give the reaper a more sinister look.

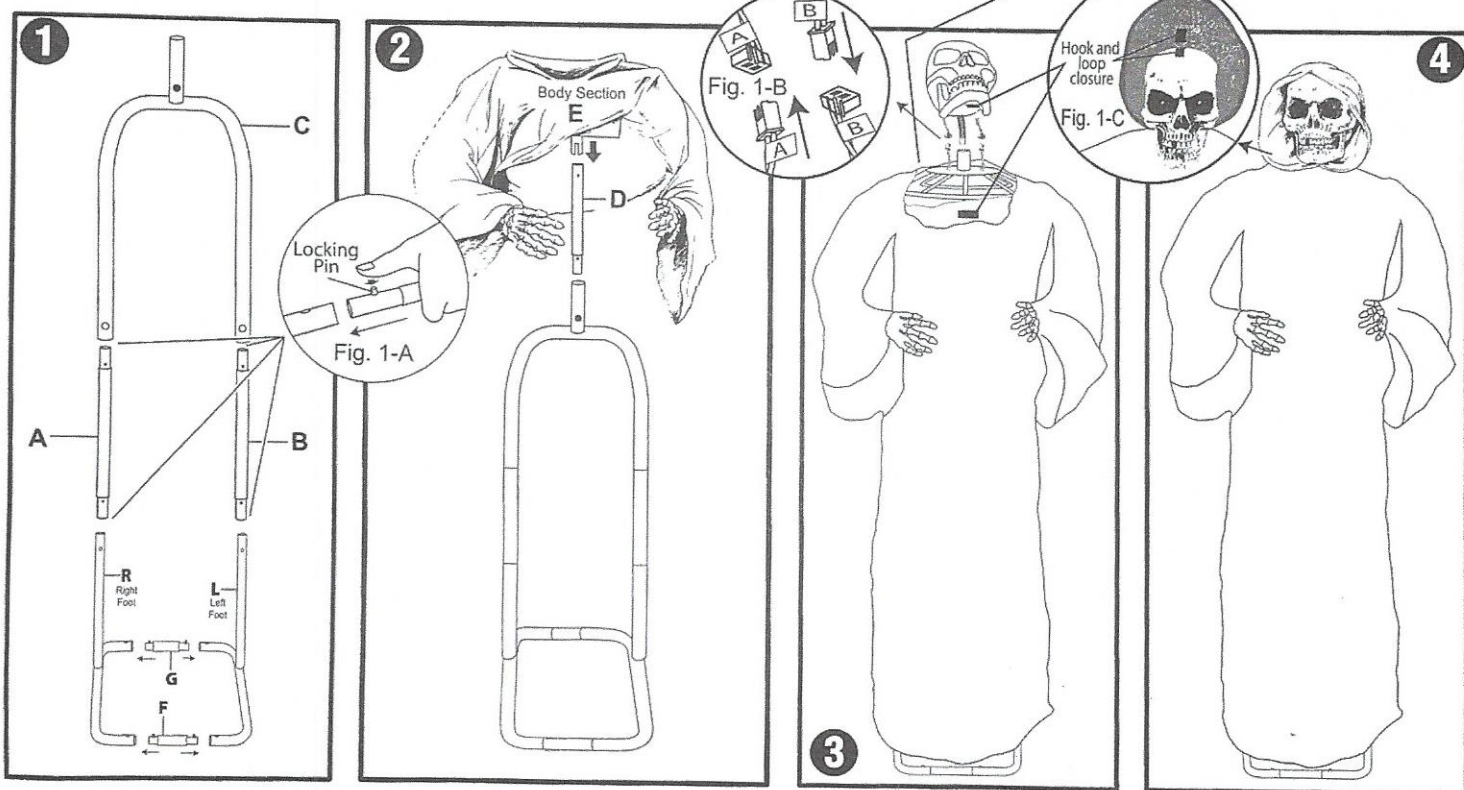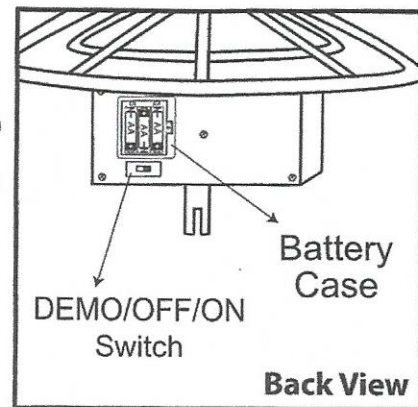

## Battery Replacement & Item Function:

Battery-powered. Uses three (3) "AA" batteries (batteries included).

1. Remove battery case cover, battery case is located on the back of the upper body. Please open the hook and loop closure and use a screwdriver to remove the safety screw and then remove the battery compartment cover. (as show in diagram "Back View")
2. Clean the battery contacts and also those of the device prior to battery installation.
3. Insert 3 "AA" batteries with correct polarity and replace cover and safety screw.
4. The DEMO/OFF/ON switch is located on the battery case. Move the switch to the "ON" position to place the Reaper in the "sound activated" mode. Clap your hands or make a loud noise to activate the LED lights, eerie sounds and jaw motion. Switch to the "DEMO" position to activate the "Try-Me" feature and then press the "Try-Me" button to see and hear a demonstration. Switch to "OFF" and remove batteries when not in use.
5. Replace batteries if the movement becomes slow, LED become dim or sound is distorted or faint.

## Warning-Battery:

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Alkaline batteries are suggested for longer life.
4. Exhausted batteries are to be removed from the product.
5. Dispose of exhausted batteries with care.
6. Do not dispose of batteries in fire, batteries may explode or leak.

**CAUTION:** Please remove batteries if their power is consumed or if the product is to be left unused for a long period of time.

**RECYCLE YOUR BATTERIES:** To help protect our environment, we recommend that all batteries be recycled. You can find a local recycling center by going to: <http://earth911.com/hazardous/single-use-batteries/> Or, in the United States call 1-800-CLEANUP for a recycling location near you.