

# HANGING SHAKING SPIDER™

## SOUND ACTIVATED



### WARNING:

#### STRANGULATION RISK—

Keep cables and wires away from children.

This product is intended for use by persons 15 years of age and older.


Not intended for use by children 14 years of age and younger.

Hanging Shaking Spider™ is a trademark of Tekky.  
Copyright © 2018 Tekky. All Rights Reserved.

MADE IN CHINA

ALL NEW MATERIALS:  
POLYESTER, PLASTIC, WIRE

*Surface Washable Only.*

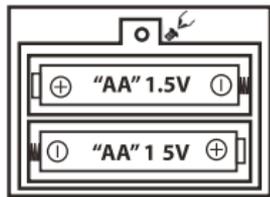

### OPERATING INSTRUCTIONS:

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

1. Carefully remove and discard the "Try Me" wire and packaging.
2. Insert 2 brand new "AA" alkaline batteries into the battery compartment located on the back of the spider.
3. Insert module into the opening in the back of the spider with the speaker facing toward the front of the spider, and battery compartment facing toward you.
4. Hang spider in desired location. Make sure string is securely fastened to nail/hook.
5. Place the switch on the module to the "ON" position.
6. Make a loud sound (clap) to activate scary sequence.

**NOTE:** Keep the switch in the "OFF" position when not in use.

### BATTERY INSTRUCTIONS & CAUTIONS:

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.