

HAUNTED REVEAL CLOCK™

Item#
56056

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN


1. Insert 3 brand new 'AA' alkaline batteries into the battery compartment located on the bottom of the clock base.
2. Place the switch on the bottom of the clock base to the "ON" position.
3. Make a loud sound (clap), or wave hand in front of Haunted Reveal Clock™ to activate scary sequence.



Note: Keep the switch in the "OFF" position when not in use.

NOTICE REGARDING BATTERIES:

IF THE CLOCK HANDS MOVE SLOWLY AND THE SKELETON APPEARS BEFORE THE HAND REACHES 13, REPLACE THE BATTERIES WITH FRESH 'AA' ALKALINE CELLS FOR OPTIMAL PERFORMANCE.

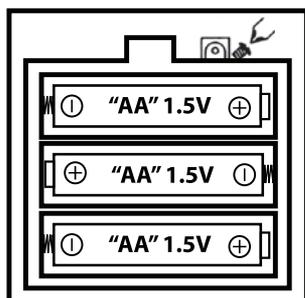

BATTERY INSTRUCTIONS AND CAUTIONS:

- Use only the batteries recommended.
- Remove batteries when not in use.
- Do NOT use rechargeable batteries.
- Be sure to insert the batteries with the correct polarity +/-.
- Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium.
- Always dispose of exhausted batteries properly.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING

**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
DO NOT PLACE ITEM ON UNEVEN SURFACE.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkytoys.com for assistance.

Surface Washable Only.

ALL NEW MATERIALS : PLASTIC, WIRE, POLYESTER


Battery Powered: Requires 3 AA Batteries (not included)

HAUNTED REVEAL CLOCK is a trademark of Tekky Toys.

Copyright © 2015 Tekky Toys.

All Rights Reserved.

MADE IN CHINA

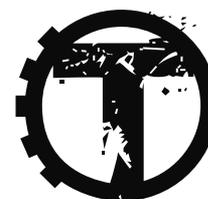

TEKKY

VISIT US AT TEKKYTOYS.COM