


HAUNTED CANDELABRA™

Installation and Operating Instructions



Keep all plastic and wire parts away from children.

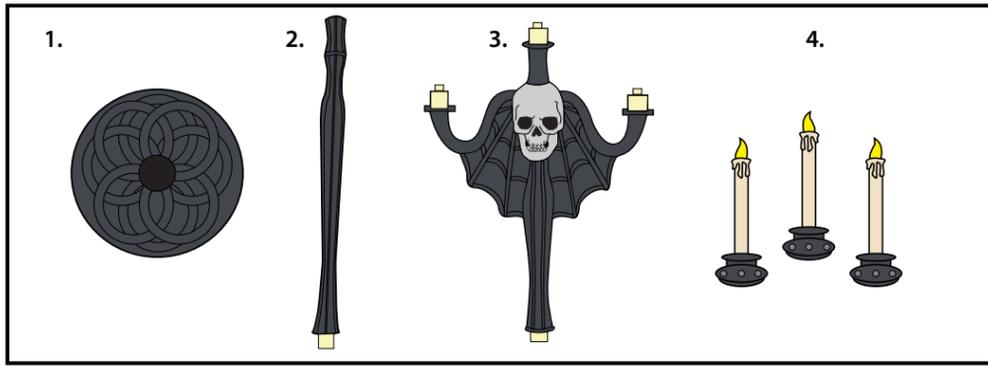

PARTS

1. BASE
2. CENTER POLE
3. CANDELABRA
4. 3 CANDLES

1. Insert the CENTER POLE into the BASE. The POLE is secure when the snap-lock clicks into place. (Match A to A)
2. Insert the CANDELABRA into the CENTER POLE. The CANDELABRA is secure when the snap-lock clicks into place. (Match B to B)
3. Follow ILLUSTRATION 3 and Insert the CANDLES labeled D, E, AND C into the CANDELABRA. Firmly apply pressure until the CANDLES snap-lock in place. (Match D to D), (Match E to E), and (Match C to C)

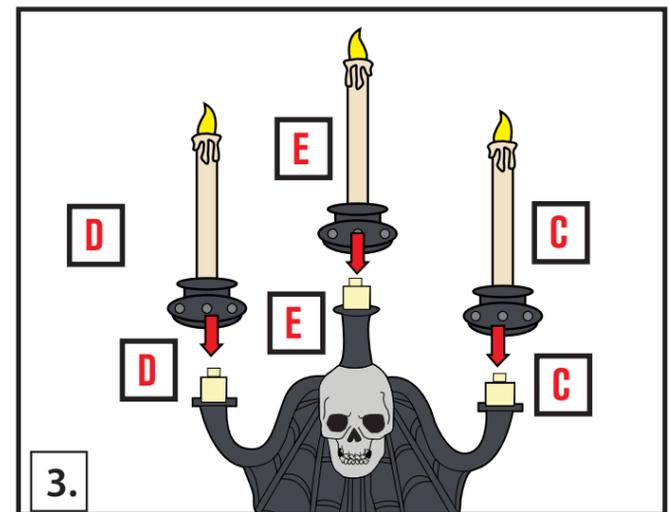
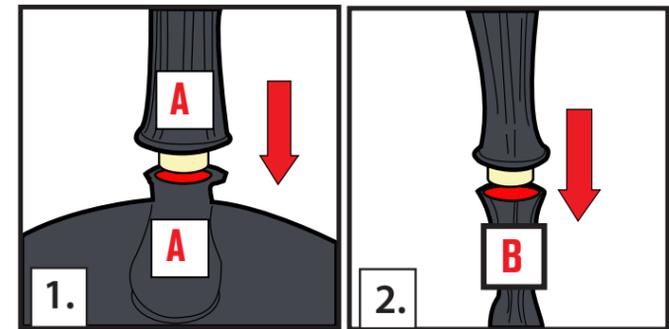


WARNING: THIS IS A ONE TIME ONLY PROCEDURE. ONCE THE CANDLES ARE SNAP LOCKED IN PLACE THEY CANNOT BE REMOVED.

4. Lift the lid concealing the battery compartment located on the top of the BASE. Remove the battery compartment cover and insert 4 AA batteries (not included) into the BASE.
5. Turn switch located on the BASE to the ON position (with sound) or NO SOUND (silent). Use the hook and loop fastener to close and secure the battery compartment lid, once you have installed the battery compartment cover. Make a loud sound (clap) to activate the item. Turn the item OFF when not in use.

*NOTE: Use HAUNTED CANDELABRA™ on a smooth, flat surface to function optimally.


TROUBLESHOOTING:
IF THE ITEM KEEPS MOVING IN CIRCLES, CAREFULLY PICK THE ITEM UP BY THE CENTER POLE, AND GENTLY PLACE THE ITEM BACK DOWN TO CONTINUE OPERATION.

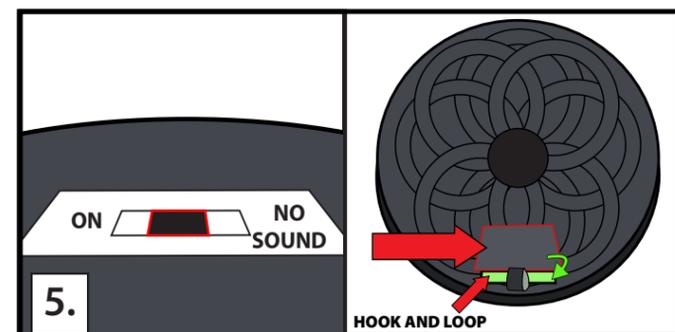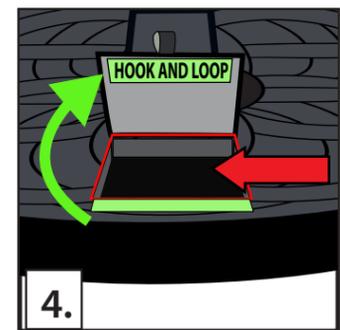

SMART PHONE SCAN SETUP VIDEO



Battery Diagram

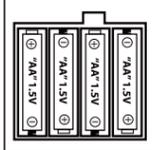

BATTERY INSTRUCTIONS AND CAUTIONS
Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.
** FOR INDOOR USE ONLY**



visit us at tekkydesign.com
Requires or 4AA batteries (not included)

ALL NEW MATERIALS:
METAL, PLASTIC
Surface washable only.
HAUNTED CANDELABRA™ is a trademark of Tekky.
Copyright © 2020 Tekky.
All Rights Reserved.
MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.

