 




TM

INSTRUCTION MANUAL

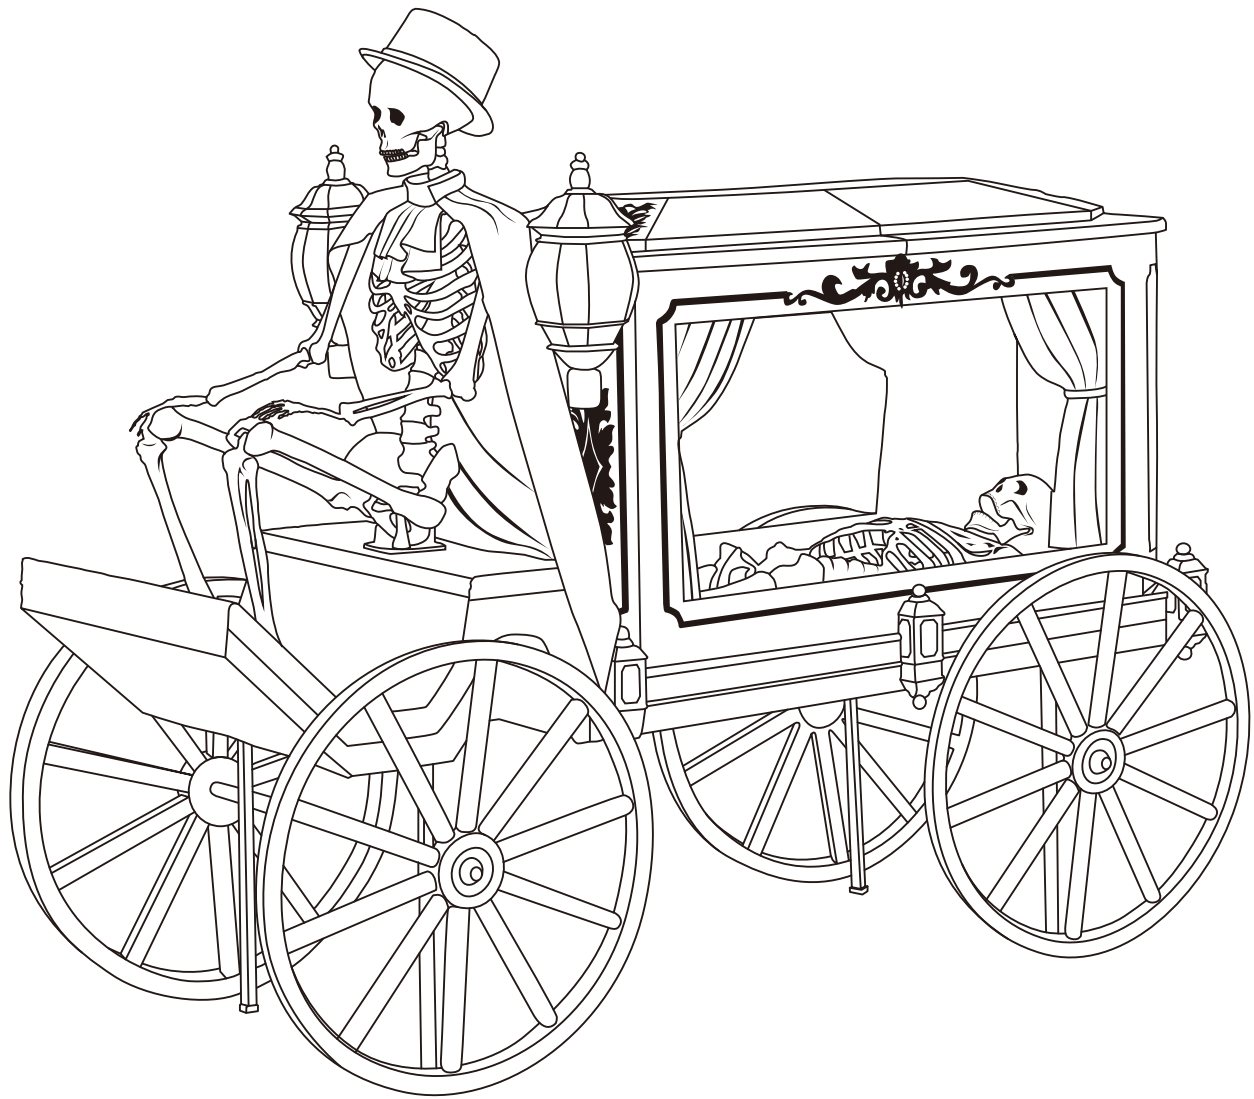

SET-UP INSTRUCTIONS FOR THE 5 FT ANIMATED LED HEARSE



1-877-527-0313, 8 a.m. to 5 p.m., EST,
Monday-Friday



info@pan-asian.com.hk

Before you begin

3D-GUIDED INTERACTIVE ASSEMBLY
INSTRUCTIONS CAN BE FOUND IN **BILT**[®]
DOWNLOAD THE **FREE** APP



READ CAREFULLY & RETAIN FOR FUTURE REFERENCE!



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-877-527-0313, 8 a.m. to 5 p.m., EST, Monday-Friday or email at info@pan-asian.com.hk.



WARNING: This is not a toy and is for decorative purposes only. For indoor/outdoor use. This item is not intended for use by children under the age of 14. Do not place product near an open fire or heat source such as a radiator, stove, etc.



**KEEP OFF, DO NOT SIT OR CLIMB ON THE HEARSE.
THIS IS NOT A TOY. THIS ITEM IS FOR DECORATION ONLY.**

PREPARATION: Before beginning assembly the product, make sure that all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

BATTERY USAGE:

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Alkaline batteries are suggested for longer life.
4. Exhausted batteries are to be removed from the product.
5. Dispose of exhausted batteries with care.
6. Do not dispose of batteries in fire, as they explode or leak.

CAUTION: Please remove batteries if the power is consumed or if the product is to be left unused for a long period of time.

RECYCLE YOUR BATTERIES: To help protect our environment, we recommend that all batteries be recycled. You can find a local recycling center by going to:
<http://earth911.com/hazardous/single-use-batteries/> Or, in the United States call 1-800-CLEANUP for a recycling location near you.

SAFETY INSTRUCTIONS:

1. All cautions in these operating instructions should be followed completely.
2. Do not use near water; such as bathtub, laundry tub, kitchen sink, wet basement or swimming pool, etc.
3. Do not display figure near any heat source such as radiators, stoves, fireplaces, etc.
4. Display should be serviced by a qualified service person only. Do not attempt to service this unit beyond what is described in the operating instructions.
5. Take extra care when displaying any figure that may contain small parts around small children.
6. Use of this decoration should always be supervised by an adult.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.













NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.


04252020_2008482

Printed in China

PART LIST:

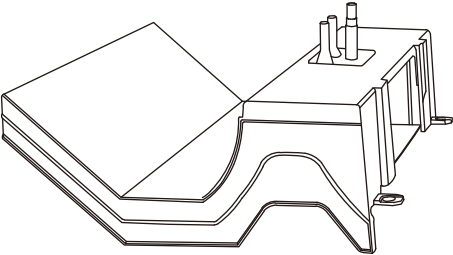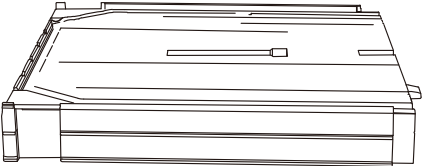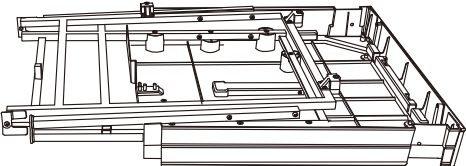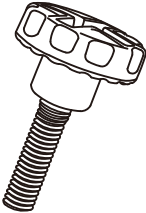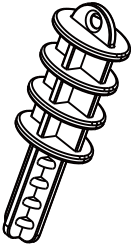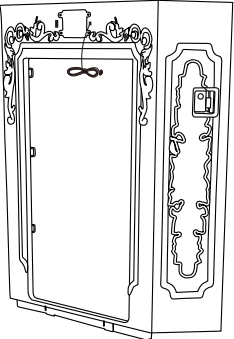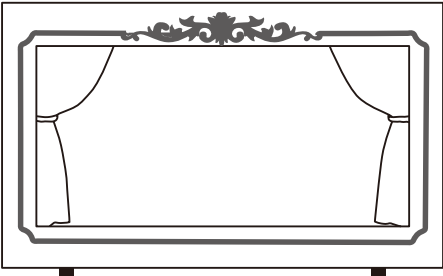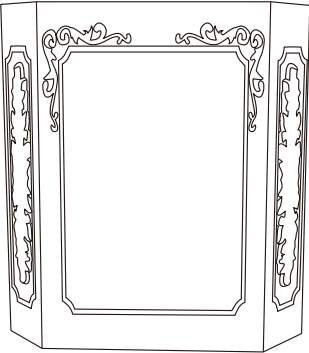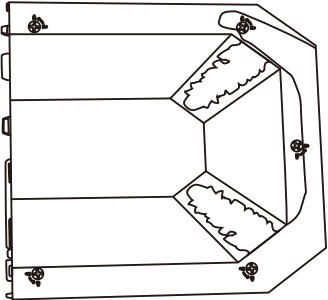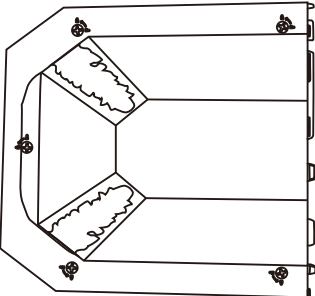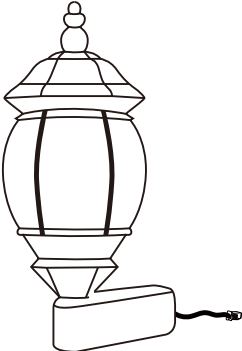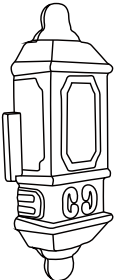
<div><div>A Carriage Base - Front</div><div></div><div>X 1</div></div>	<div><div>B Carriage Base - Middle</div><div></div><div>X 1</div></div>	<div><div>C Carriage Base - Back</div><div></div><div>X 1</div></div>
<div><div>D Carriage Base Screws</div><div></div><div>X 4</div></div>	<div><div>E Plastic Screwdriver</div><div></div><div>X 1</div></div>	<div><div>F Carriage Panel with Try Me button - Front</div><div></div><div>X 1</div></div>
<div><div>G Carriage Side</div><div></div><div>X 2</div></div>	<div><div>H Carriage Panel - Back</div><div></div><div>X 1</div></div>	<div><div>I Carriage Top Panel - Front</div><div></div><div>X 1</div></div>
<div><div>J Carriage Top Panel - Back</div><div></div><div>X 1</div></div>	<div><div>K Lantern</div><div></div><div>X 2</div></div>	<div><div>L Decorative Molding Details</div><div></div><div>X 6</div></div>

 M Wheels

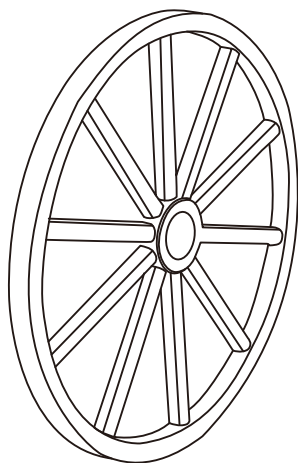


X 4

 N Wheels Connector Support

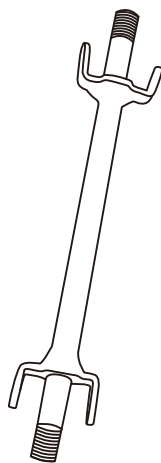


X 4

 O Screws for Wheel and Lantern

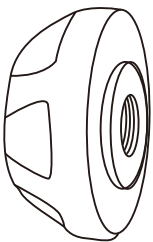


X 10

 P Skeleton

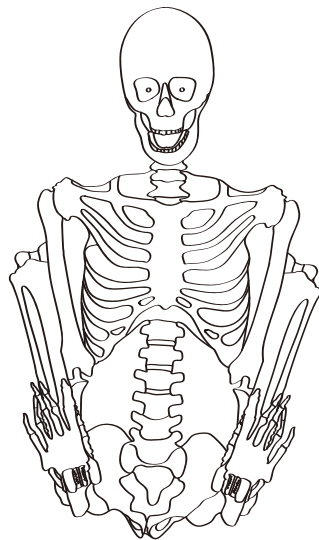


X 1

 Q Driver with Try Me button
and Hat

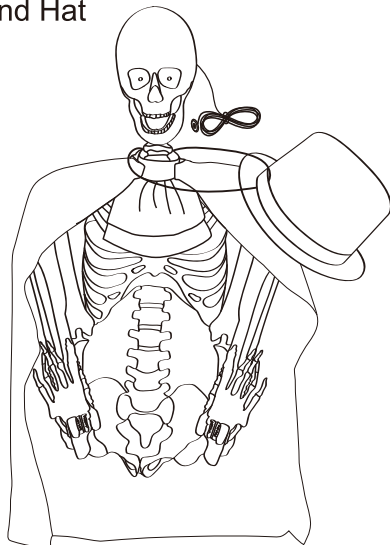

X 1

 R Bridle

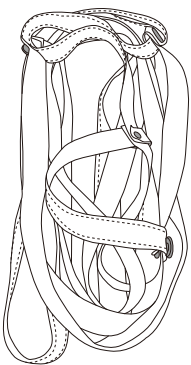


X 1


NOTE: If any parts are broken or missing first call the customer care number 1-877-527-0313

ASSEMBLY:
(Assembly Takes Approximately 45 Minutes with 2 Adults)

 
Step 1

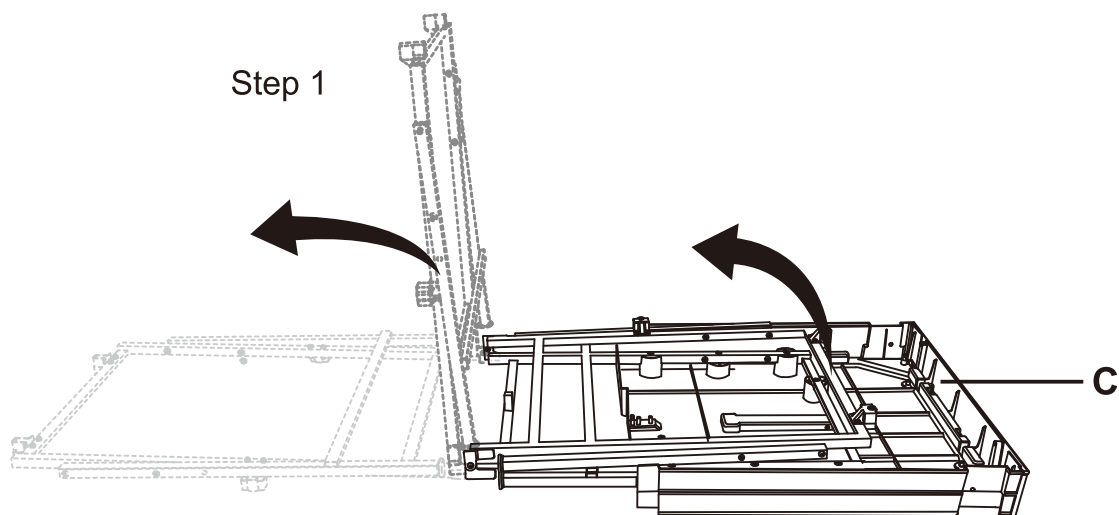

 
Step 2

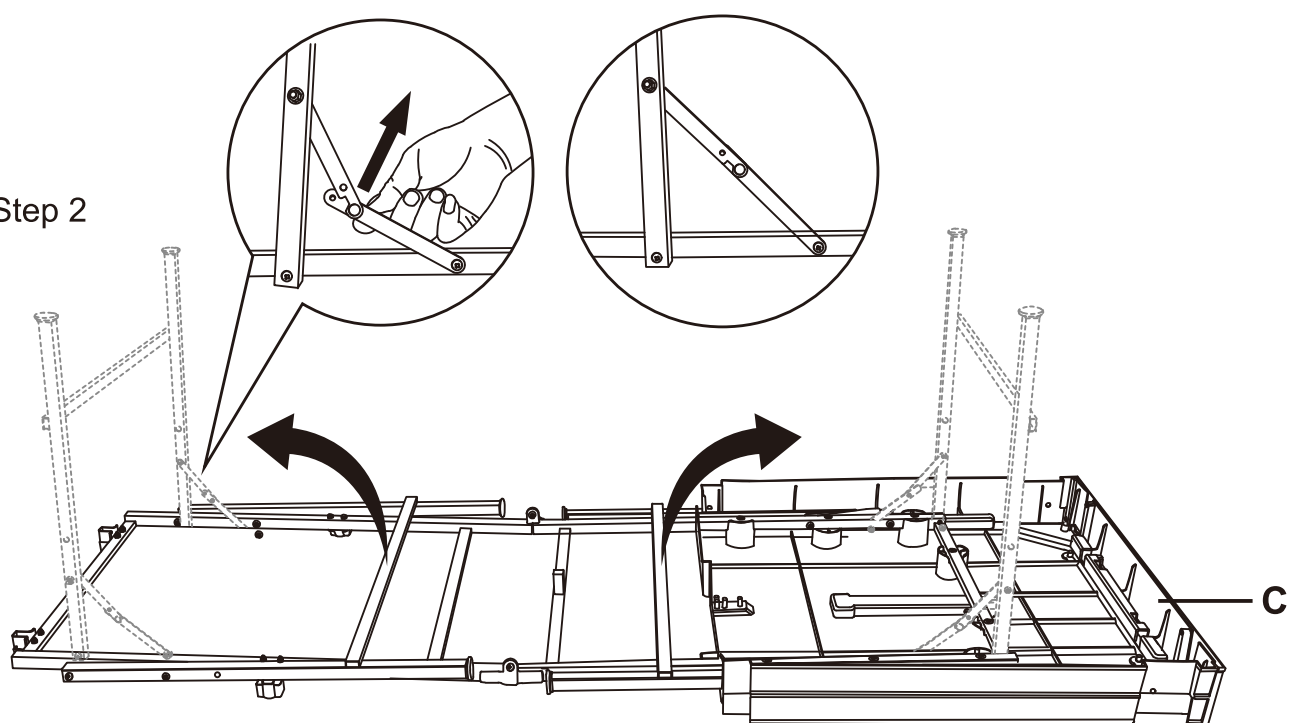

 Step 3

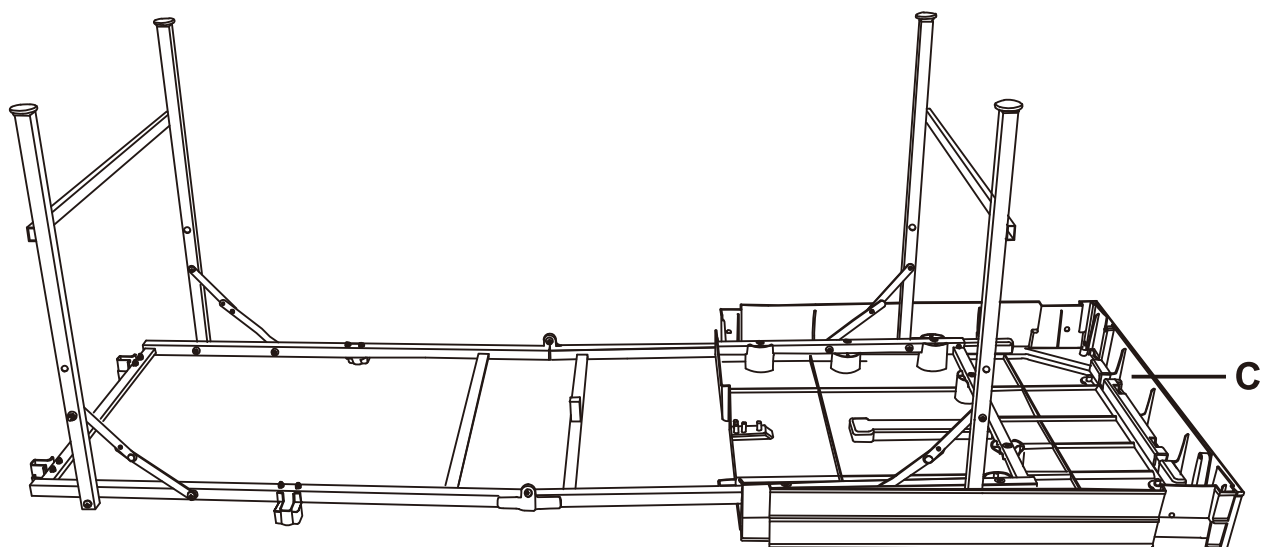



 
Step 4

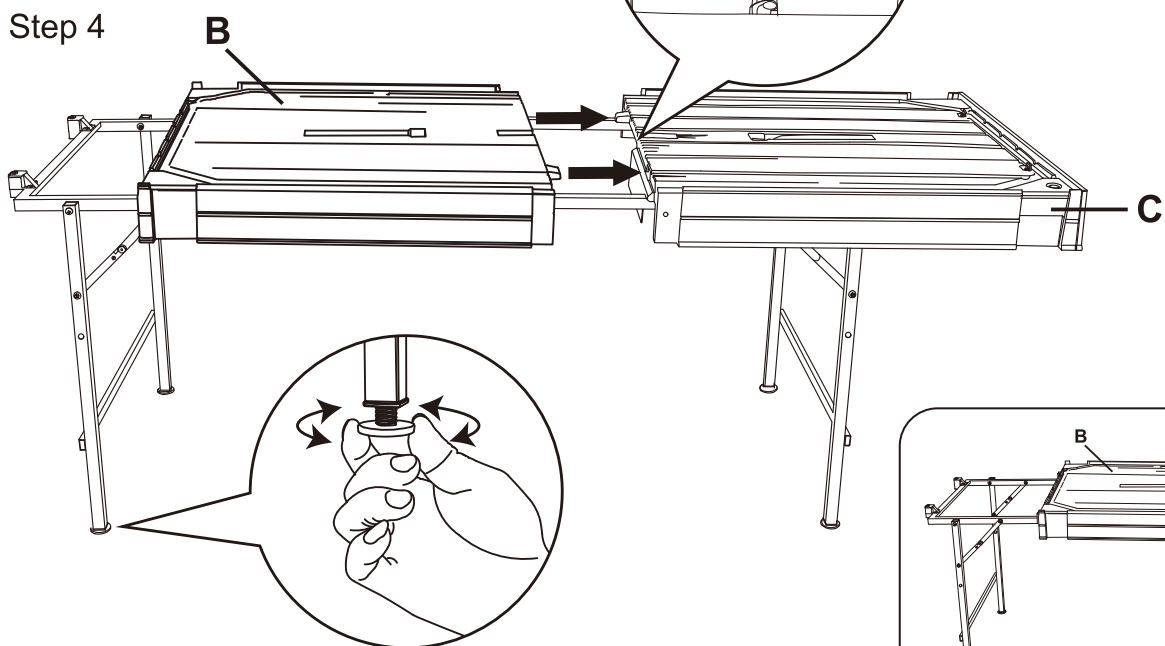




Adjust the screws located under the four support rods, make sure the base is secure and level.

   
Step 5

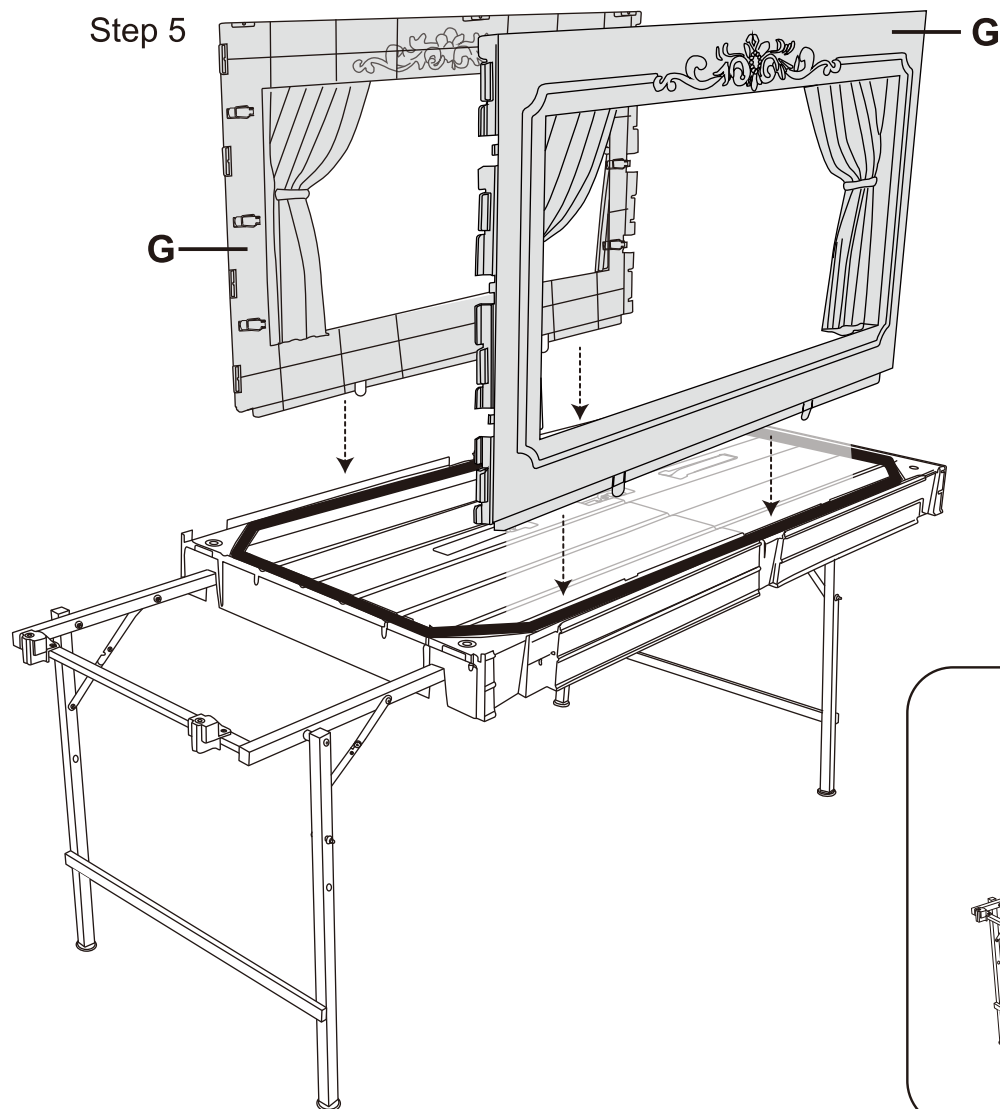

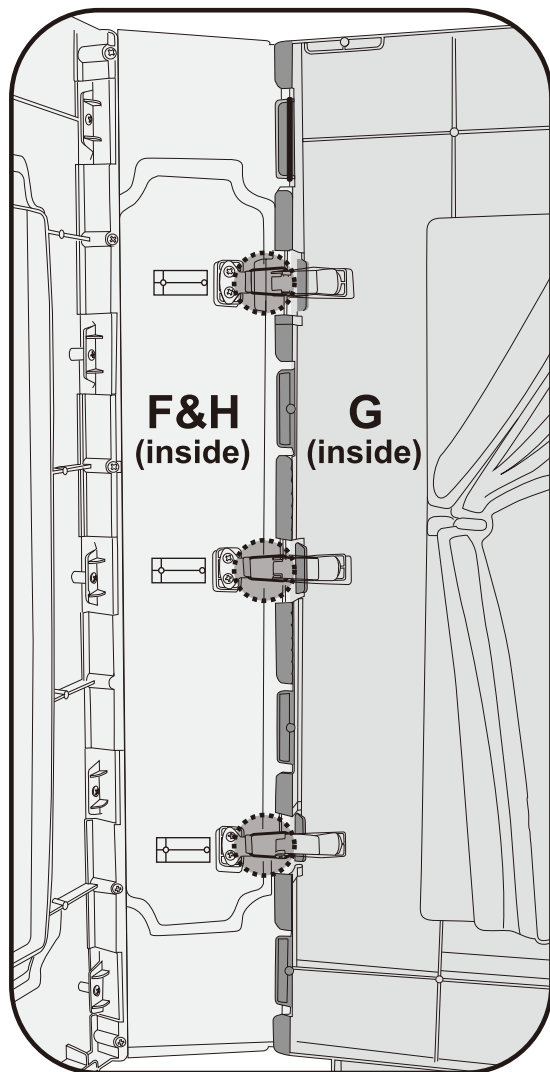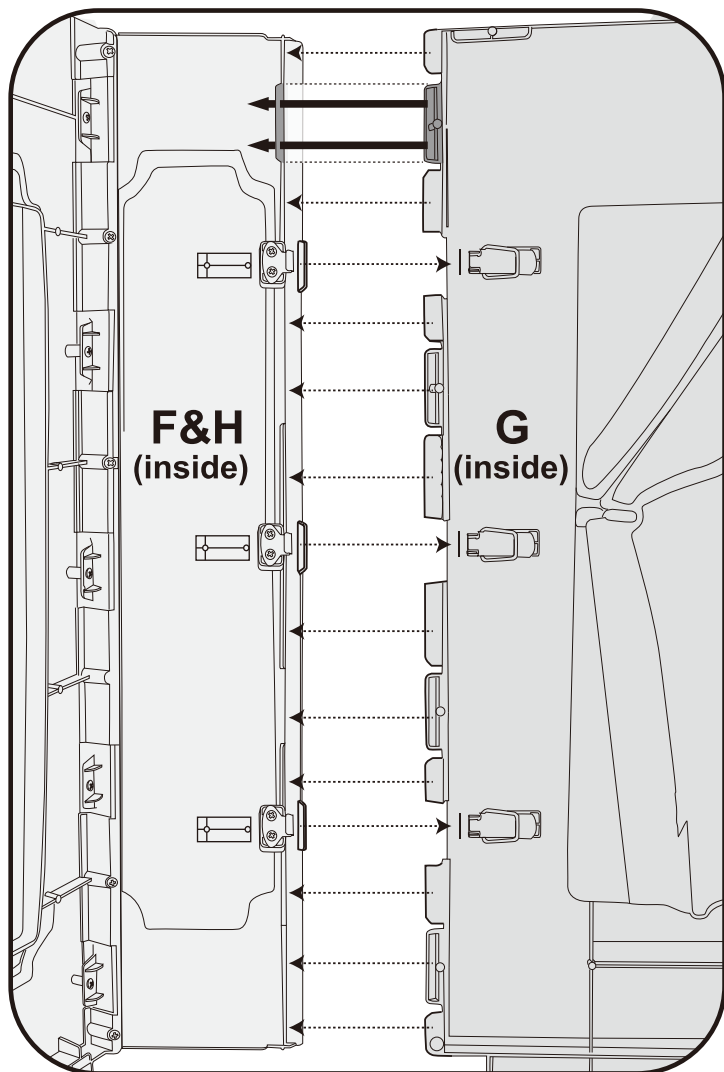


    Step 6

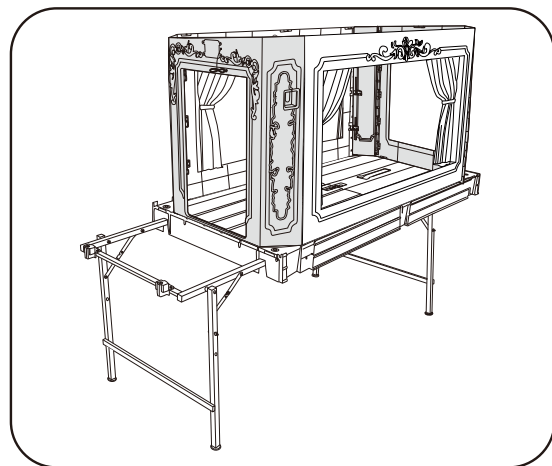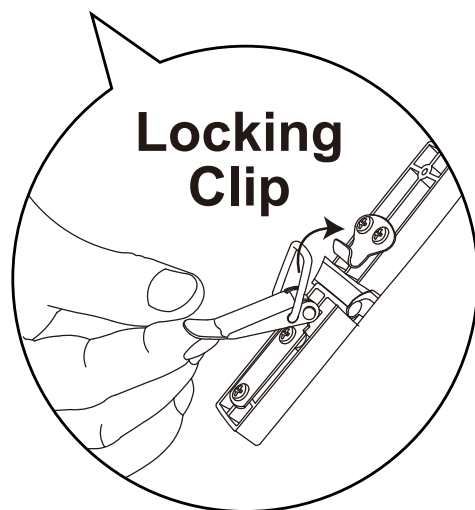
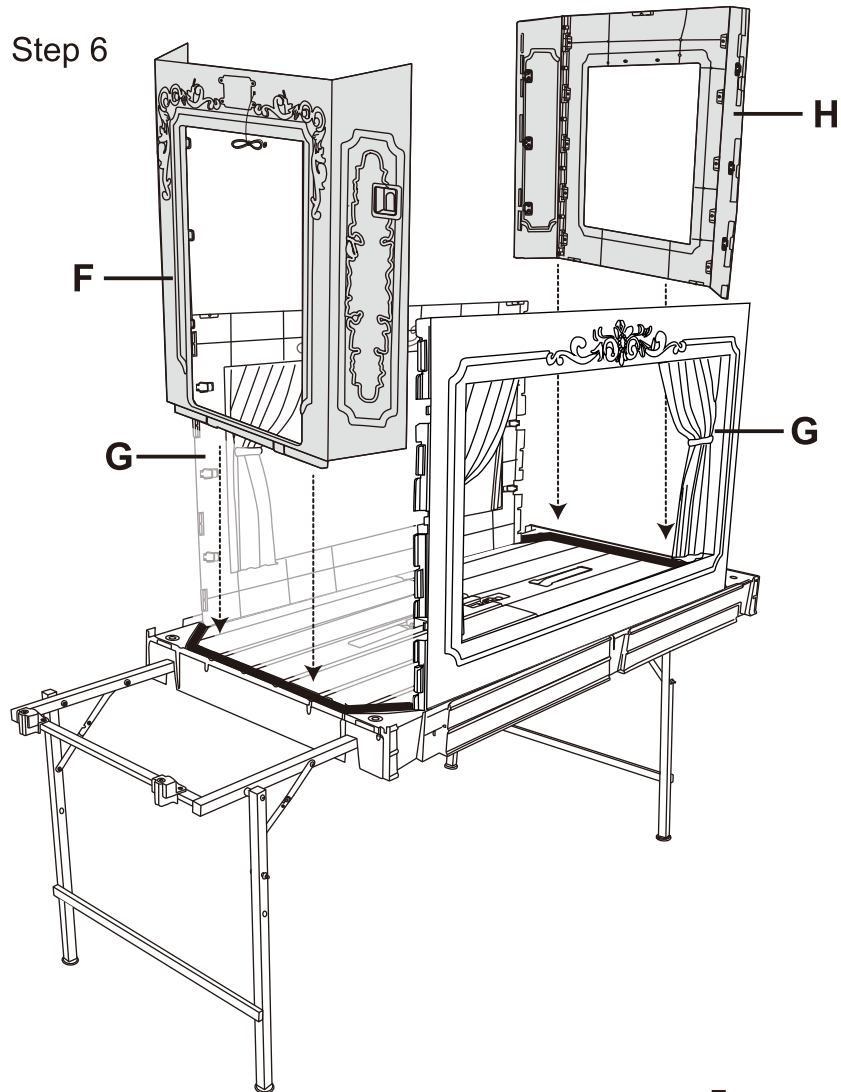


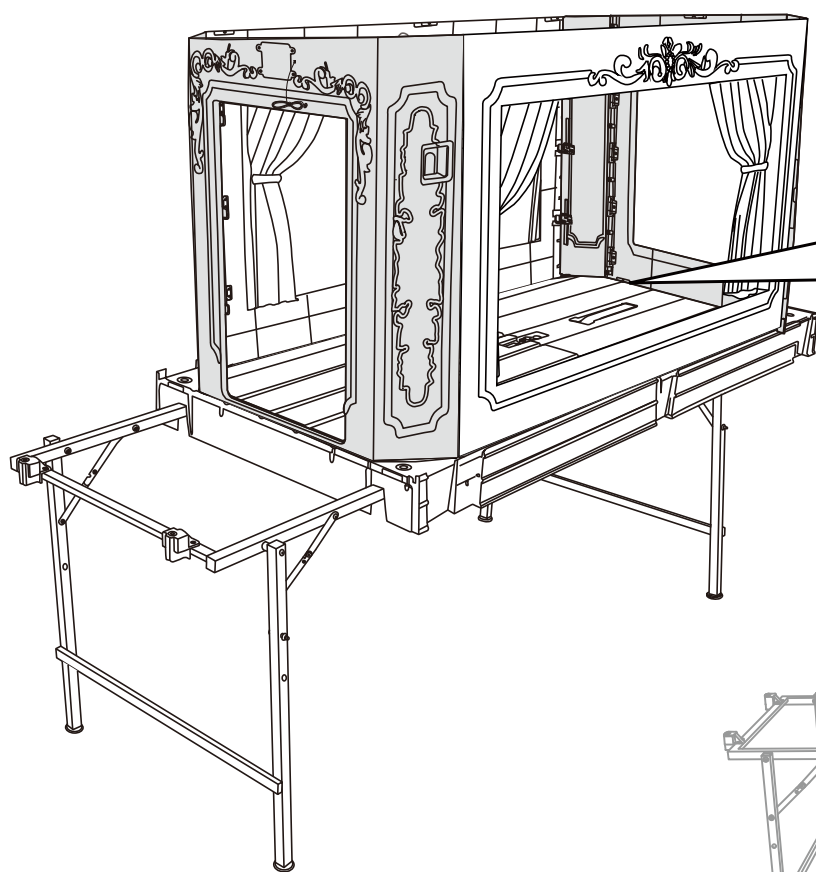

 
Step 7

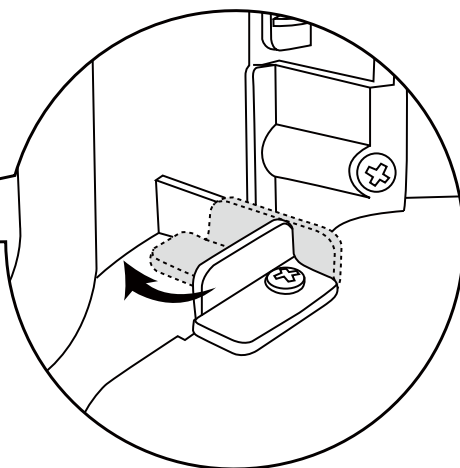

 
 
Turning the locking tap to secure the carriage panel into the base after attached parts F, G and H.

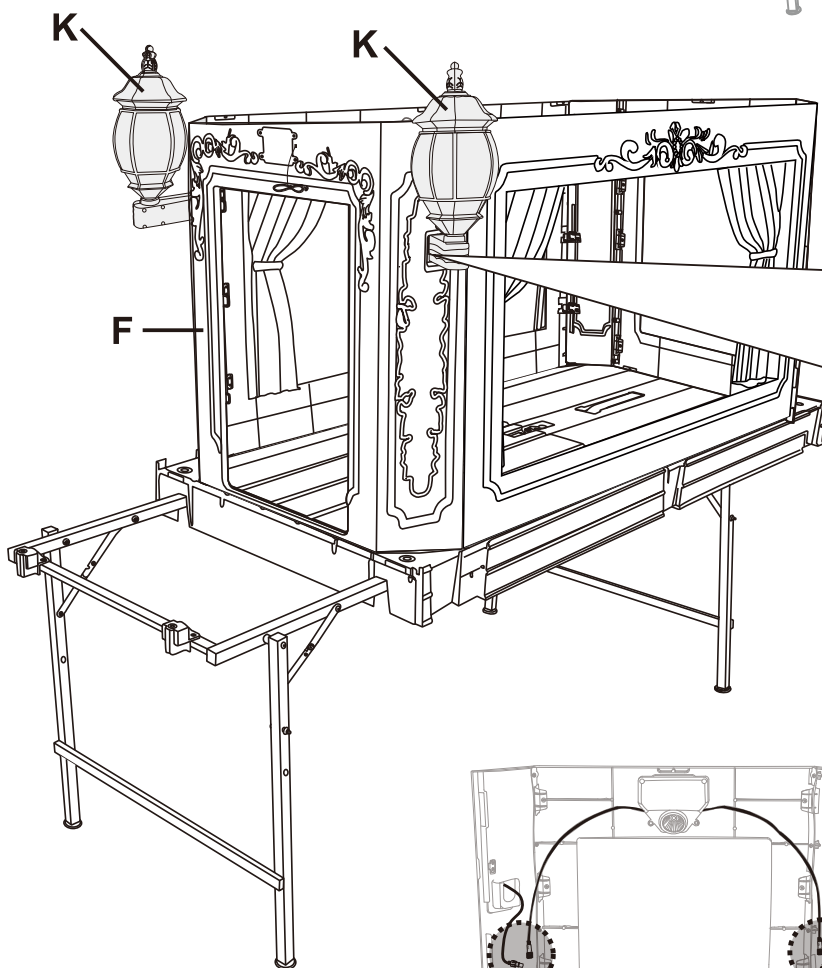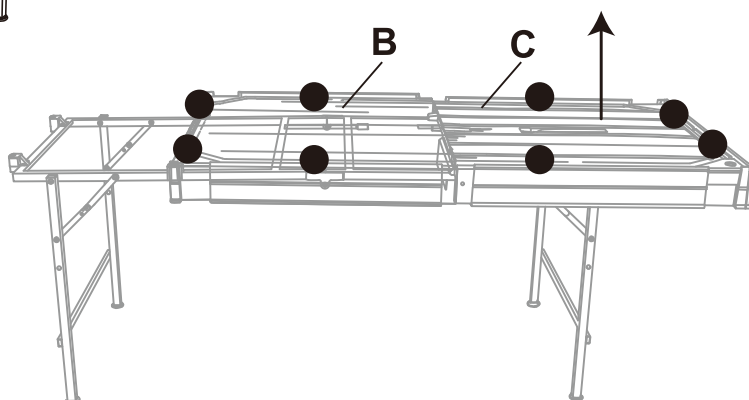

 Step 8

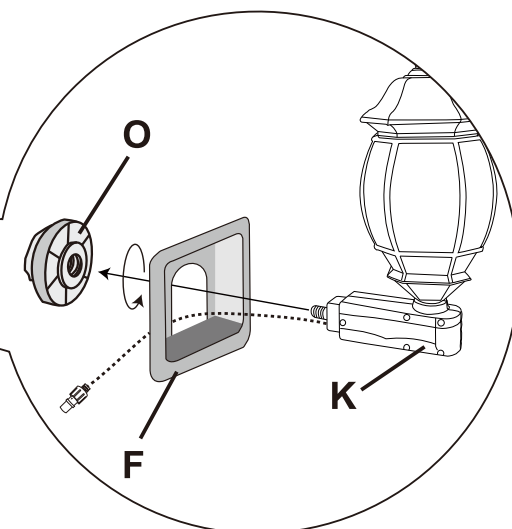


  Attach the lantern's lead wires through the hole located on the front carriage panel (parts F).

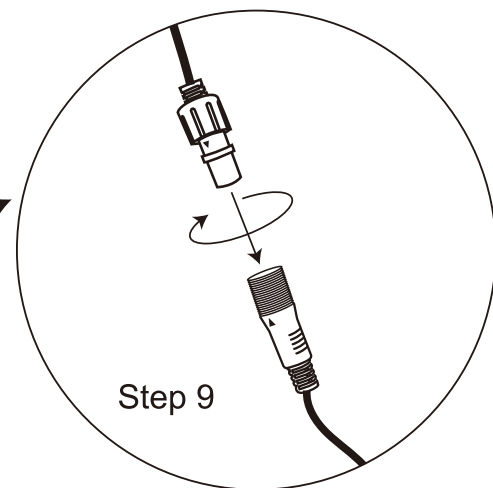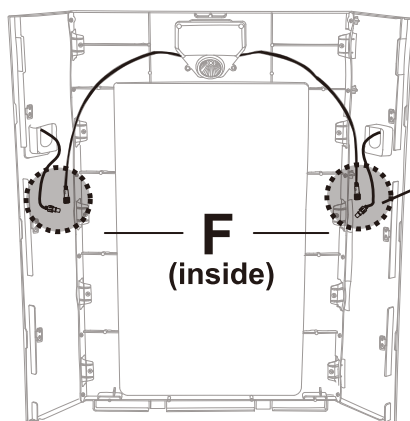


Step 9

 
Step 10

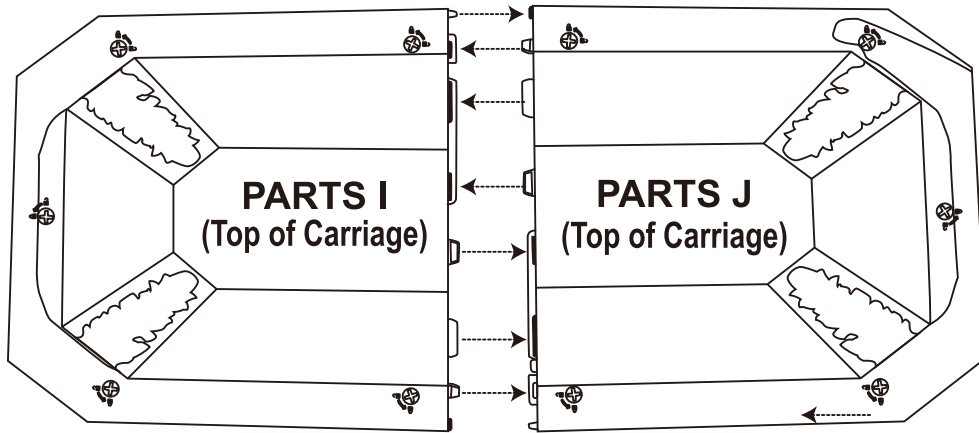

 
Step 11

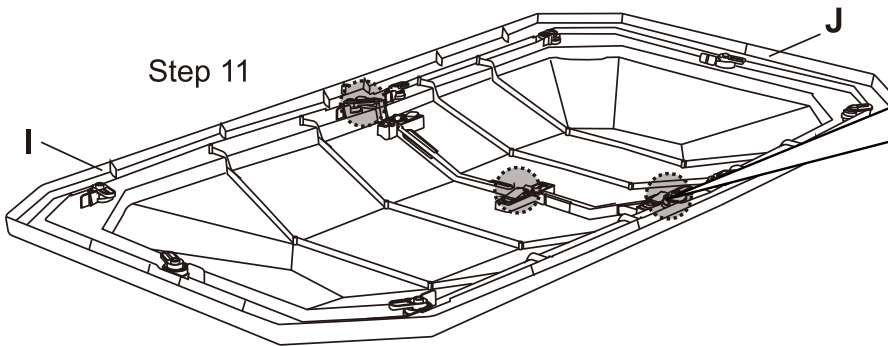

 
Step 12

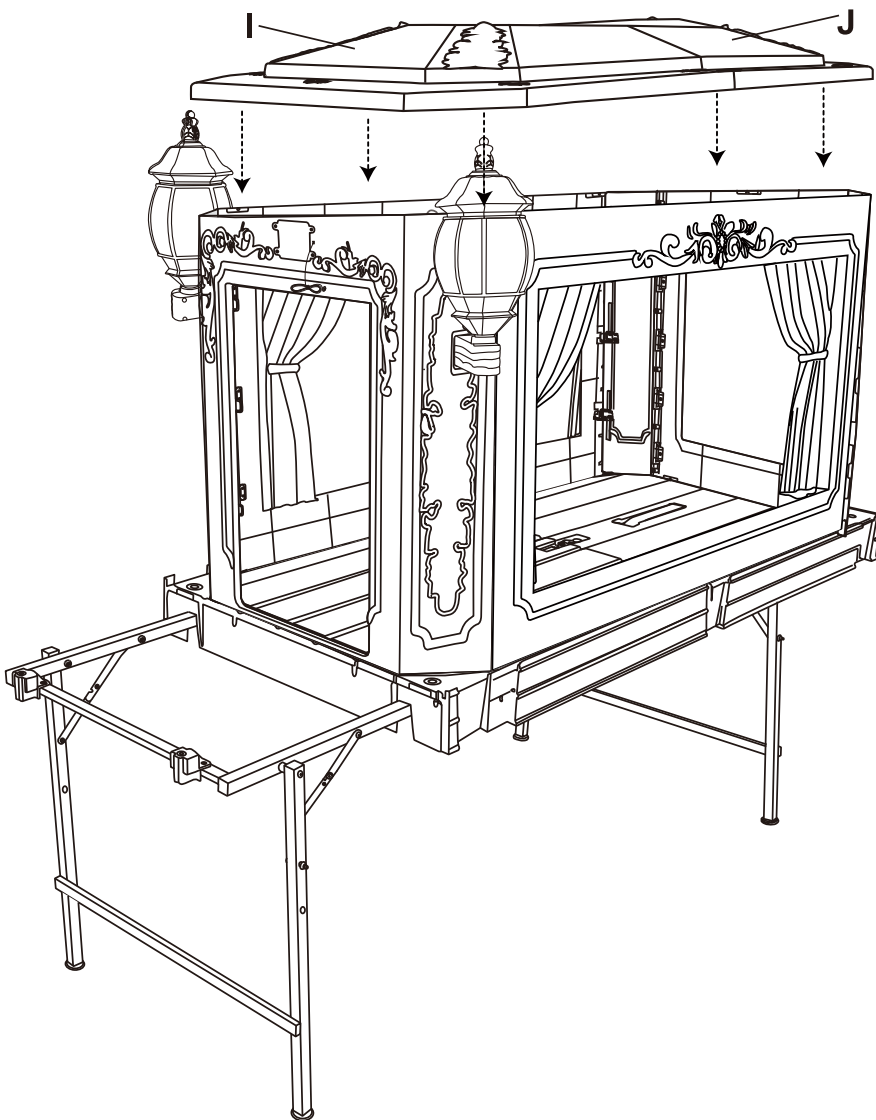

 
Step 13

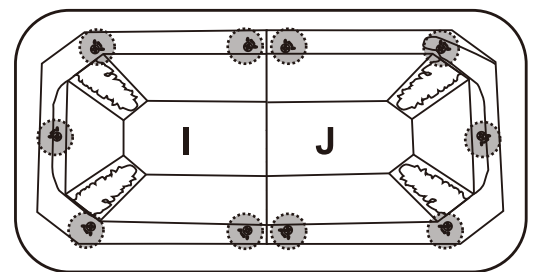

 
Turning the screws to secure the top panel into the carriage panel.

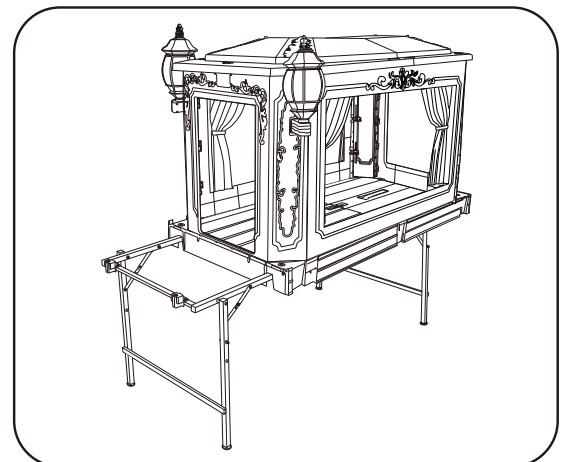

 Step 14

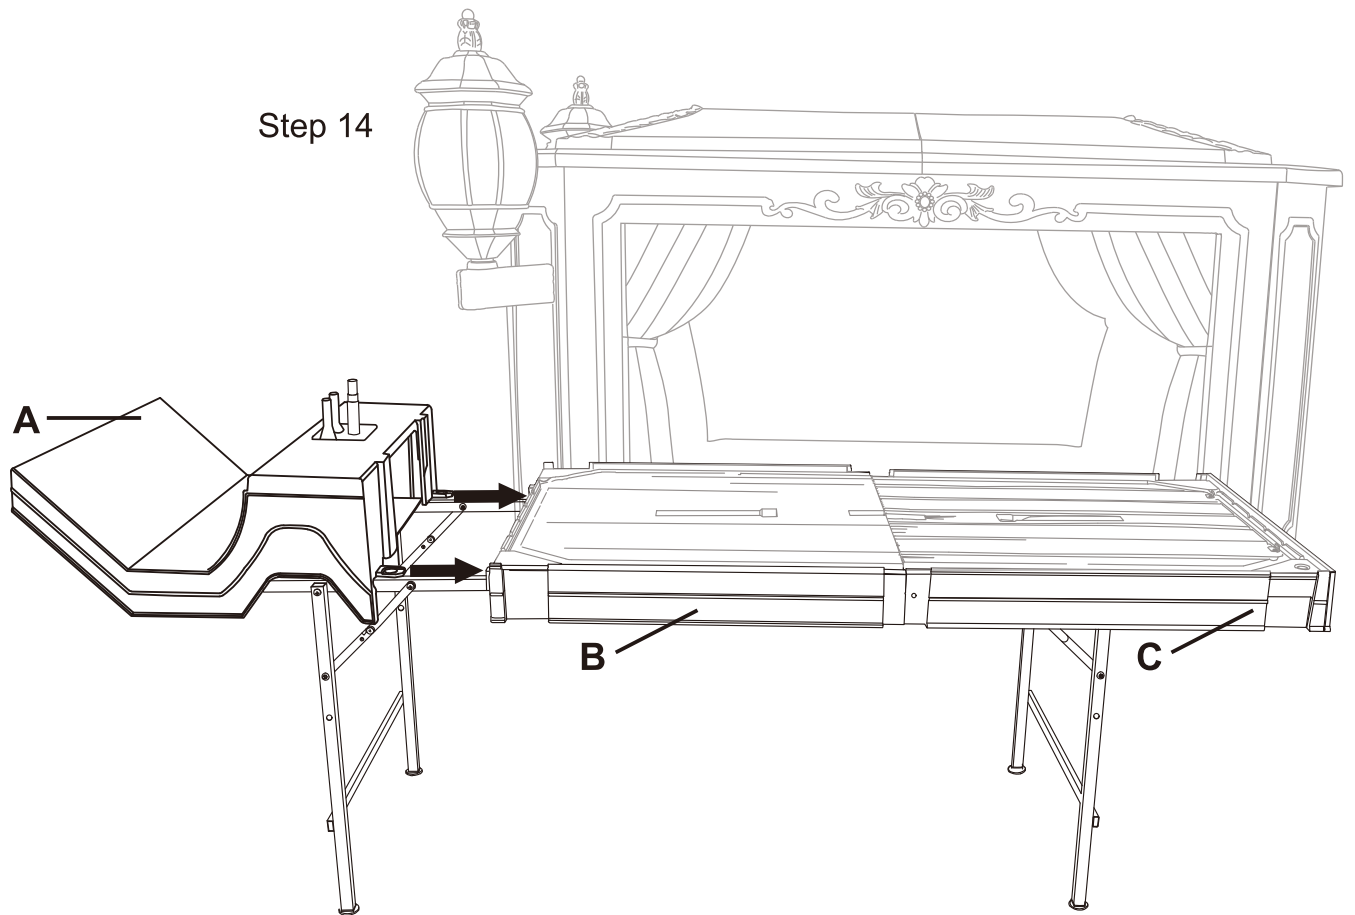


 Step 15

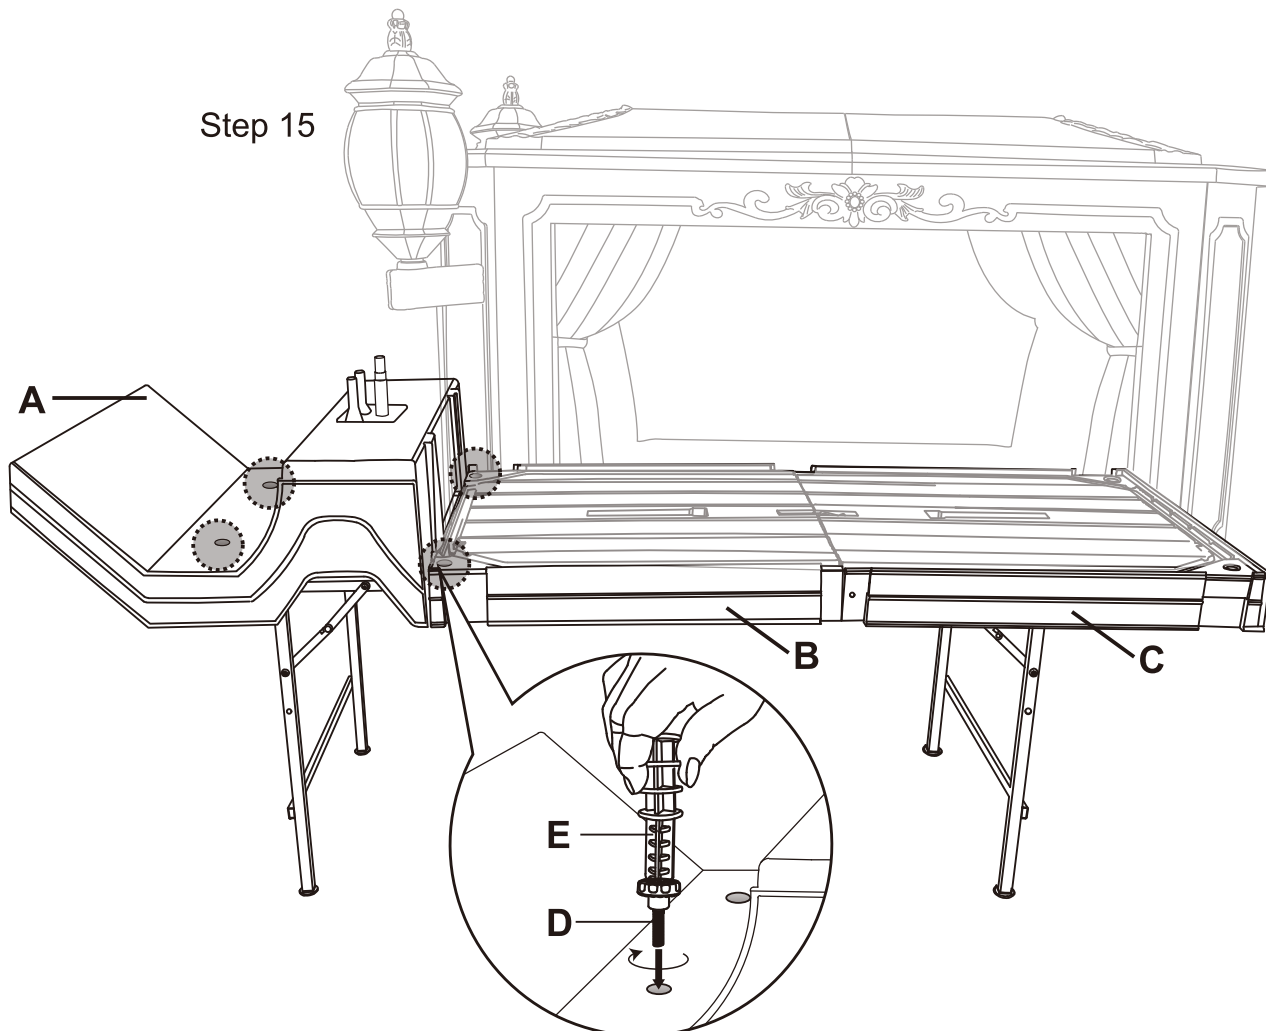



Using plastic screw driver (included) screw down parts A and B of the 4 points shown.

 Step 16

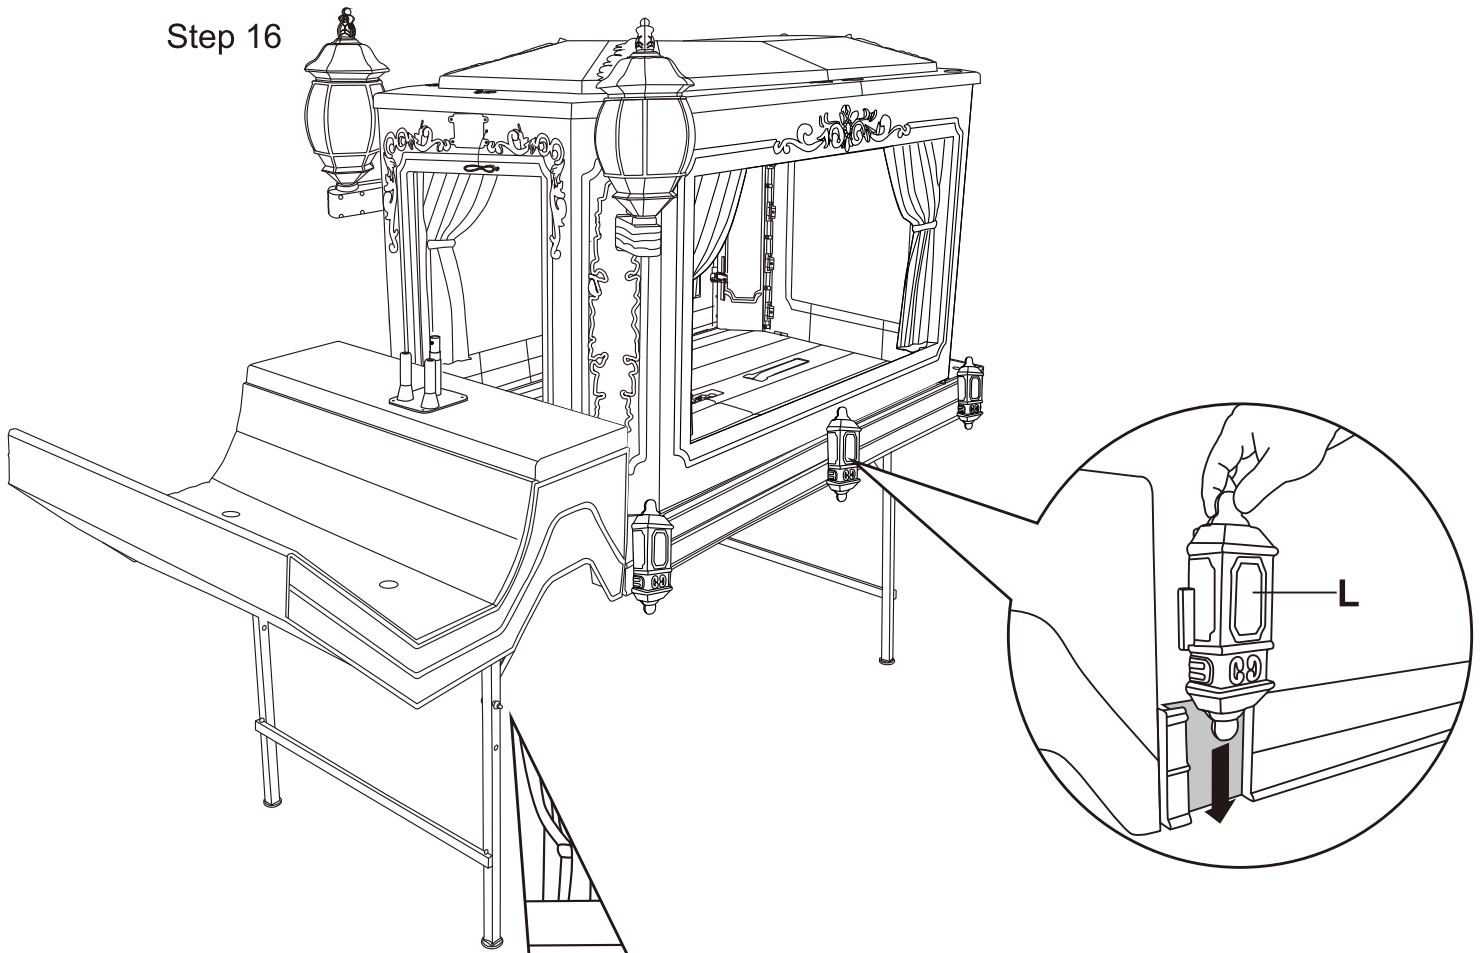


  
Step 17

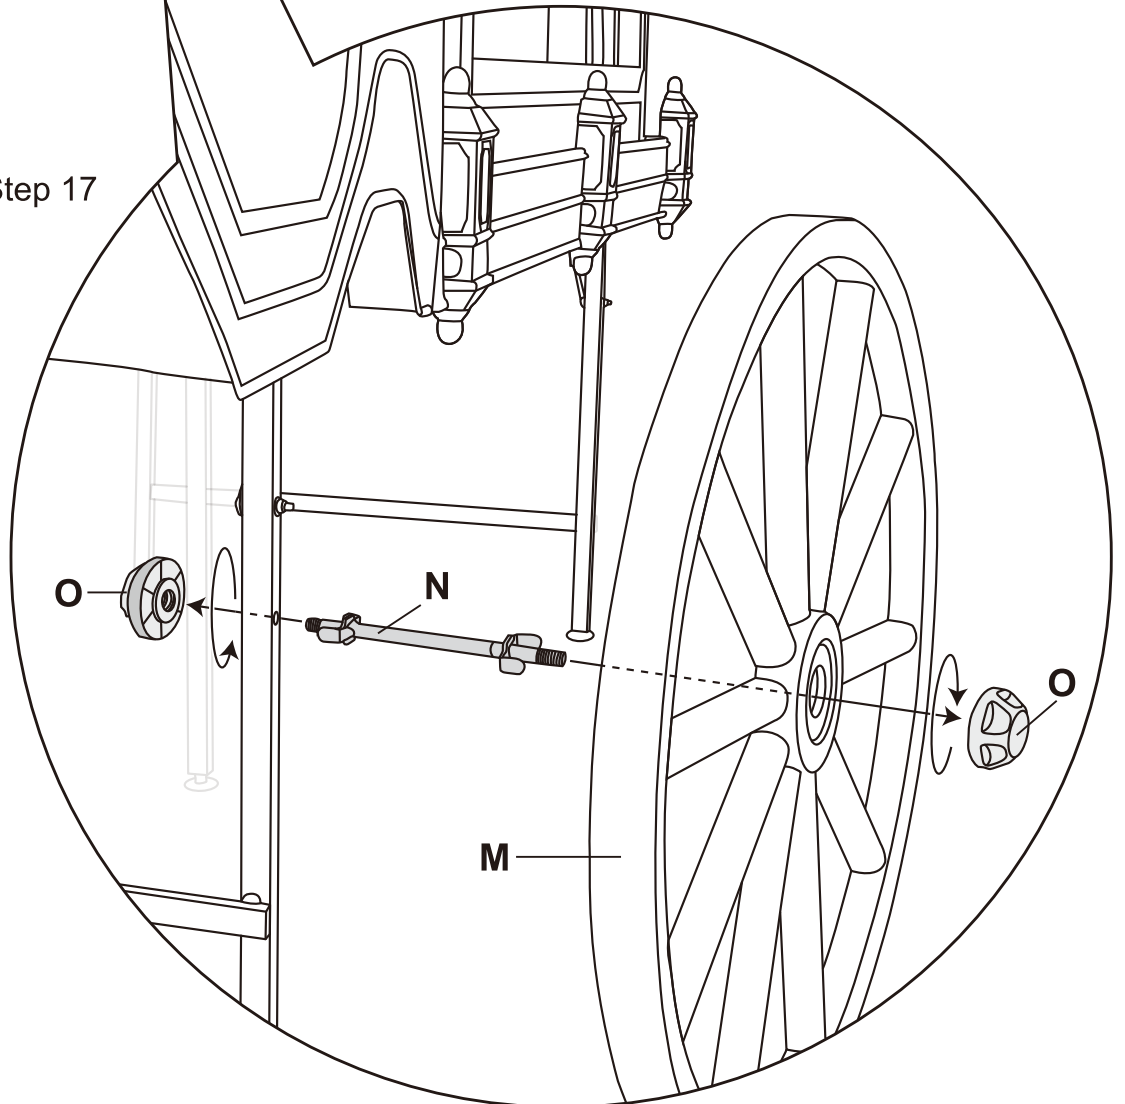

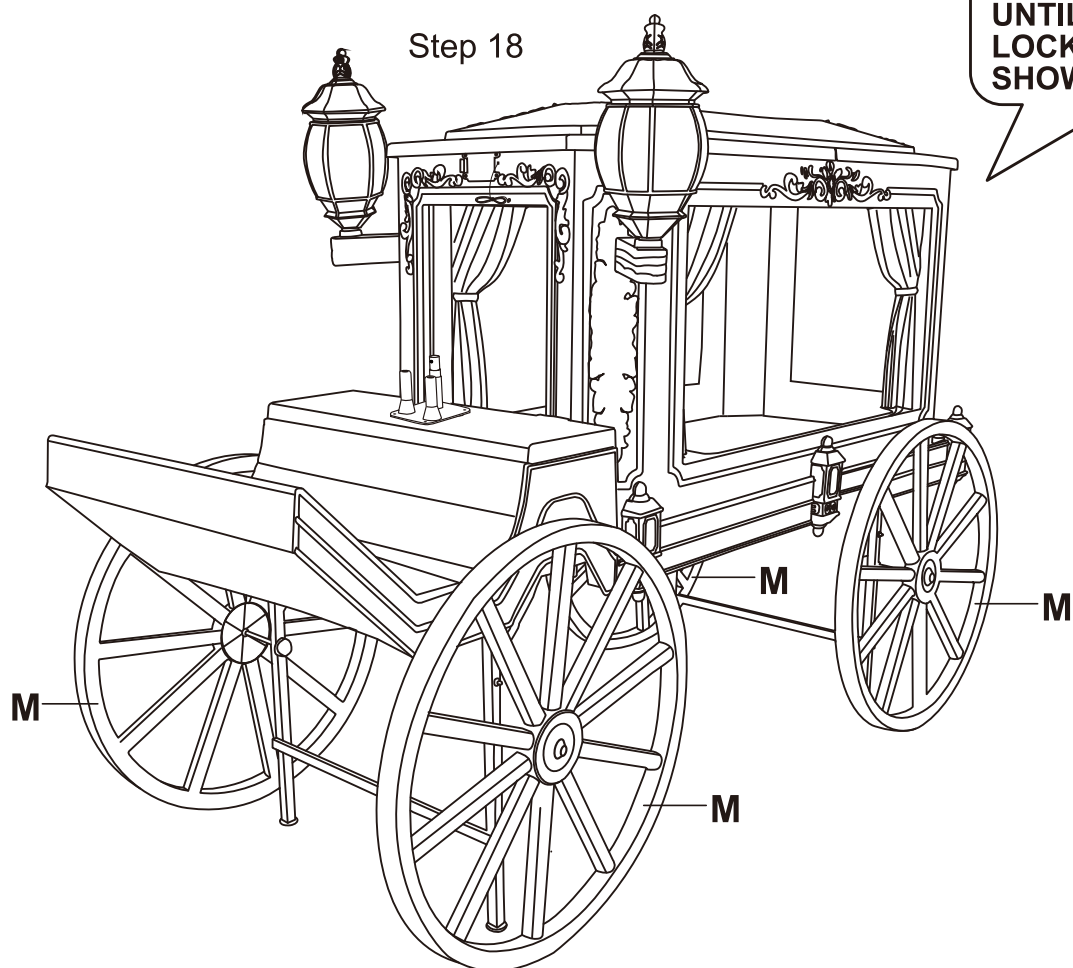


  REPEAT THE PROCESS
ON THE OTHER WHEELS
UNTIL ALL 4 WHEELS ARE
LOCKED INTO PLACE, AS
SHOWN

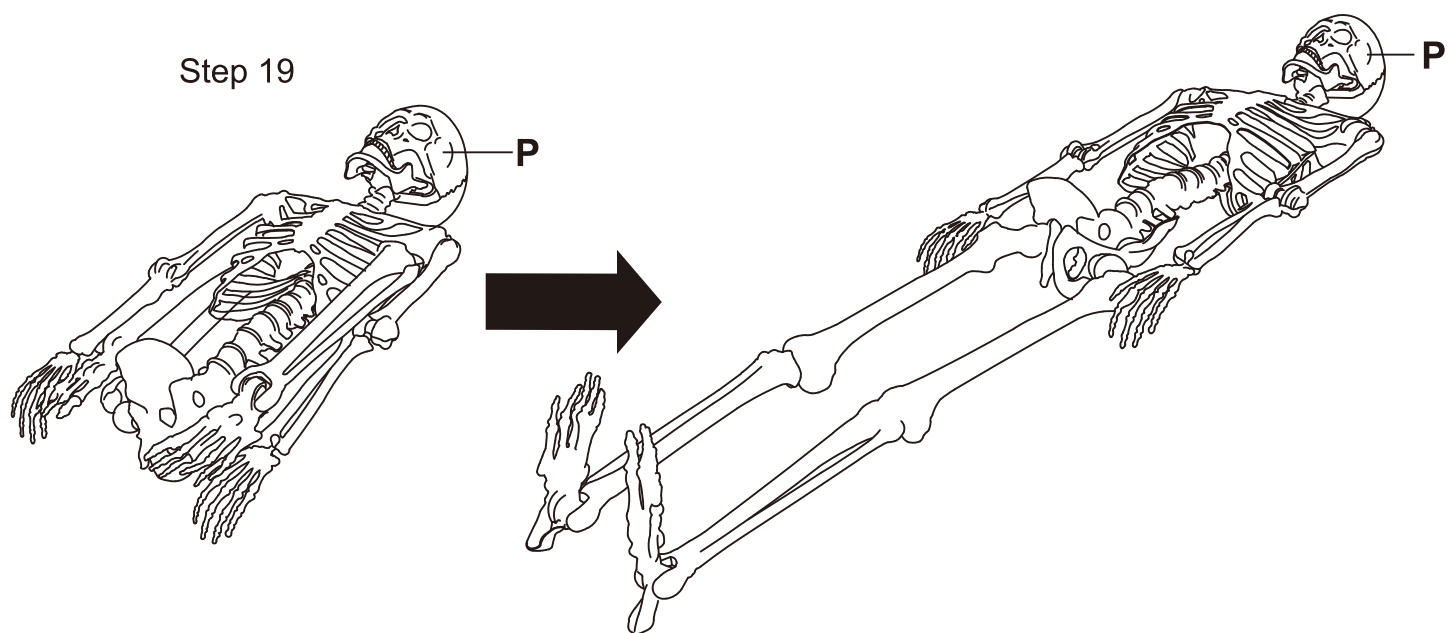


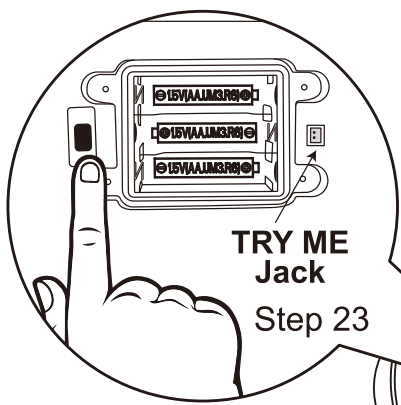

 
Turn switch to ON
position located in the
front of the Carriage
Panel (Parts F)

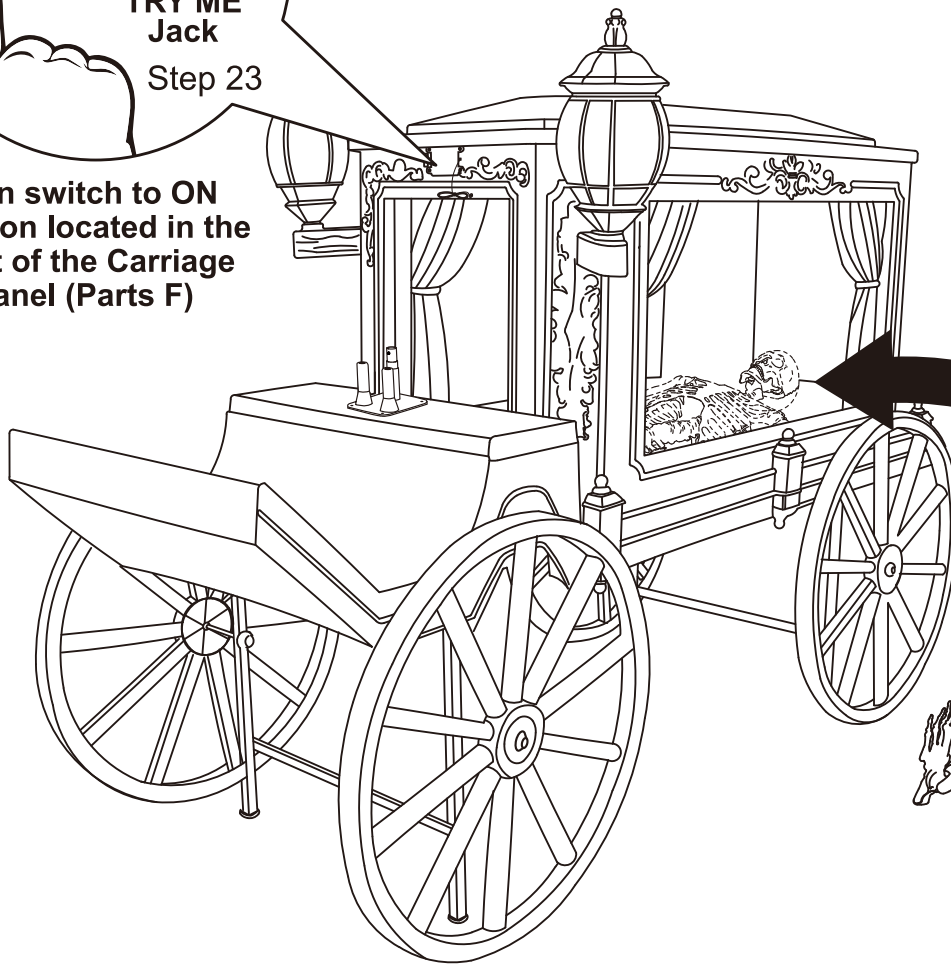

 
Step 20

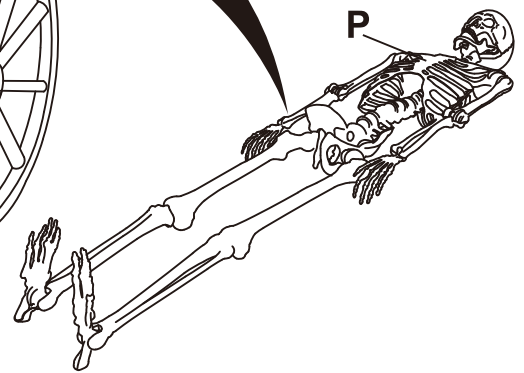

 
Step 21

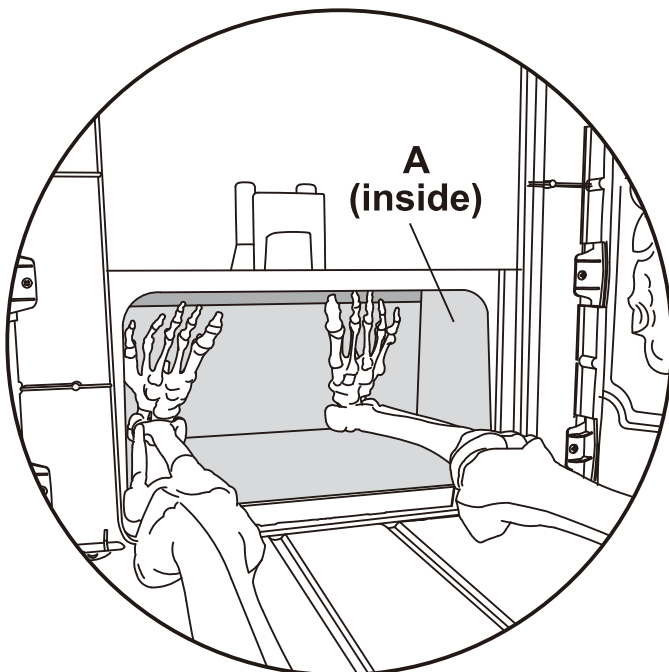

 
Step 22

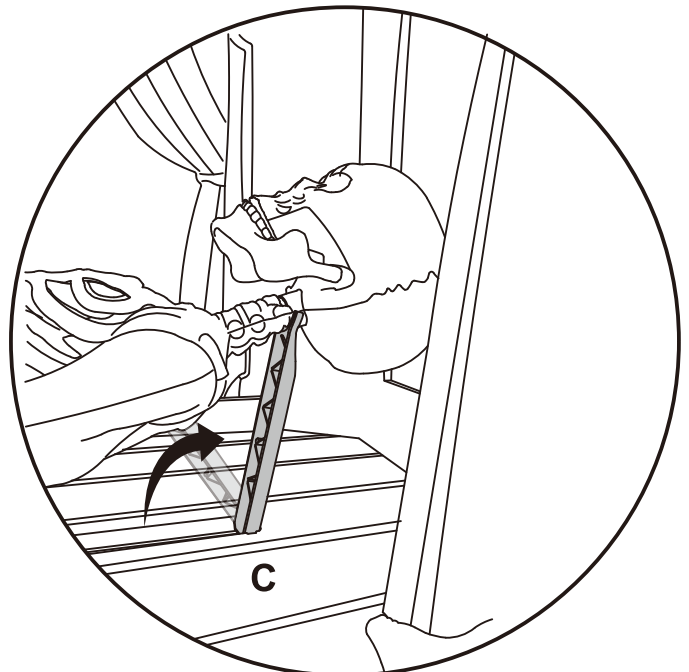

 
Step 24

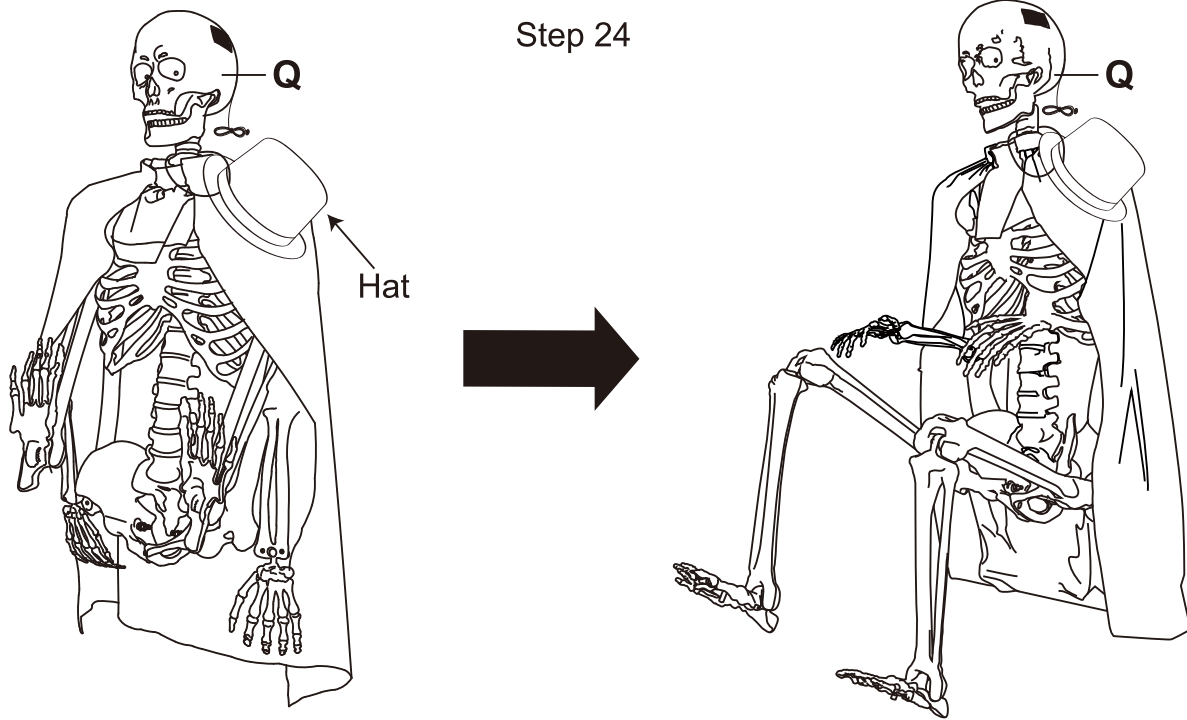

 
Step 25

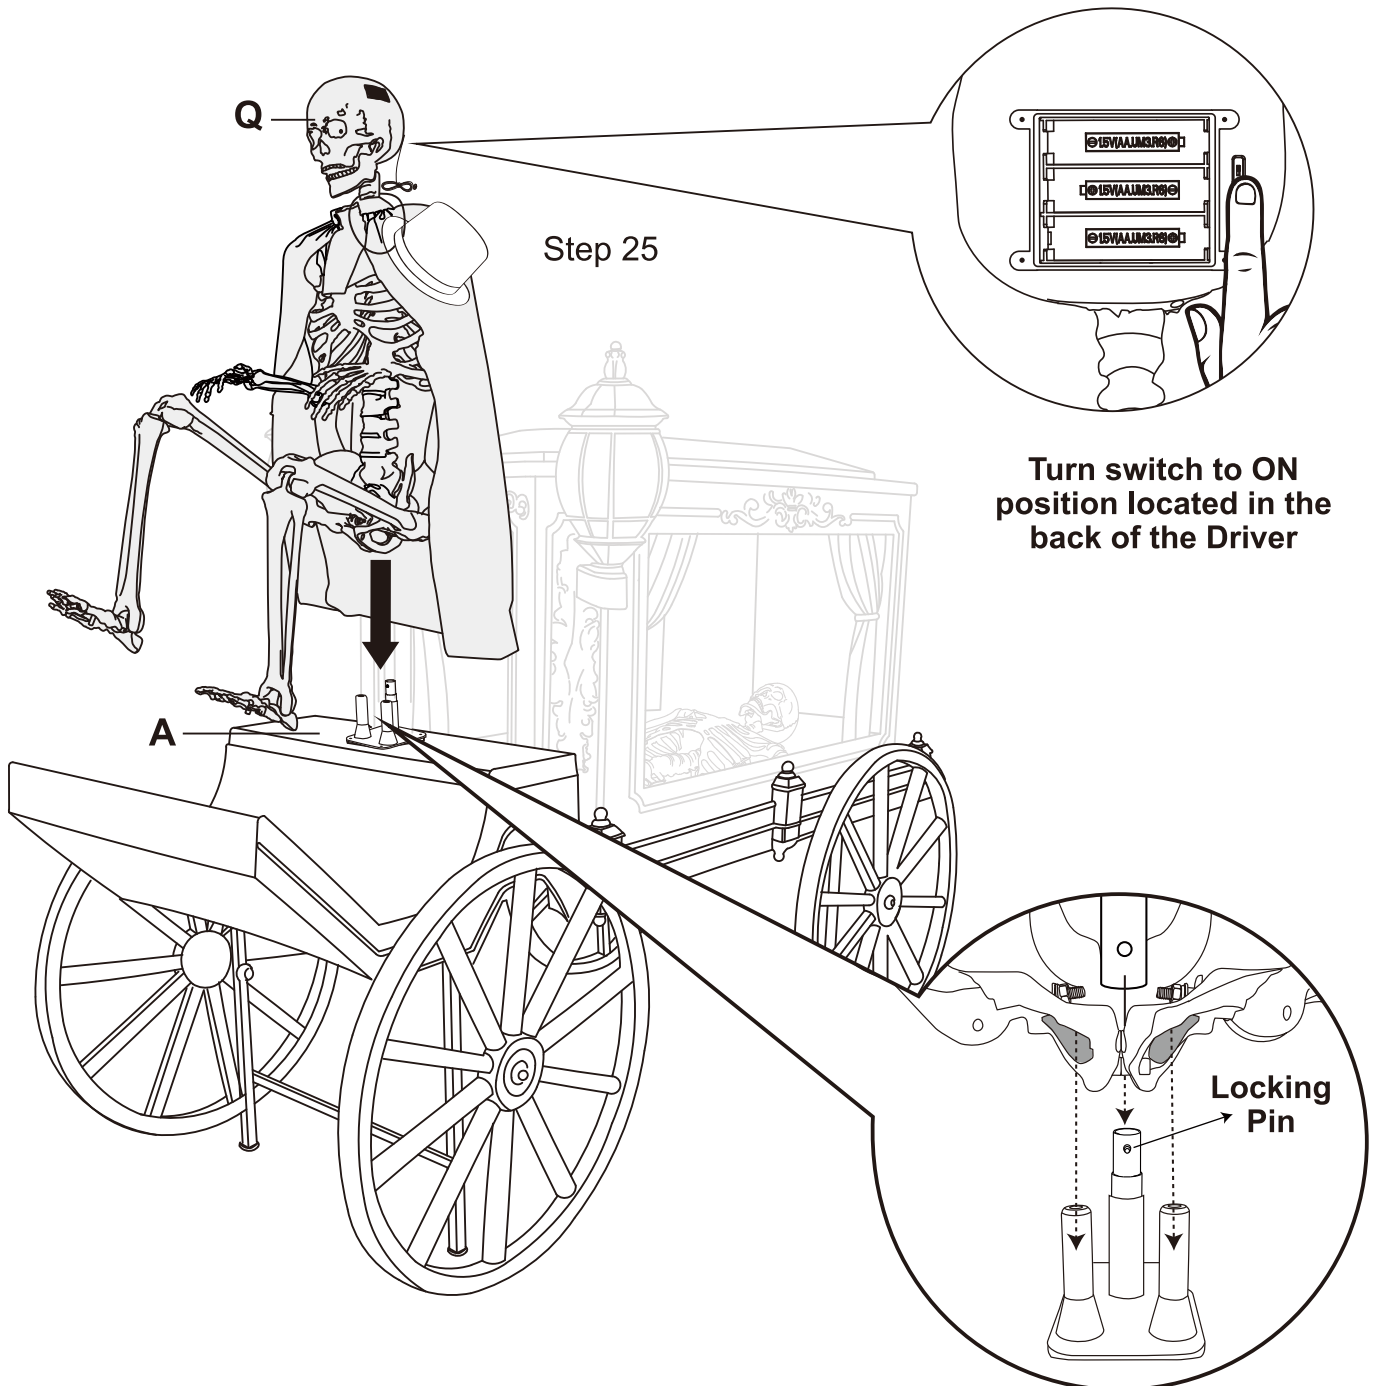

 
Step 26

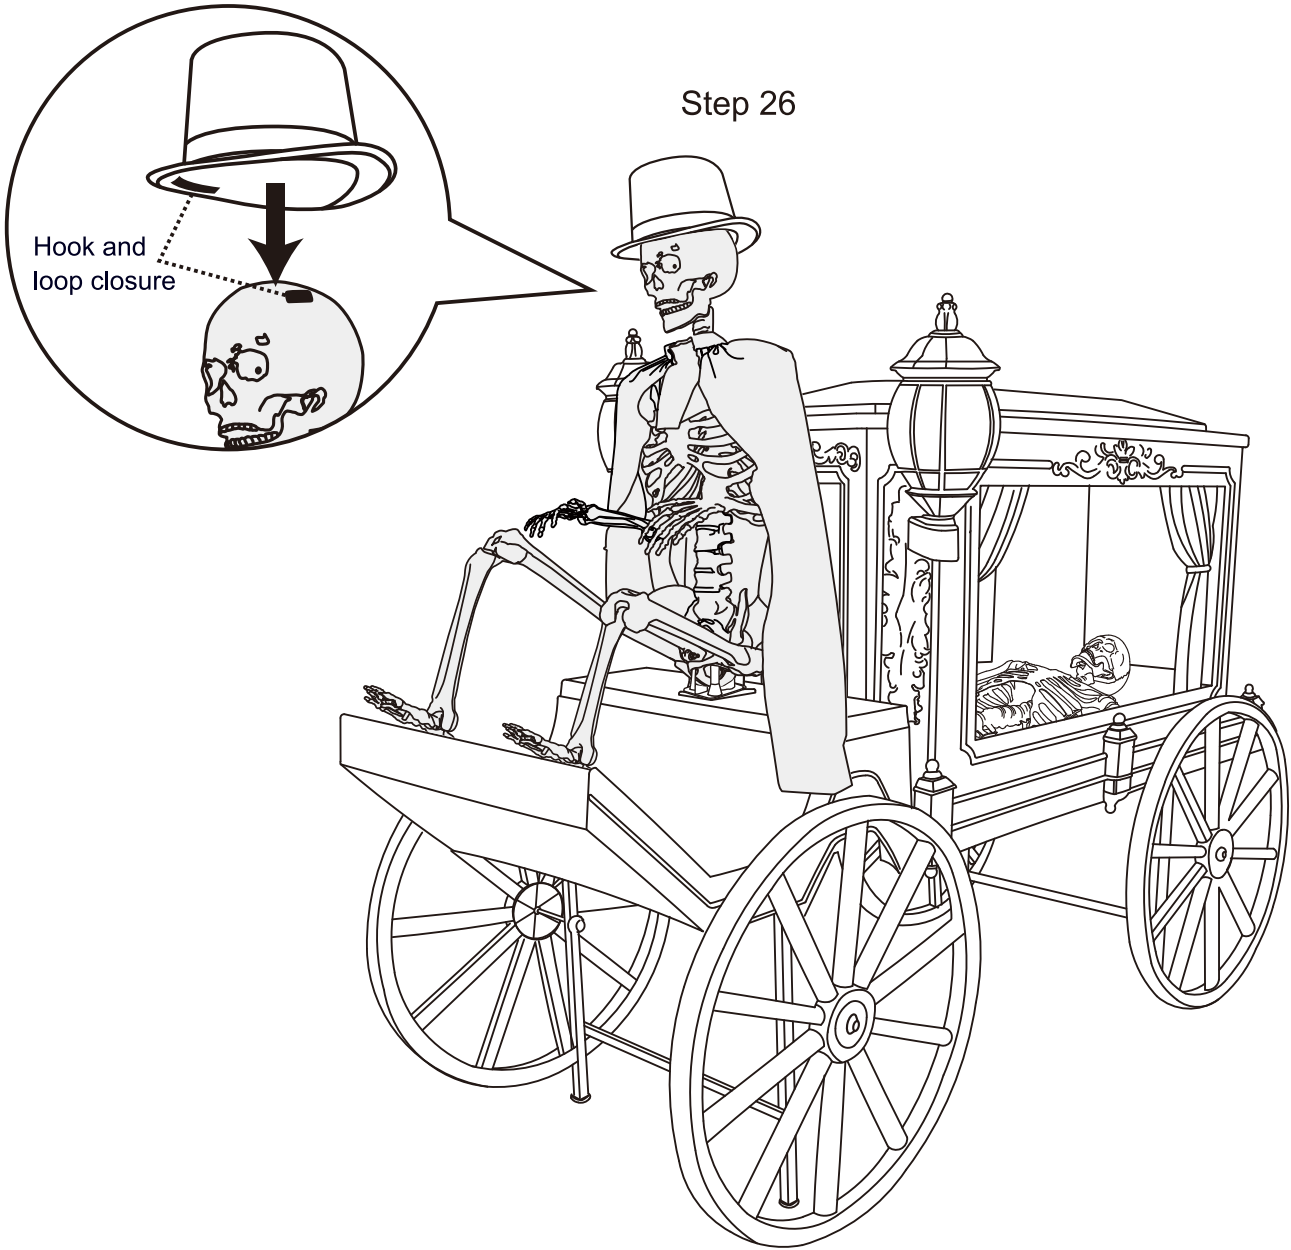

 Step 27

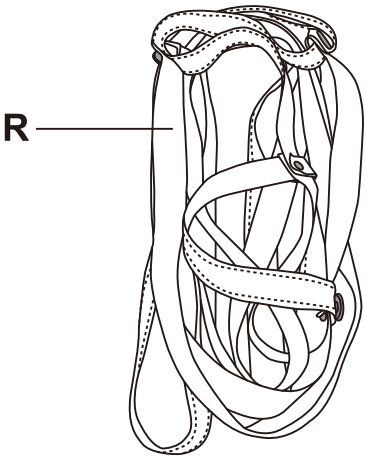

Bridle



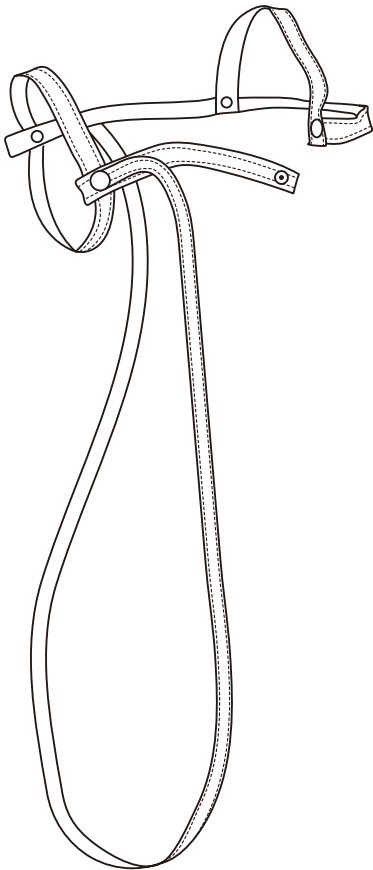 


HOW TO ATTACH THE BRIDLE INTO THE SKELETON PONY (SKELETON PONY NOT INCLUDED)

Step 28



Step 29

   Step 30

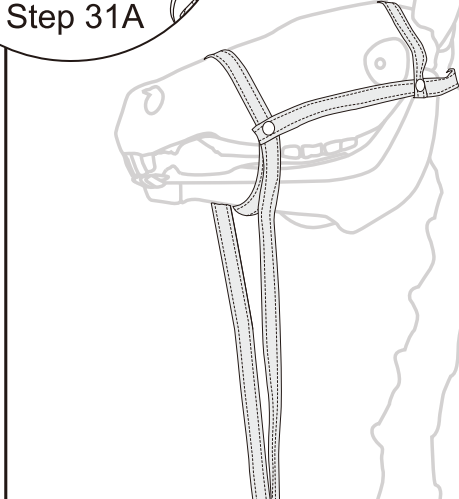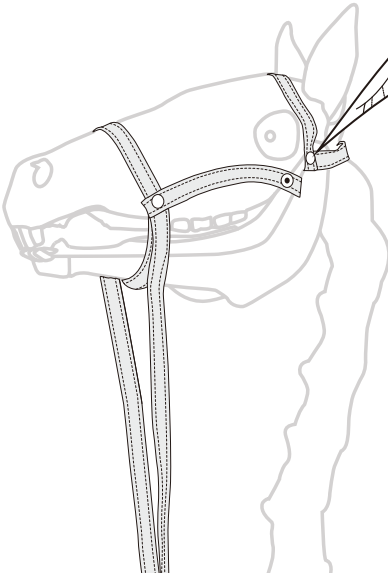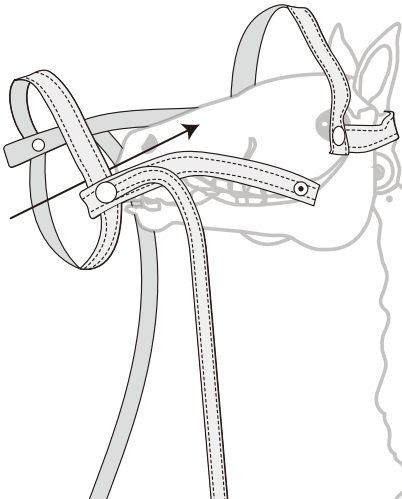

Step 31

  Attach the bridle into the Driver's hand

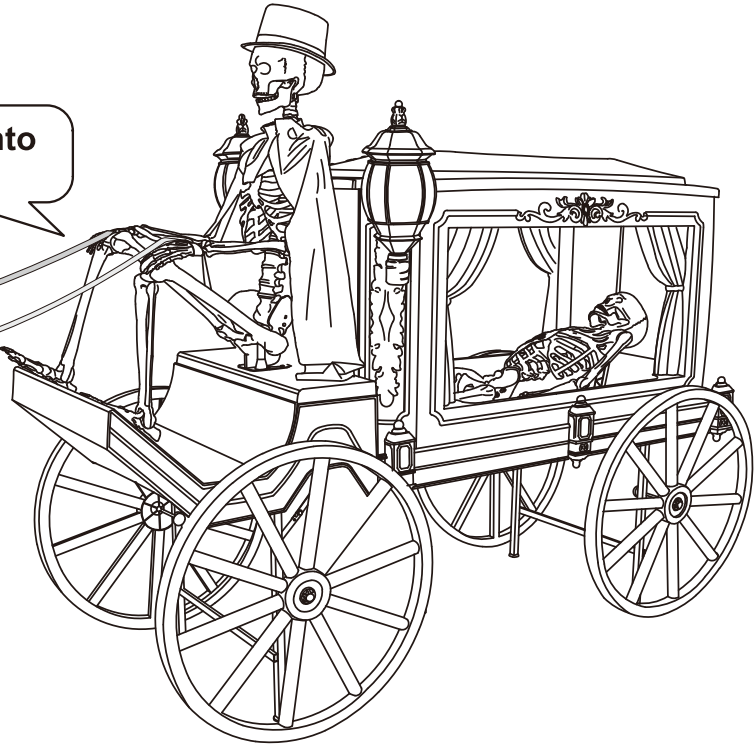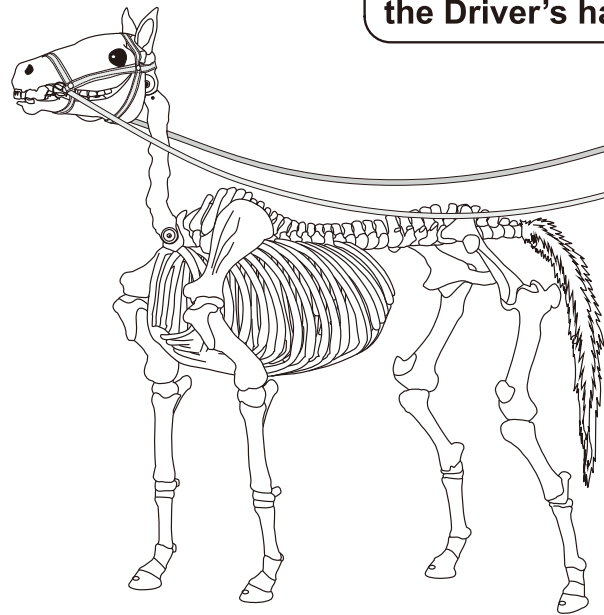

SKELETON PONY NOT INCLUDED

BATTERY REPLACEMENT & ITEM FUNCTION FOR HEARSE:

Battery-powered. Requires 3 “AA” batteries for Hearse (included).

1. Remove the battery case cover, which is located on the product. unscrew the safety screw and then remove the battery compartment cover.
2. Clean the battery contacts and also those of the device prior to battery installation.
3. Insert new 3 “AA” batteries with correct polarity and replace cover and safety screw.
4. The ON/OFF switch is located on the battery case. Place the switch into the “ON” position to activate the LED lights and the timer feature. When the timer feature is activated, the Hearse will automatically turn lights ON for 6 hours and will shut OFF for 18 hours. Switch to the OFF position to activate the TRY-ME feature and then press the TRY-ME button for a demonstration.
5. Replace batteries if the light begins to dim.

BATTERY REPLACEMENT & ITEM FUNCTION FOR DRIVER:

Battery-powered. Requires 3 “AA” batteries for Driver (included).

1. The battery case is located on the back of the head.
2. With small screwdriver, remove safety screw on battery cover.
3. Remove cover and insert (3) AA batteries in correct polarity.
4. Replace cover and safety screw.
5. The ON/OFF switch is located on the battery compartment. Move switch to ON position for sound activated mode. Clap your hands or make a loud noise to activate LED lights and motion and play a full version of sounds. Switch to the OFF position to activate the TRY-ME feature. Press the TRY-ME button for a short version demonstration.
6. Replace batteries if movement slows, light becomes dim or sound becomes distorted or faint.

TROUBLESHOOTING:

Problem	Solution
The Hearse and Lantern lights does not work	1. Check if the positive and negative terminals of the battery are installed correctly.
	2. Check whether the battery is drained. Replace the new batteries and try again.
	3. Check the ON/OFF switch is located in the "ON" position.
	4. Check all wire connections.
The Driver's sound sensor does not work	1. Check if the positive and negative terminals of the battery are installed correctly.
	2. Check whether the battery is drained. Replace the new batteries and try again.
	3. Check the ON/OFF switch is located in the "ON" position.
	4. Check if the triggered sound is too far from the product, please keep the distance between the sound and the horse at 39.5 in (100cm).
	5. Check if the triggered sound is too small, please activate the product with a trigger sound of more than 90 decibel.
If you are still experiencing problems with the product please call 1-877-527-0313 for further assistance.	

DISTRIBUTED BY:
HOME DEPOT
2455 PACES FERRY ROAD
ATLANTA, GA 30339