Hovering Ghost™ -- Installation & Operating Instructions

REMOVE ALL COMPONENTS FROM PACKAGING. KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.



Components:

- 1. Head with Sheet
- 2. Telescoping Module
- 3. Base
- 4. Feet

(save packaging for storage and reference)



Insert FEET into bottom of BASE (matching PART 1 to PART 1)



Attach TELESCOPING MODULE to BASE and twist to lock (matching PART 2 to PART 2)



Insert wire labeled PART 3 into iack labeled PART 3



together

Connect wires labeled PART 5

and press firmly until seated well (PARTS should "click" together)

Insert HEAD with SHEET

connection into receptacle

on TELESCOPING MODULE (matching PART 4 to PART 4)





Insert fresh new alkaline batteries into battery compartment on BASE or, connect DC adapter



Attach velcro tabs on sheet to velcro tabs on FEET



Spread sheet out & bend arms into a "U" shaped position as shown

Turn switch on top of BASE to ON to operate in Timer/Sound mode (ghost will function with 2 minute breaks between cycles - or, clap during 2 minute break to instantly start ghost playing again). Leave switch in OFF position when not in use.

Optional Footpad Setup

Follow initial installation instructions first.

- 1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on the base.
- 2. Place the switch on the base into the 'FOOTPAD' position to enable FOOTPAD activation.
- 3. Step on FOOTPAD to activate the scary sequence.

*footpads are sold separately and can be purchased at www.tekkytoys.com

AWARNING
DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETLY FINISHED ASSEMBLY.


Powered by Battery (4"AA") or 6V 2A DC Adapter (optional) Optional footpad and/or DC Adapter are sold separately and can be purchased at www.tekkytoys.com

Requires 4"AA" Batteries

ALL NEW MATERIALS PLASTIC, POLYESTER

Surface Washable only. Hovering Ghost is a trademark of Tekky Toys. Copyright © 2008 Tekky Toys. All Rights Reserved MADE IN CHINA

HOVERING GHOST[™] Manufactured and distributed by Tekky Toys, Orland Park, IL 60467

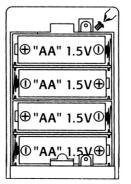

Battery compartment is located on base.

Be sure to insert the batteries correctly as shown. Do NOT dispose of batteries in fire, batteries may explode or leak.

NOTICE REGARDING BATTERIES:

This product may be shipped with batteries for in-store demonstration purposes ONLY.

Tekky Toys does NOT guarantee the life of any batteries used for demonstration.

Tekky Toys recommends the consumer REPLACE any demonstration batteries present with fresh cells to ensure proper operation and enjoyment.