**Installation and Operating Instructions** 

Make sure to seat the Insane Serial Killer on a level chair when setting it up! If the BASE is not level, it will NOT function correctly.


Insert POLE into back of clothing and snap-lock into the base of the neck (match up B to B). See Fig. 1.

Note: Align the snap-locks with the snap-holes and press firmly until locked in place.

2) Insert POLE into BASE (match up A to A).

See Fig. 2.
Note: Align the snap-locks with the snap-holes and press firmly until locked in place.

- Wrap Velcro straps under chair, pull very taut, and connect to each other. Note: Velcro must be connected very tight so BASE does not move.
- Tie the loose ends of the rope that are attached to his legs around the chair legs to give the appearance that he is bound to the chair.
- Insert 4 "AA" brand new, fresh alkaline hatteries into the battery compartment located on the bottom of the BASE, or connect a 6V 2A DC adapter to the jack located on top of the BASE (see Fig. 3). Note: DC adapter sold separately and can be purchased at www.tekkytoys.com.
- Turn switch (on top of BASE) to the ON position to operate in motion/sound-activation mode. Item will operate when motion or a loud sound is detected.
- 7) Zip up the zipper near the back of BASE (see Fig. 4).

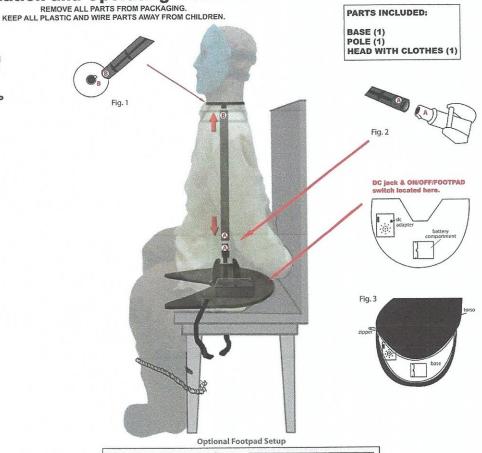

Follow initial installation instruction first.

Follow initial installation instruction first.

Connect wire from optional footpad to the jack labeled FOOTPAD located on the base.

Place the switch on the base into 'FOOTPAD' position to enable FOOTPAD activation.

Step on FOOTPAD to activate the scary sequence.

When plugging in, make sure pins line up properly with holes on plug. Align plug, groove side down, with the notch.

Caution

Caution!
Not aligning the plug to jack properly may cause p
DO NOT use excessive force when inserting jack. ment damage to Foot Pad lack of your item

PLUG

Footpads are sold separately and can be purchased at www.tekkytoys.com.

DO NOT RETURN THIS ITEM TO THE STORE
If you are experiencing technical difficulties,
please go to www.tekkytoys.com for assistance.

best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during erse weather (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32 fs). Tekky Toys recom-dud using fresh alkaline batteries for best operating performance.

gs:
TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY. NO WEIGHT SHOULD BE PLACED ON THE ITEM.
THEN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY. NO WEIGHT SHOULD BE PLACED ON THE ITEM.
THEN COMPLETED FOR THE STREET OF THE STREET

This item is not a toy. For decorative purposes only. Small parts, choking hazard. This product is intended for use by person 15 years of age and older. Not intended for use by children 14 years of age and younger.

Requires 4 'AA' Batteries

Powered by Battery (4 'AA') or 6V 2A DC Adapter (optional) Optional footpad and/or DC Adapter are sold separately and can be purchased at www.tekkytoys.com

INSANE SERIAL KILLER is a trademark of Tekky Toys. Copyright ©2009 Tekky Toys. All Rights Reserved. FILLING: ALL NEW MATERIALS. PLASTIC, POLYESTER, WIRE SURFACE WASHABLE ONLY.

MADE IN CHINA



Manufactured for and distributed by Tekky Toys, Orland Park, IL 60467

BATTERY INFORMATION:
1. Do not recharge non-rechargeable batteries.
2. Do not dispose of batteries in fire; they may leak or explode.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
 4. Do not mix old and new batteries.

4. Do not mix old and new batteries.
5. Use only batteries of the same or equivalent type as recommended by the manufacturer.
6. Be sure to insert batteries with correct polarities and always follow manufacturers' instructions.
7. Remove exhausted batteries from product.
8. If product is unused for a long period of time, clean the battery contacts and also those of the devices prior to installation.
9. Do not short-circuit supply terminals.
10. Keep these instructions for the future because they contain important information.

## SAFETY WARNING:

Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

ADULT SUPERVISION IS RECOMMENDED WHEN REPLACING BATTERIES.