

JOHN DOE™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

Setup Instructions: John Doe

PARTS:

1. Module
2. Back Foot
3. Clothing with head and feet
4. Upper pole
5. Lower pole
6. Key

1.) Insert BACK FOOT into MODULE as shown in illustration 1a.

(Match A to A)

NOTE: Press to make sure FOOT snaps fully into MODULE.
To remove FOOT, insert plastic key (included) into holes on bottom to release locks, and pull.

2.) Insert upper pole through the bottom of clothing and snap-lock into the base of neck. (Match up B to B)










3.) Insert lower pole and snap-lock into the module. (Match up C to C)

4.) Snap-lock upper pole to lower pole.

5.) Insert 4 AA batteries into the battery compartment located on the module or connect DC adapter. (sold separately)

6.) Find a flat, stable area to place your John Doe. (make sure there are no obstructions to hinder the upper body movement) Extend feet and legs away from MODULE and spread out the sheet for a realistic look.

NOTE: Turn switch on top of MODULE to ON to operate in Timer/Sound mode (John Doe will function with 1.5 minute breaks between cycles - or, clap during 1.5 minute break to instantly start playing again). Leave switch in OFF position when not in use.

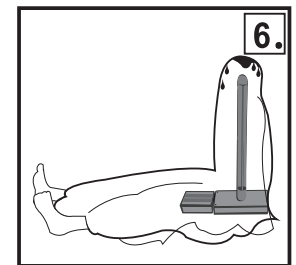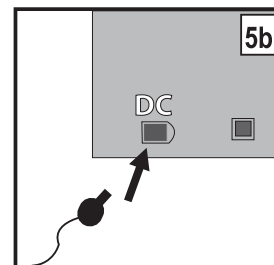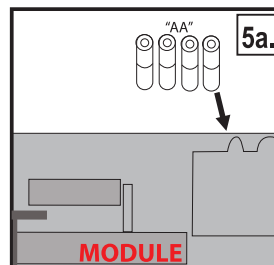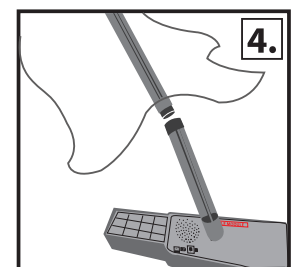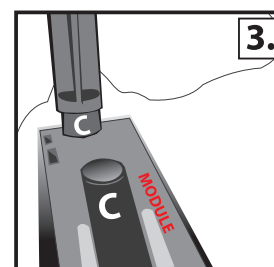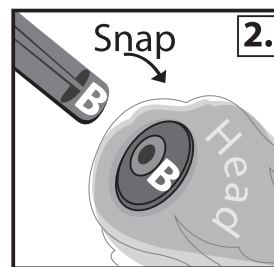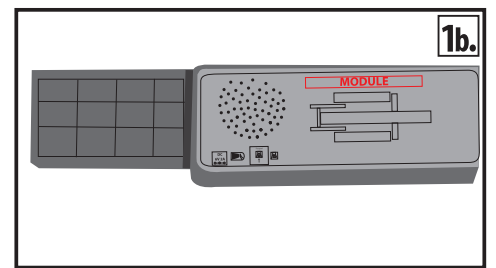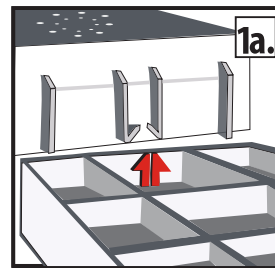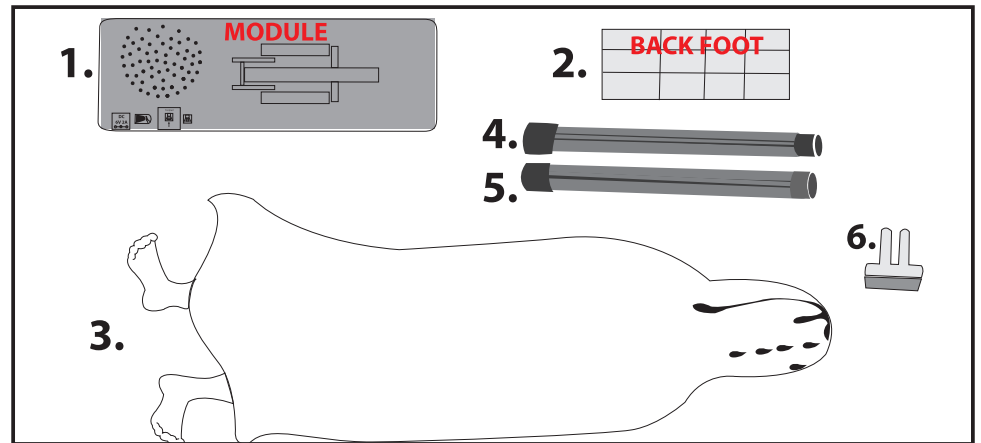

Optional Footpad Setup

Follow Steps 1 through 5 on initial installation first.

1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence. (go to instruction #6 to continue setup)


NOTE:

When plugging in, make sure pins line up properly with holes on plug. Align plug, groove side down, with the notch.

CAUTION!

Not aligning the plug to jack properly may cause permanent damage to Foot Pad jack of your item. Do not use excessive force when inserting plug.

*Footpads are sold separately and can be purchased at www.tekkytoys.com

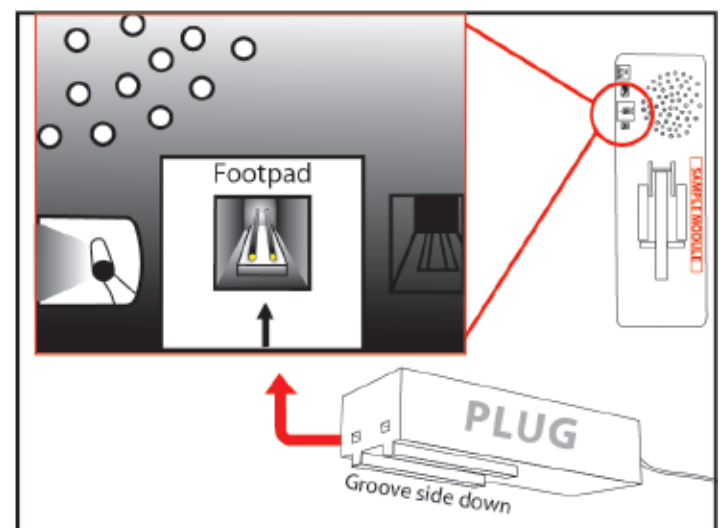

****No weight should be placed onto item****

Warning!

This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY. Stay clear of item while operating.

****For indoor use only****



visit us: tekkytoys.com

Requires 4 'AA' Batteries or optional DC Adapter (6V 2A)
Surface washable only.
ALL NEW MATERIALS:
PLASTIC, POLYESTER,
POLYESTER FIBER

JOHN DOE
is a trademark of Tekky Toys.
Copyright © 2011 Tekky Toys.
All Rights Reserved.

SMART PHONE SCAN SETUP VIDEO



Multiple Item Trigger:

This jack is used for future items that will work in conjunction with other items employing our Multiple Item Technology. (No items currently use this function, see our website for more information on when this will be released.)



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkytoys.com for assistance.