

LED LIGHTED HANGING GHOST™

OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

1. Carefully remove and discard all packaging including pull tab on battery compartment located on back of the LED LIGHTED HANGING GHOST™.
2. Remove demo batteries and insert 3 brand new AG13/357/LR44 button cell batteries into the battery compartment.
3. Place switch on back of GHOST to the “ON” position for colorful lights display!


NOTE: Keep the switch in the “OFF” position when not in use.

⚠ WARNING! CHOKING HAZARD—Small Parts.

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.

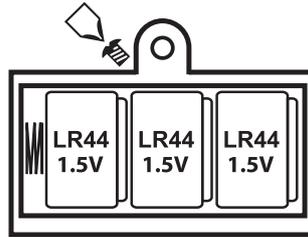

REQUIRES (3) AG13/357/LR44 BUTTON CELL BATTERIES

(Included for demo purposes only)

ALL NEW MATERIALS:

Polyester/PVC/
Wire/Paper Card/
Polyethylene Foam

MADE IN CHINA

TekkyDesign.com

BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

Item #90137. LED LIGHTED HANGING GHOST™ is a trademark of Tekky.
Copyright © 2019 Tekky. All Rights Reserved.