


# LUNGING PUMPKIN CARVER

## INSTALLATION AND OPERATING INSTRUCTIONS









KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

SMART PHONE SCAN  
SETUP VIDEO

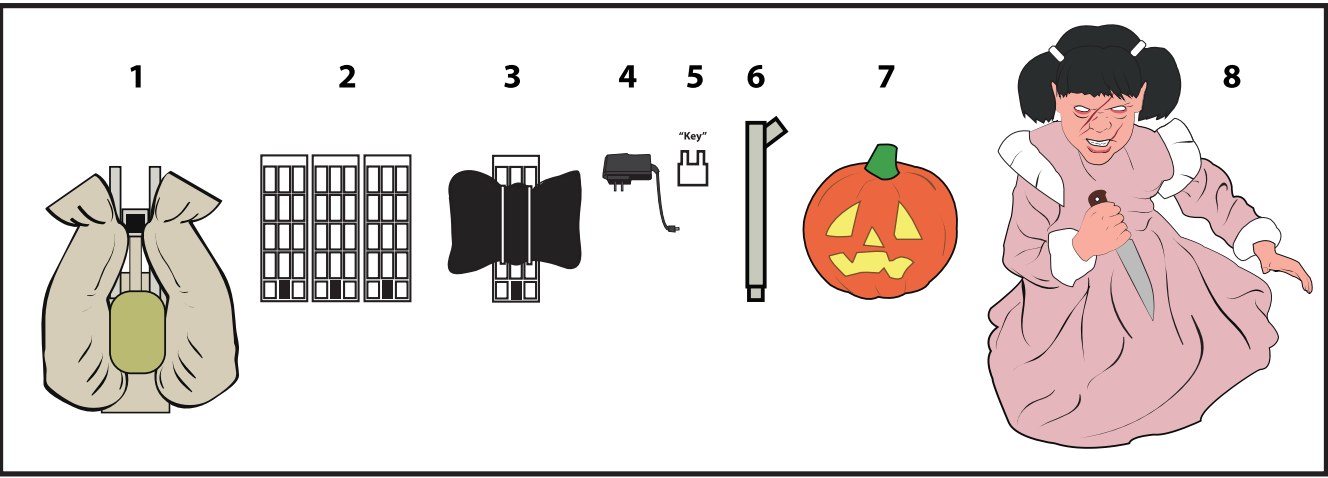

- Parts**
1. MODULE
  2. FEET (3)
  3. BACK FOOT WITH WEIGHT
  4. 6V2A ADAPTER
  5. FOOT REMOVAL KEY
  6. POLE
  7. PUMPKIN
  8. BODY & HEAD


1. Insert FRONT FOOT AND SIDE FEET into the bottom of MODULE.  
(Match A to A) Snap to lock.
2. IMPORTANT: Press to make sure each FOOT is flush with MODULE.  
To remove FOOT, insert plastic PLASTIC FOOT REMOVAL KEY  
(included) into holes on bottom to release locks, twist and pull.
3. Insert BACK FOOT WITH WEIGHT into the bottom of the MODULE.  
(Match B to B) To avoid damage do not pick item up while  
BACK FOOT is attached.
4. Push in circular locking pin located beneath the dress on the BODY & HEAD.  
Insert pole and release locking pin when pole is firmly seated. (Match C to C)
5. Push in circular locking pin located on the module pole and  
insert pole connected to the Head & Body. Release locking  
pin when Head & Body are firmly seated. (Match D to D)
6. Insert wire from MODULE into wire coming from HEAD & BODY.  
(Match E to E)
7. Place PUMPKIN in front of carver, then insert wire from MODULE into  
wire coming from PUMPKIN. (Match F to F)
8. Connect 6V2A ADAPTER (included) or insert 4 AA alkaline batteries into the  
battery compartment located on the BASE.  
Turn the switch to the ON position to operate in Sound or IR SENSOR  
activation mode. Adjust volume control knob as needed. Make a loud  
sound (clap), or move in front of the item to activate. Turn item OFF when not in use.

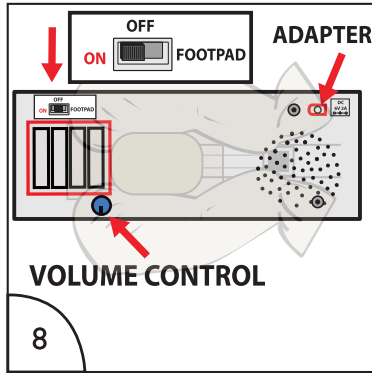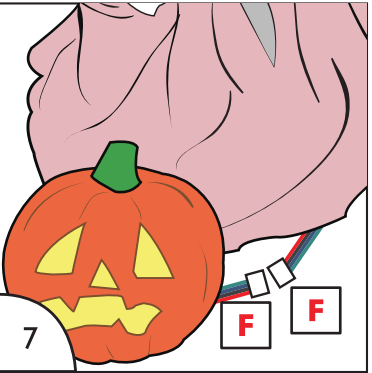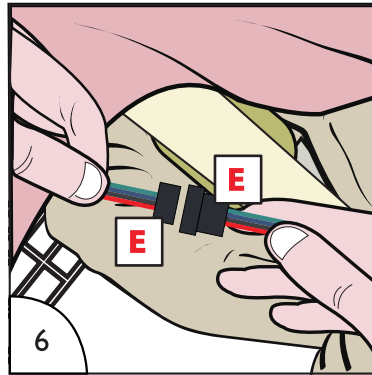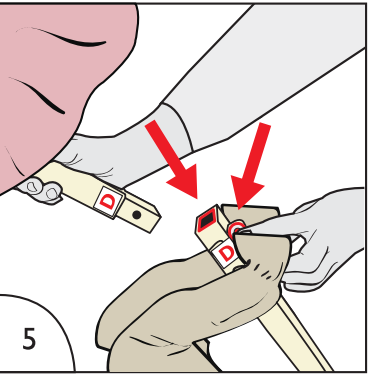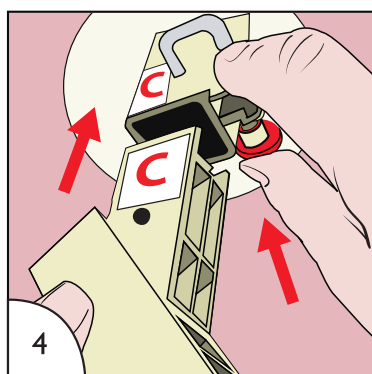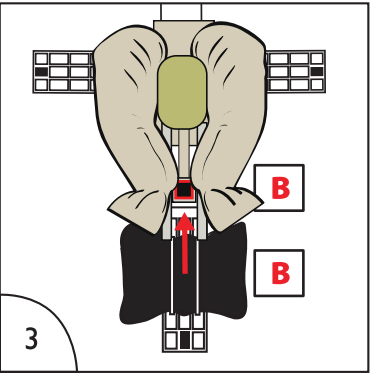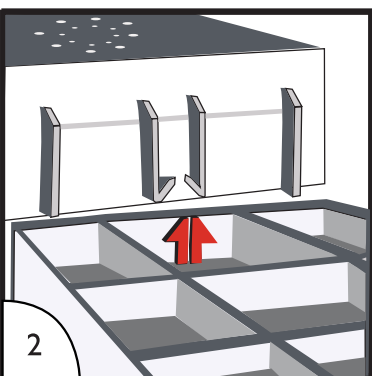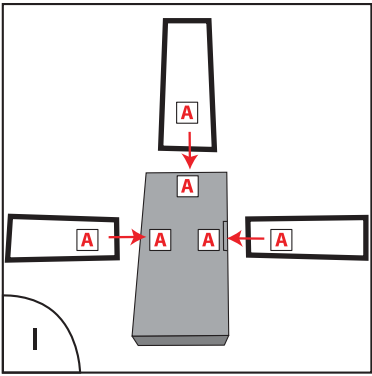

**IR SENSOR NOTE:** The sensing distance and the ambient temperature are directly related.  
When the ambient air temperature is cooler (farther from body temperature (98.6° F)), the  
sensor distance will be longer. When the ambient air temperature is warmer  
(closer to body temperature (98.6° F)), the sensing distance will be shorter.

9. Position dress around MODULE. Attach dress to FEET with hook and loop fasteners.  
Position the hands and arms to match illustration and position  
pumpkin out in front of the Pumpkin Carver with enough  
distance for the item to activate optimally.

### Optional Footpad Setup


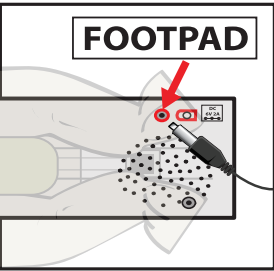


- Follow steps #1 through 7 on initial installation first.
1. Connect the cable from the optional footpad to the jack  
labeled FOOTPAD located on the MODULE.
  2. Place the switch on the MODULE into the 'FOOTPAD'  
position to enable FOOTPAD activation.
  3. Step on FOOTPAD to activate the scary sequence.  
(go to instruction #8 to continue setup)
- \*Footpads are sold separately and can be purchased at  
[www.tekkyaccessories.com](http://www.tekkyaccessories.com)


### Optional External Speaker Setup Instructions

EXTERNAL SPEAKER IS NOT INCLUDED.  
MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on top of the  
base.
2. Use volume knob on external speaker to control volume levels.

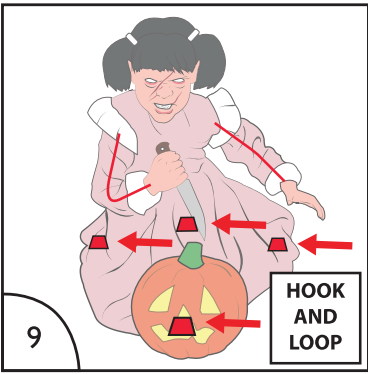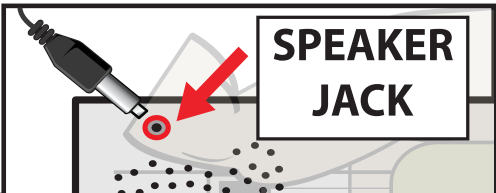

FOR FOOTPADS, ADAPTERS, AND ALL OTHER  
ACCESSORIES, PLEASE VISIT:  
[www.tekkyaccessories.com](http://www.tekkyaccessories.com)

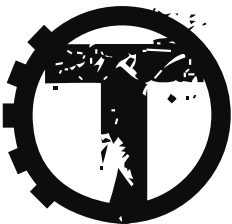

**TEKKY**  
[www.tekkydesign.com](http://www.tekkydesign.com)

Surface Washable Only.

ALL NEW MATERIALS :  
POLYESTER FIBERS, POLYURETHANE FOAM, SAND

Requires 4 'AA' Batteries (Not included)  
or 6V 2A DC adapter (included)

LUNGING PUMPKIN CARVER is a trademark of Tekky.  
Copyright © 2016 Tekky. All Rights Reserved.  
MADE IN CHINA

### Outdoor Warning

For best overall performance, we recommend you operate your item in a sheltered outdoor area.  
We also recommend you bring your item indoors during adverse weather conditions  
(extreme cold, strong winds and/or rain). This item operates best outdoors  
in temperatures above freezing (32°F).

### Battery Instructions and Cautions


- Use only the batteries recommended by the manufacturer.
- Remove batteries when not in use.
- Do NOT use rechargeable batteries.
- Be sure to insert the batteries with the correct polarity +/-.
- Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium or rechargeable.
- Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode. ADULT SUPERVISION RECOMMENDED WHEN CHANGING BATTERIES.

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard.**  
This product is intended for use by persons 15 years of age and older.  
Not intended for use by children ages 14 and under.

### WARNING

**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY  
FINISHED ASSEMBLY. STAY CLEAR OF ITEM WHILE  
OPERATING. DO NOT PLACE ITEM ON UNEVEN GROUND.  
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION**

### Battery Diagram

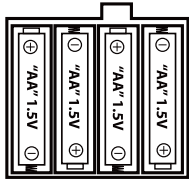

**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go  
to [tekkydesign.com](http://tekkydesign.com) for assistance.