


LIL ROCKING ROSIE

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN










WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED: STAY CLEAR OF THE PROP WHILE OPERATING

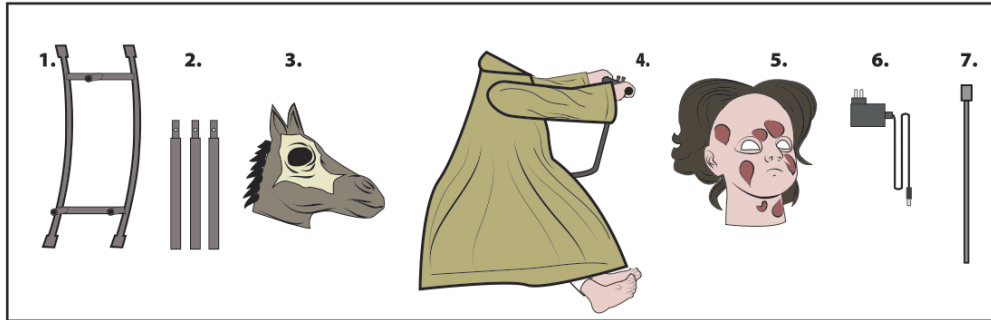

PARTS

1. BASE
2. SUPPORT POLES
3. HORSE HEAD
4. FRAME WITH CLOTHING
5. HEAD
6. 5.9V 2A ADAPTER
7. ZIP TIE

1. Attach three **SUPPORT POLES** to the **BASE**. Align the quick connect push button holes and snap lock them in place.
2. Attach **FRAME** to the **SUPPORT POLES**. Align the quick connect push button holes and snap lock them in place.
3. Attach hook and loop fastener located in the **DRESS** sleeve to the fastener located on the top of the hand.
4. Connect the wire from the **HEAD** to the control box wire located on the **FRAME**.
5. Lower the **HEAD** onto the **FRAME** and insert the plastic post below the neck into the top of the frame.
6. Attach the hook and loop fastener on the back of the **DRESS**.
7. Loop the supplied **ZIP TIE** through the holes at the base of the neck and loop the zip through the square of the frame and around the back of the frame. **DO NOT TIGHTEN.**
8. Lower the **HORSE HEAD** onto the **FRAME**. Line up the plastic post located on the bottom of the head and insert it into the **FRAME**. Pull the **ZIP TIE** tight around the frame.
9. Plug the **ADAPTER** into the control box located on the **FRAME**. Place the switch to the **ON** position to operate the item in constant motion. The item will activate, stop, and then repeat the sequence. Place the switch to the **ON 2** position, make a loud sound, "clap" to activate the item in sound/motion activation mode. Adjust the Volume Control knob as needed for sound.
Note: For best results, use Rocking Horse on a hard surface and keep all fabric away from moving parts.

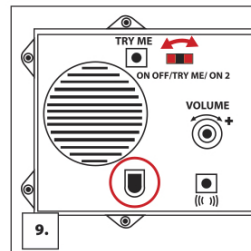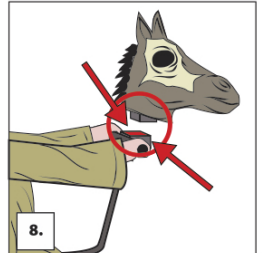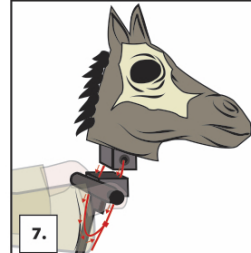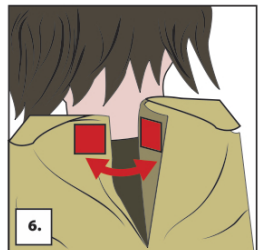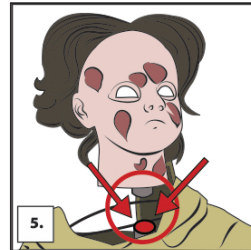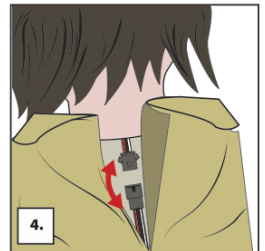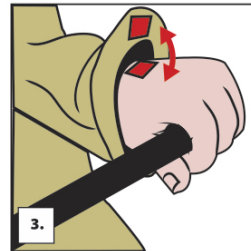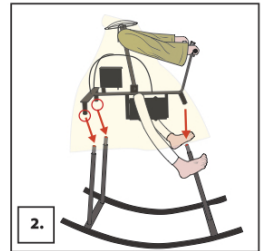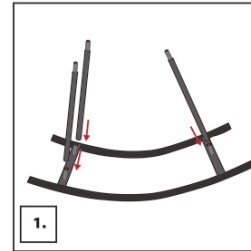


SMART PHONE SCAN SETUP VIDEO



OPTIONAL FOOTPAD SET UP FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Connect the cable from optional footpad.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation
3. Step on the FOOTPAD to activate the scary sequence!

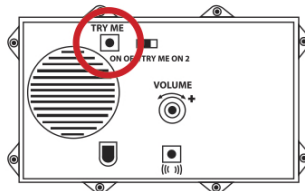

* Footpads, adapters and all other accessories are sold separately and can be purchased at www.tekkyaccessories.com

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION
**** FOR INDOOR USE ONLY****



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.



visit us at tekkydesign.com
Requires 5.9V 2A ADAPTER (included)

ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER
Surface washable only.
ROCKING HORSE
is a trademark of Tekky.
Copyright © 2018 Tekky.
All Rights Reserved.
MADE IN CHINA