

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

Lunging Haggard Witch



This item, when assembled by the following instructions, should take 15 minutes to assemble. Please follow the step by step guide and enjoy your Lunging Haggard Witch!

CARE AND STORAGE INSTRUCTIONS

For best performance, operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

WARNING







This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by the manufacturer.
2. Please assemble the item according to the instructions. Connect all wires according to their matching color.
3. Children should be supervised by adults. The item should not be grabbed, as it becomes a tipping hazard. Keep away from the adapter, as it heats up during operation.

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.


PARTS LIST

- A. Base
- B. Lower Support Poles x2
- C. Upper Support Poles x2
- D. Dress
- E. Hip Hoop
- F. Torso Frame
- G. Shoulder Frame
- H. Blouse
- I. Sensor
- J. Right Arm
- K. Left Arm
- L. Head
- M. Staff Poles X3
- N. Skull Topper
- O. Cape
- P. Hat

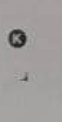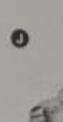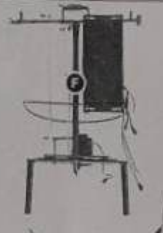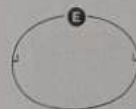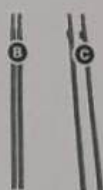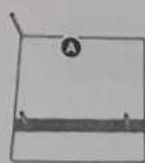


* Power Adapter Spec
Input: 100 - 240VAC 50/60Hz
Output: 5.9V 1.5A

Assembly Instructions:

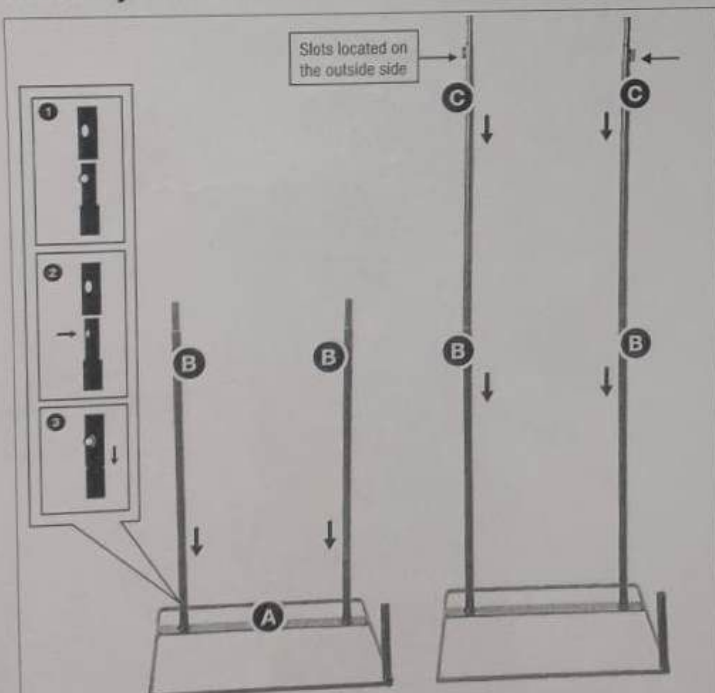


STEP 1

NOTE: The longer end of the (A) Base goes towards the front.
First, assemble the (B) Lower Support Poles to the (A) Base as shown and secure them by aligning the quick-connect push buttons into the pre-drilled holes.
Now assemble the (C) Upper Support Poles to the (B) Lower Support Poles as shown.
Note: The slots should be positioned on the outside of the (C) Upper Support Poles.

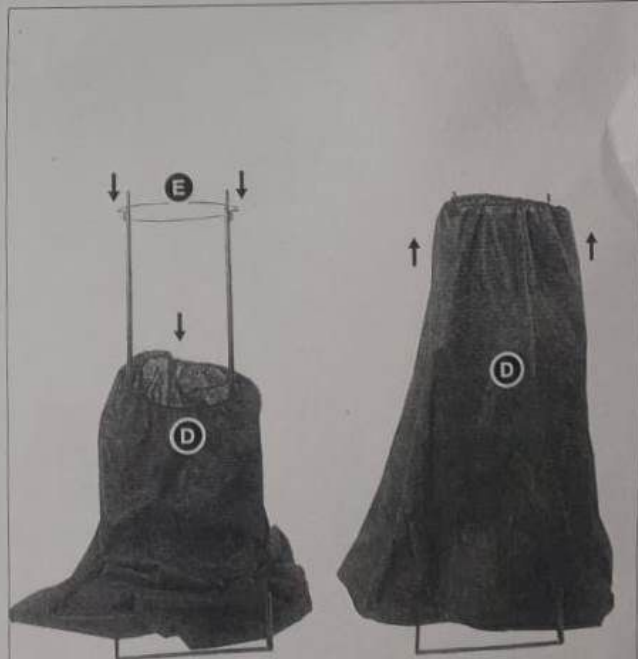

STEP 2

Lower the (D) Dress down over the (C) Upper Support Pole as shown.
Attach the (E) Hip Hoop through the slot housings on the outside of the (C) Upper Support Poles.
Pull the elastic band at the top of the (D) Dress over the top of the (E) Hip Hoop.

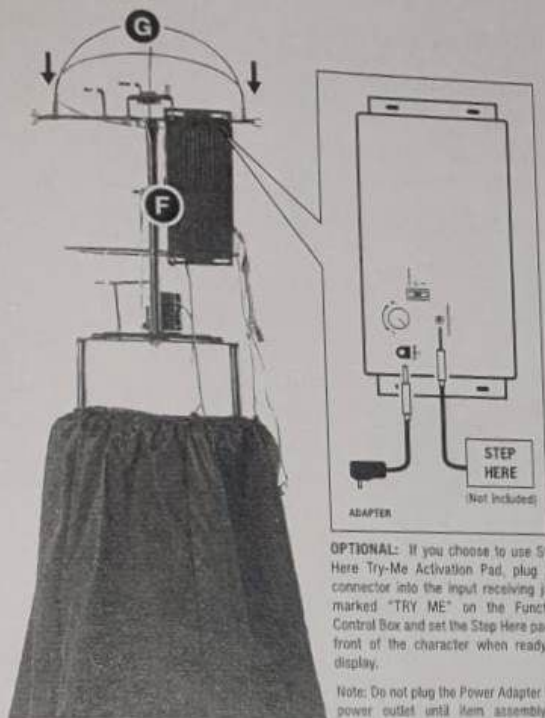

OPTIONAL: If you choose to use Step Here Try-Me Activation Pad, plug the connector into the input receiving jack marked "TRY ME" on the Function Control Box and set the Step Here pad in front of the character when ready to display.


Note: Do not plug the Power Adapter into power outlet until item assembly is completed.

STEP 3

NOTE: The speaker on the Function Control Box located on the (F) Torso Frame should be facing frontwards.


Attach the (F) Torso Frame on top of the (C) Upper Support Pole and secure by aligning the quick-connect push buttons into the pre-drilled holes. Attach the (G) Shoulder Frame on the top of the (F) Torso Frame using the slots provided.

Now, plug the Power Adapter into the input receiving jack marked "DC 5.9V" on the Function Control Box.

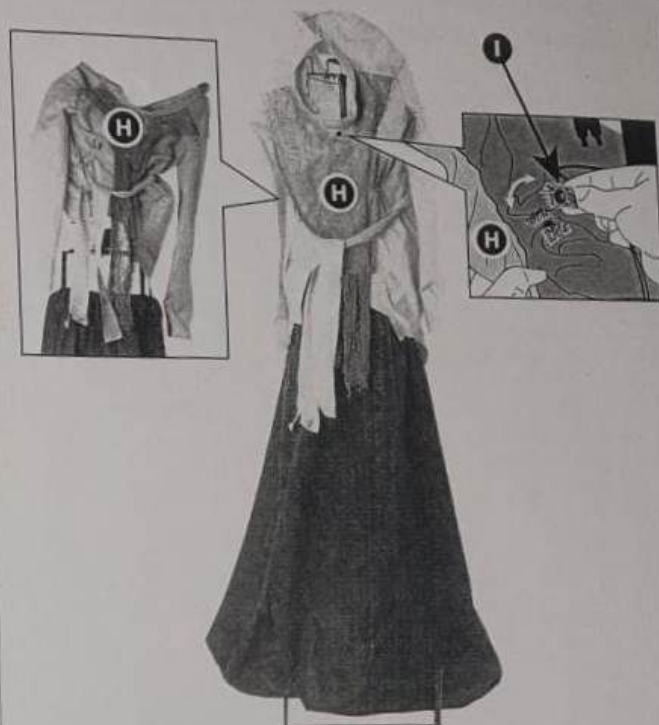

STEP 4


Attach the (H) Blouse to the (G) Shoulder Frame and the (F) Torso Frame as shown. Secure the (I) Sensor and the (H) Blouse with the hook and loop closures inside the (H) Blouse as shown.

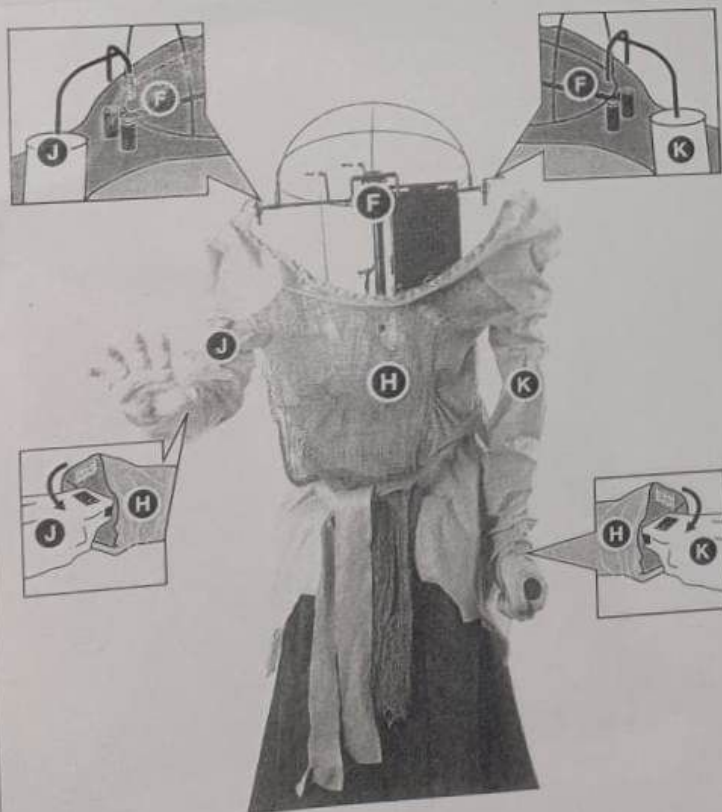

STEP 5

Slide the (J) Right Arm up through the right sleeve and slide the forked-hook into the right "shoulder" slot housing on the (F) Torso Frame. Slide the (K) Left Arm up through the left sleeve and slide the forked-hook into the left "shoulder" slot housing on the (F) Torso Frame as shown.

Now, Locate the hook and loop closures inside of both sleeves of the (H) Blouse near the wrists. Secure the hook and loop closures to both wrists.

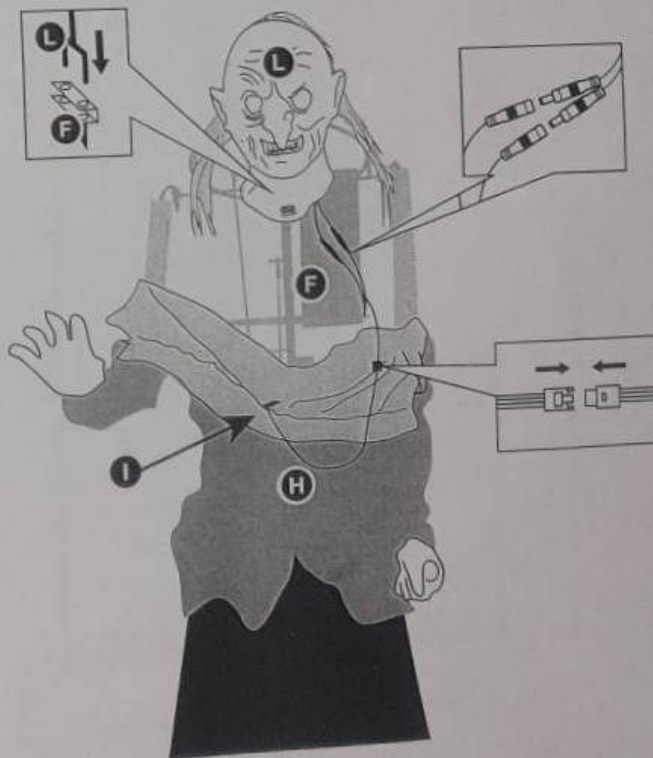

STEP 6

Set the (L) Head onto the (F) Torso Frame as shown. Connect the cables from the (L) Head to the corresponding cables on the Function Control box on the (F) Torso Frame as shown. Connect the sensor cable from the (I) Sensor to the corresponding cable on the Function Control box on the (F) Torso Frame as shown.



STEP 7

Assemble two pieces of the (M) Staff Poles together and twist counter-clockwise to secure. Set the (M) Bottom Staff Pole onto the "Stake Housing" at the front of the (A) Base as shown then slide it through the hole of the hand at the end of the (K) Left Arm. Assemble the (N) Skull Topper onto the assembled (M) Staff Poles as shown to ensure the skull is facing forward. Secure the (H) Blouse with the hook and loop closures under the chin and at the back of the garment.



STEP 8

Set the (O) Cape onto the shoulders of the witch. Secure the (O) Cape and the (H) Blouse with the hook and loop closures at the front of the witch as shown. Attach the (P) Hat to the (L) Head.

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the Torso Frame, as desired.

2. Settings:

Sensor: This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.

O/OFF/Try Me: This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Not Included). The item will operate for one audio cycle with each Try Me activation. Refer to Assembly Instructions Step 3 for further details.

I / ON : This switch mode will continuously operate the lights, sound, and animation of the item.

+ / - : Raise or lower the volume using the volume control turn dial, turn and click all the way down to turn the volume off.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

