

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

5124319 Lurching Cursed Werewolf



This item, when assembled by the following instructions, should take 15 minutes to assemble. Please follow the step by step guide and enjoy your Lurching Cursed Werewolf!

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors or in a sheltered outdoor area. We also recommend that you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). When not in use, store this product in it's original packaging. Keep away from heat and moisture.

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children. This product is intended for people ages 14 and up.


Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

PARTS LIST


- A. Base
- B. Feet (x2)
- C. Right Lower Support Pole
- D. Left Lower Support Pole
- E. Upper Support Poles (x2)
- F. Pants
- G. Torso Frame
- H. Hip Ring
- I. Chest Ring
- J. Shoulder Frame
- K. Head
- L. Shirt
- M. Right Arm
- N. Left Arm
- O. Right Hand
- P. Left Hand
- Q. Step Here Pad

UL Adapter *

* UL Power Adapter Spec
Input: 100 - 240VAC 50/60Hz
Output: 6.0V 1.5A

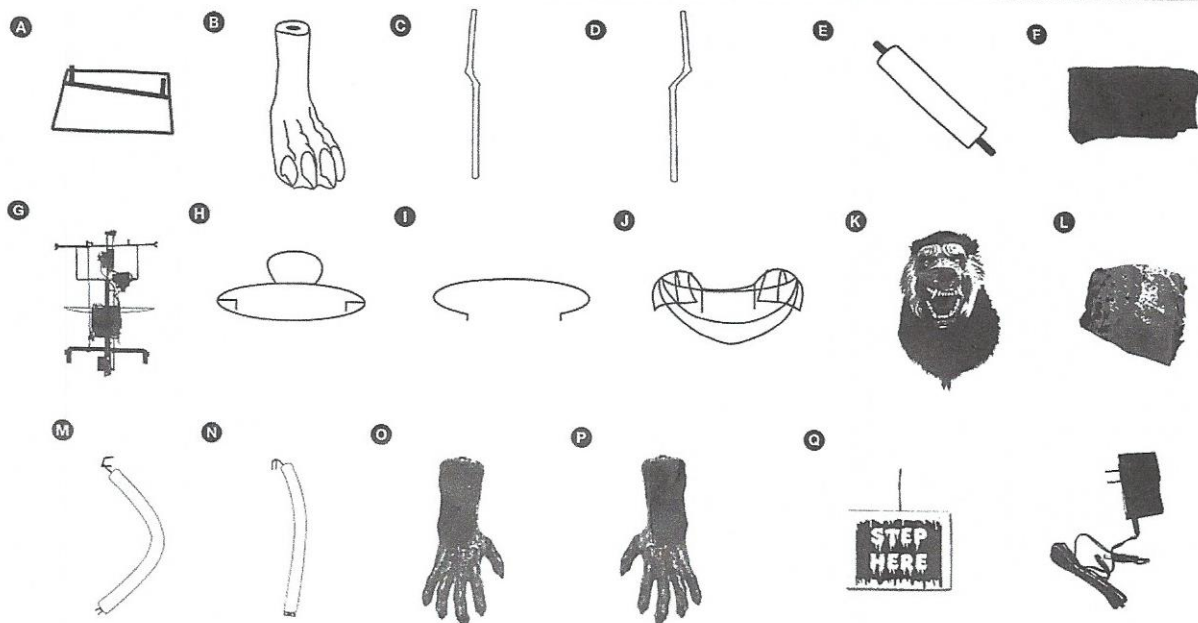


BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE FROM 8:30AM TO 5:30PM PST AT 1-855-428-3921, EXT. 207.

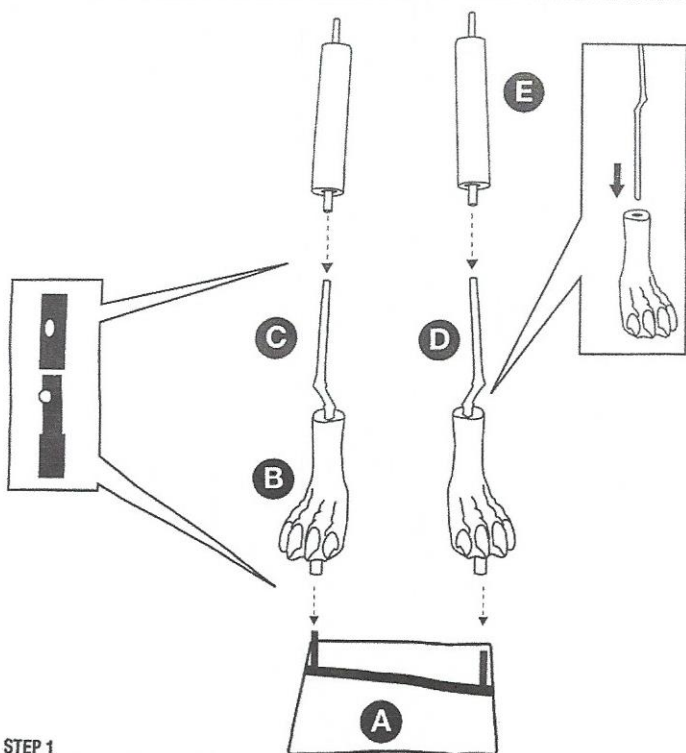

STEP 1


Note: The longer end of the Base (A) goes toward the front.

Guide the feet (B) through the bottom of the Lower Support Poles (C) (D) by sliding them through the pre drilled holes located at the top and bottom of each Foot (B). Note: the feet are the same and it does not matter which side they are placed. Assemble the Lower Support Poles (C) (D) to the base and secure by aligning the quick-connect push buttons into the pre drilled holes on the Base (A). Note: the Left Lower Support Pole (D) sits slightly further towards the front of the base, and the pole will be longer than the Right Lower Support Pole (C). Now secure the Upper Support Poles (E) by sliding into the top of the Lower Support Poles (C) (D) and securing by aligning the quick-connect push buttons in the pre drilled holes as shown.

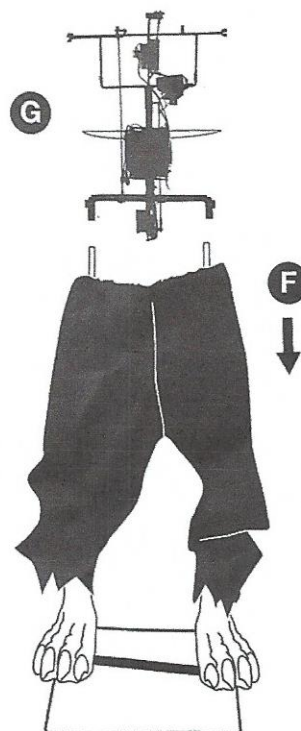


STEP 2

Lower the Pants (F) over the Upper and Lower Support Poles (E) (C) (D) and rest them below the waist area as shown. Now place the Torso Frame (G) onto the Upper Support Poles (E) by aligning the quick-connect push buttons into the pre drilled holes. Note: The Speaker should be facing towards the front.

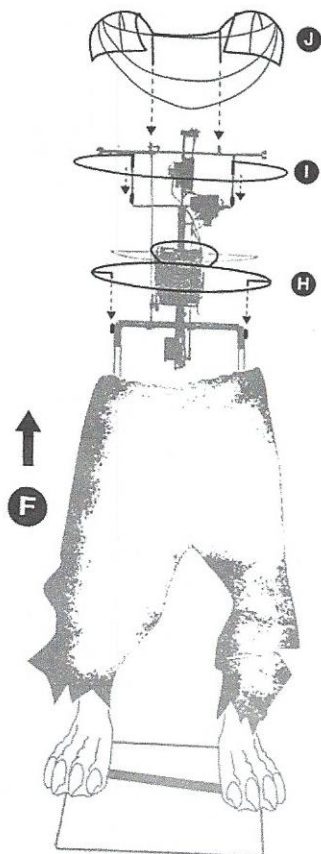

STEP 3

Lower the Hip Ring (H) over the Torso Frame (G) and secure in the slot housing found at the lower sides of the Torso Frame (G). Pull the Pants (F) up over the Hip Ring (H). Lower the Chest Ring (I) over the Torso Frame (G) and secure in the slot housing found at the center of the Torso Frame (G). Now attach the Shoulder Frame (J) and secure in the slot housing found at the top of the Torso Frame (G).

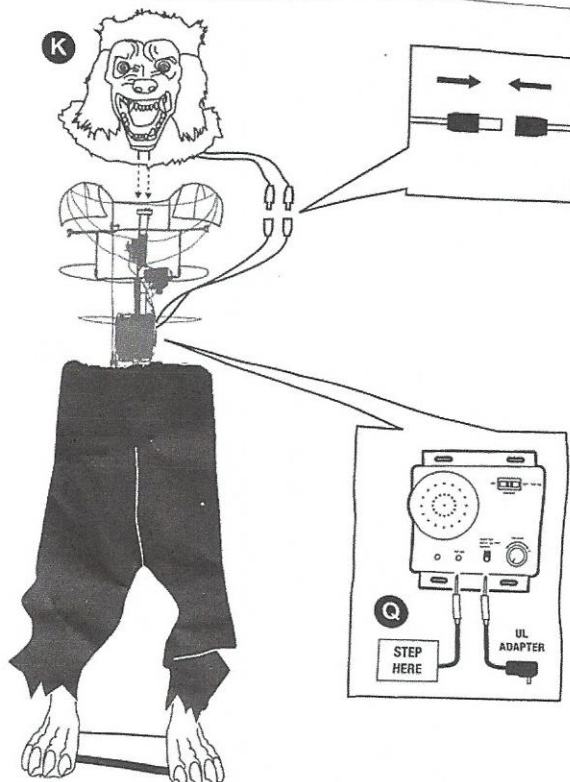


STEP 4

Place the Head (K) on to the Torso Frame (G) by sliding the forked-hook into "neck" slot housing on the top of the Torso Frame (G), then connect the color coded male/female cable from the Head (K) to the Function Control Box as shown.

Now plug in the UL Power Adapter into the input jack marked "DC 6V" on the Function Control Box and route the power cord down and out of the bottom of one of the pant legs.


Note: Do not plug UL Power Adapter into a power outlet until item assembly is complete.

Optional: if you choose to use the Step Here Try-Me Activation Pad (Q), plug the connector into the input jack marked "TRY ME" on the Function Control Box and route the Step Here Pad (Q) down and out of the bottom of one of the pant legs, then set the Step Here Pad in front of the character.

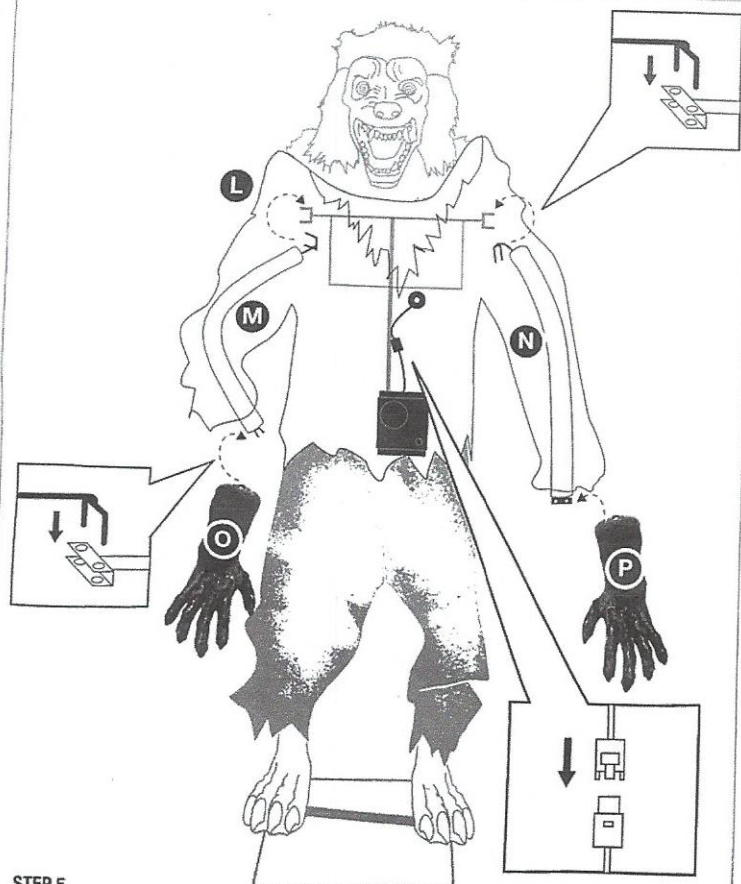

STEP 5

Place the shirt (L) over the Shoulder Frame (J) with the fur chest facing towards the front. Now run the Right Arm (M) up through the left sleeve and secure the forked-hook into the slot housing at the "shoulder" of the Torso Frame (G). Repeat for the Left Arm (N). Place the Right Hand (O) by securing the forked-hook into the "wrist" slot housing at the end of the Right Arm (M). Repeat for the Left Hand (P). At this point before closing the back of the shirt connect the IR sensor connector jacks coming from the inside of the front of the shirt to the Function Control Box as shown.

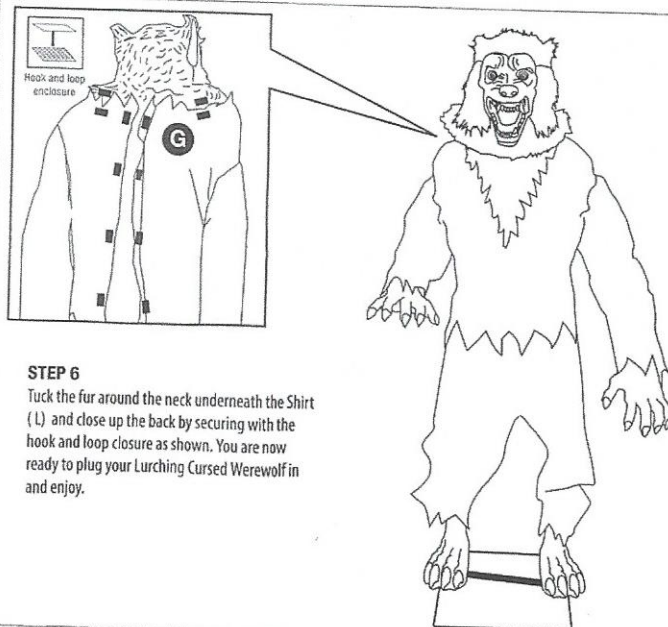

STEP 6

Tuck the fur around the neck underneath the Shirt (L) and close up the back by securing with the hook and loop closure as shown. You are now ready to plug your Lurching Cursed Werewolf in and enjoy.

OPERATION INSTRUCTIONS

1. Plug the UL Power Adapter into a standard power outlet and adjust the settings on the Function Control Box to your liking.
2. The Lurching Cursed Werewolf has 3 operation settings which can be found on the main Function Control Box on the (H) Torso Frame:
 - On: This setting allows the item to run continuously.
 - Sensor: This setting allows the item to only be activated when the infra-red sensor is activated. The item will operate for one audio-cycle with each sensor activation.
 - The infra-red (IR) sensor will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
 - The infra-red (IR) sensor has a range of up to 2 meters/6.56 feet, and can work in all lighting conditions - bright light to no-light.
 - NOTE: Upon first operation, the infra-red (IR) sensor will take approximately 30 seconds to calibrate to its surroundings; once calibrated, the IR sensor will allow the item to operate quickly once activated.
 - Off/Try Me: This setting allows the item to be activated only when the TRY ME Step Here Pad is activated. The item will operate for one audio-cycle with each TRY Me Step Here Pad activation.

The Function Control box also includes a Volume Control knob, which allows you to adjust the volume to be as loud or as quiet as needed. Be sure to test the item before finalizing your display so you can set the volume to your liking.

ENJOY YOUR LURCHING CURSED WEREWOLF!

