

MIX & MASH BLENDER™

Strobing lights & terrifying sounds!


OPERATING INSTRUCTIONS:

KEEP ALL PLASTIC AND WIRE PARTS
AWAY FROM CHILDREN

1. Carefully remove and discard packaging.
2. Insert 3 brand new "AA" alkaline batteries into the battery compartment located on the bottom of blender.
3. Place switch on the module to "Button" position.
4. Press yellow button on front of blender to activate scary sequence!

NOTE: Keep the switch in the "OFF" position when not in use.

REQUIRES 3 "AA" BATTERIES
(included for demo purposes only)

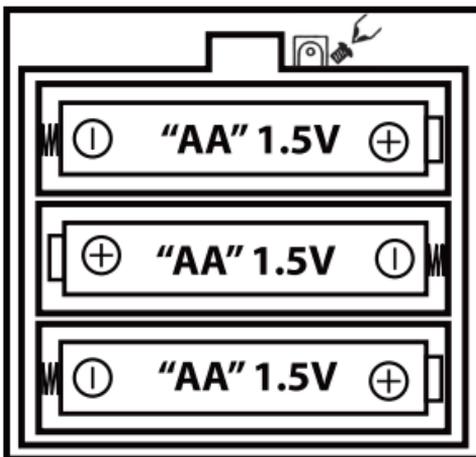

3AA

Batteries Included
(for demo purposes only)

BATTERY INSTRUCTION AND CAUTIONS:

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

Surface Washable Only.
All new materials: plastic, metal.

Item #58398. MIX & MASH BLENDER™ is a trademark of Tekky.
Copyright © 2018 Tekky. All Rights Reserved. MADE IN CHINA
Manufactured for and distributed by: Tekky, Orland Park, IL 60467 USA



WARNING! CHOKING HAZARD—Small Parts.

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.