




# MOURNING GORY™

## INSTALLATION AND OPERATING INSTRUCTIONS









KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

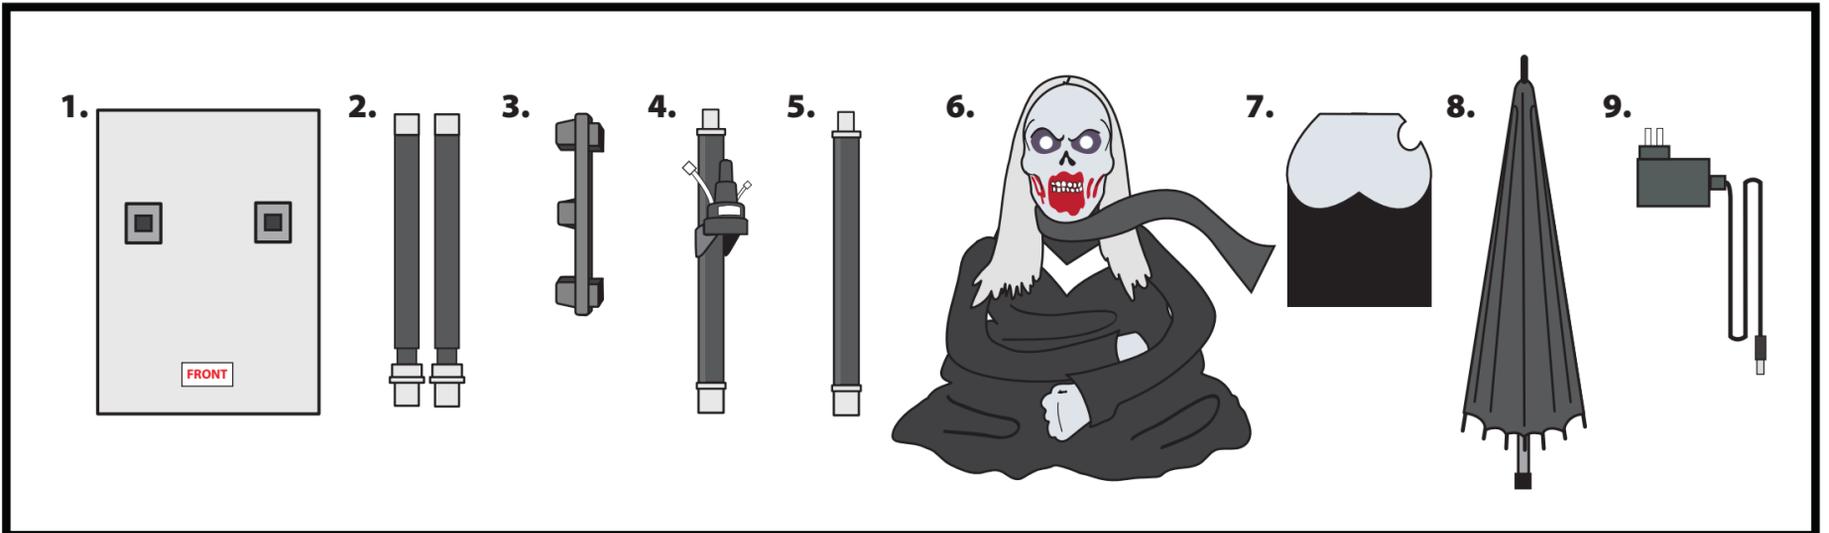


### PARTS

1. WOODEN BASE
2. TELESCOPING METAL POLES (2)
3. MIDDLE PLASTIC PART
4. METAL POLE LEFT SIDE WITH ROTATING MODULE
5. METAL POLE RIGHT SIDE
6. HEAD WITH MODULE AND CLOTHING
7. BLISTER CHEST PIECE
8. UMBRELLA
9. ADAPTER


1. Snap lock the **TELESCOPING METAL POLES** to the **WOODEN BASE**.  
(Match A to A)  
**NOTE:** Keep Label "FRONT" facing you while assembling Mourning Gory™.
2. Holding the two **TELESCOPING METAL POLES** near the base, extend the poles upwards with your other hand until both poles are locked into place. The poles are fully extended when you hear two audible clicks.
3. Snap Lock the **MIDDLE PLASTIC PART** to the **TELESCOPING METAL POLES**. (Match B to B)
4. Lift dress on **HEAD WITH MODULE AND CLOTHING**, then snap lock **METAL POLE LEFT SIDE** and **METAL POLE RIGHT SIDE** into the **MODULE**. (Match C to C and Match E to E)
5. With the dress lifted up, attach **BLISTER CHEST** using hook and loop fasteners to front portion of the **MODULE** in **HEAD AND CLOTHING**.
6. Snap Lock the **METAL POLE LEFT SIDE** and **METAL POLE RIGHT SIDE** with **HEAD WITH MODULE AND CLOTHING** into **MIDDLE PLASTIC PART**. (Match D to D and F to F)
7. Remove cardboard covering plastic clamp, then pull down dress and pull **ROTATING MODULE** and plastic clamp through holes in dress and **BLISTER CHEST**.
8. Open **UMBRELLA** and snap lock metal umbrella pole into the **ROTATING MODULE**. (Match G to G)

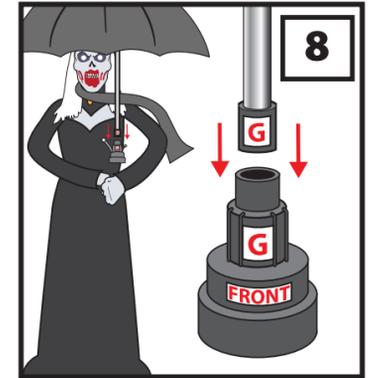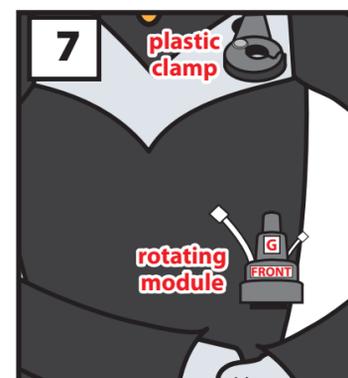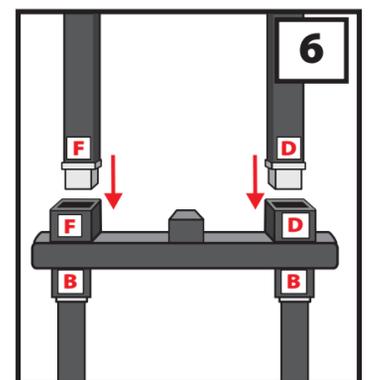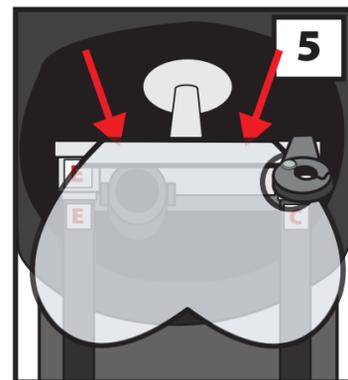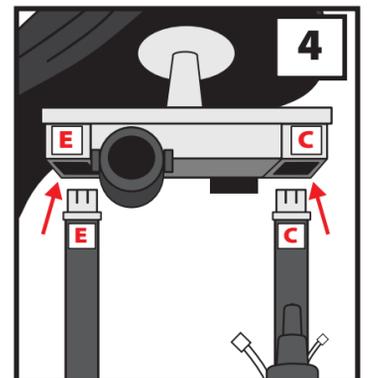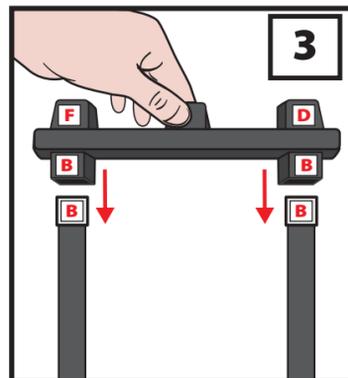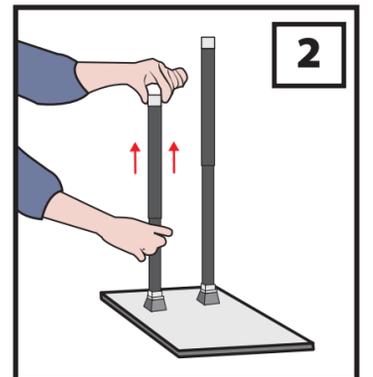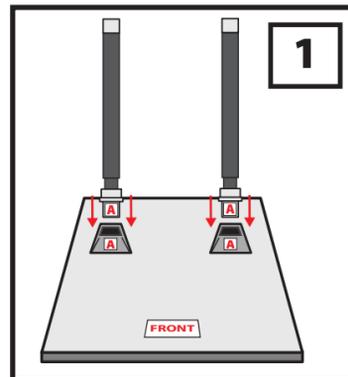


9. Open plastic clamp on left shoulder and insert metal **UMBRELLA** pole. (see illustration 9a) Close the clamp to snap lock the parts. (see illustration 9b)

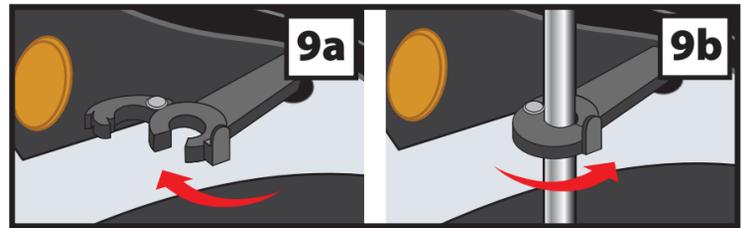

10. Connect the cables located under clothes to the cables coming from **ROTATING MODULE** (see illustration 10a) and **UMBRELLA**. (see illustration 10b. **Match H to H, I to I, and J to J**)

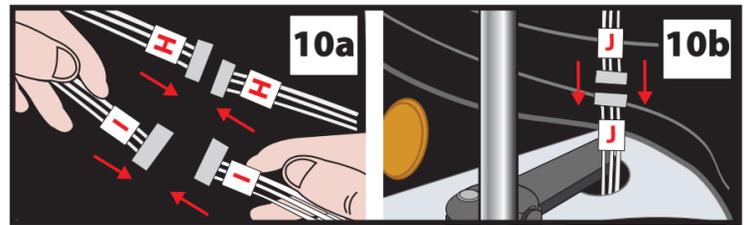

11. Connect 6V 2A **ADAPTER**, or insert 4 AA batteries (not included) into the battery compartment located on module. Module and battery compartment are located underneath **CLOTHING**.

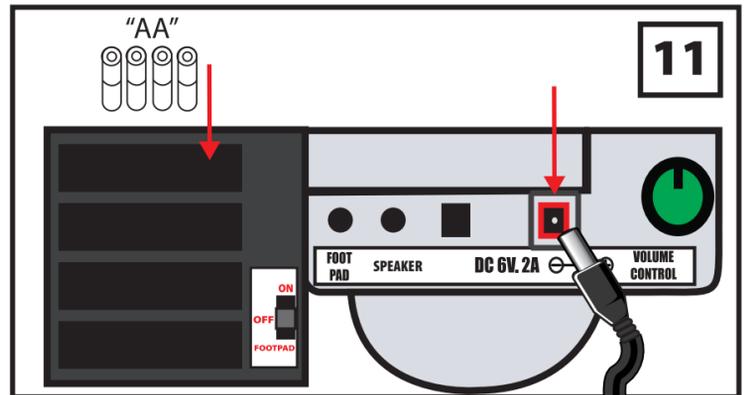


**Note:** Turn switch on the module to the "ON" to operate in Sound or Motion activation mode. Make a loud sound (clap), or move in front of the item to activate. Leave switch in OFF position when not in use.

12. Adjust sound with **VOLUME CONTROL KNOB** located on the module.

13. Adjust scarf to cover plastic clamp on left shoulder as shown in the photo below..

14. Pose arms and adjust hands to hold metal **UMBRELLA** pole.

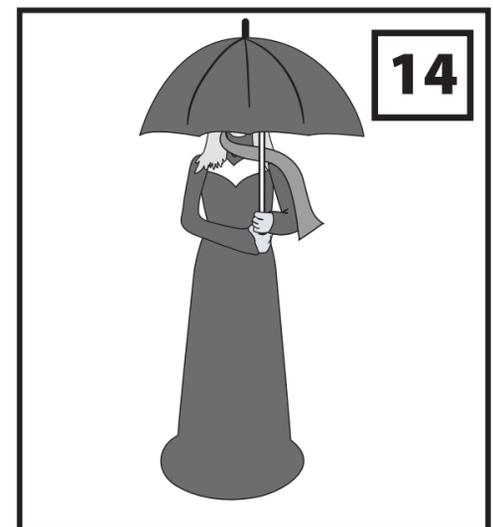


### Optional Footpad Setup

Follow steps #1 through 11 on initial installation first

1. Connect the cable from the optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence. (go to instruction #12 to continue setup)


\*Footpads are sold separately and can be purchased at [www.tekkyaccessories.com](http://www.tekkyaccessories.com)

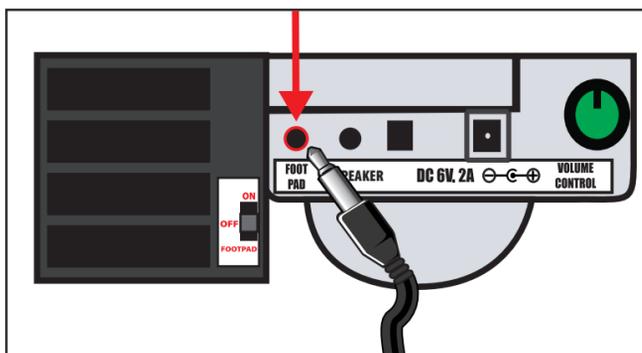


### Optional External Speaker Setup

**EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.**

1. Plug speaker cord (not included) into the jack labeled **SPEAKER** located on the **MODULE**.
2. Use volume control knob on external speaker to control volume levels.

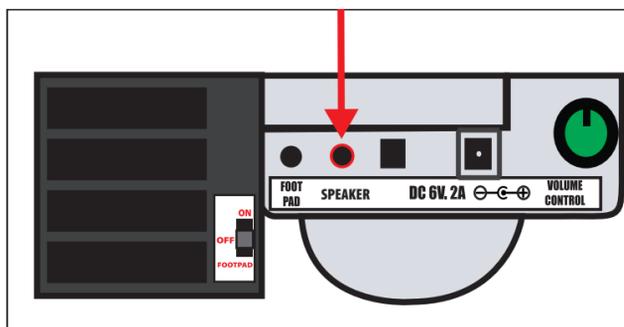

### BATTERY DIAGRAM

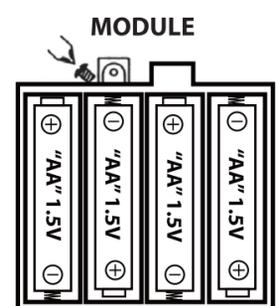

FOR FOOTPADS, ADAPTERS, AND ALL OTHER ACCESSORIES, PLEASE VISIT: [www.tekkyaccessories.com](http://www.tekkyaccessories.com)

### OUTDOOR WARNING:

For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather conditions (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32°F). Spirit recommends using heavy-duty, alkaline batteries for best operating performance.



visit us at [tekkydesign.com](http://tekkydesign.com)

Surface Washable Only.

ALL NEW MATERIALS : METAL, WOOD, PLASTIC, POLYESTER, POLYESTER FIBER, FOAM

Requires 4 'AA' Batteries (not included) or 6V 2A DC adapter (included)

MOURNING GORY is a trademark of Tekky Toys. Copyright © 2015 Tekky Toys. All Rights Reserved. MADE IN CHINA

### Battery Instructions and Cautions:

Use only the batteries recommended by the manufacturer. Remove batteries when not in use. Do NOT use rechargeable batteries. Be sure to insert the batteries with the correct polarity +/- . Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium or rechargeable. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode. **ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.**

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

**WARNING**  
**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.**  
**STAY CLEAR OF ITEM WHILE OPERATING.**  
**DO NOT PLACE ITEM ON UNEVEN GROUND.**  
**DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**



**DO NOT RETURN THIS ITEM TO THE STORE!** If experiencing technical difficulties, please go to [tekkydesign.com](http://tekkydesign.com) for assistance.