


CHAPTER TWO™

IT CHAPTER 2 and all related characters and elements © &™ WBEL (s19)

POP UP PENNYWISE INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

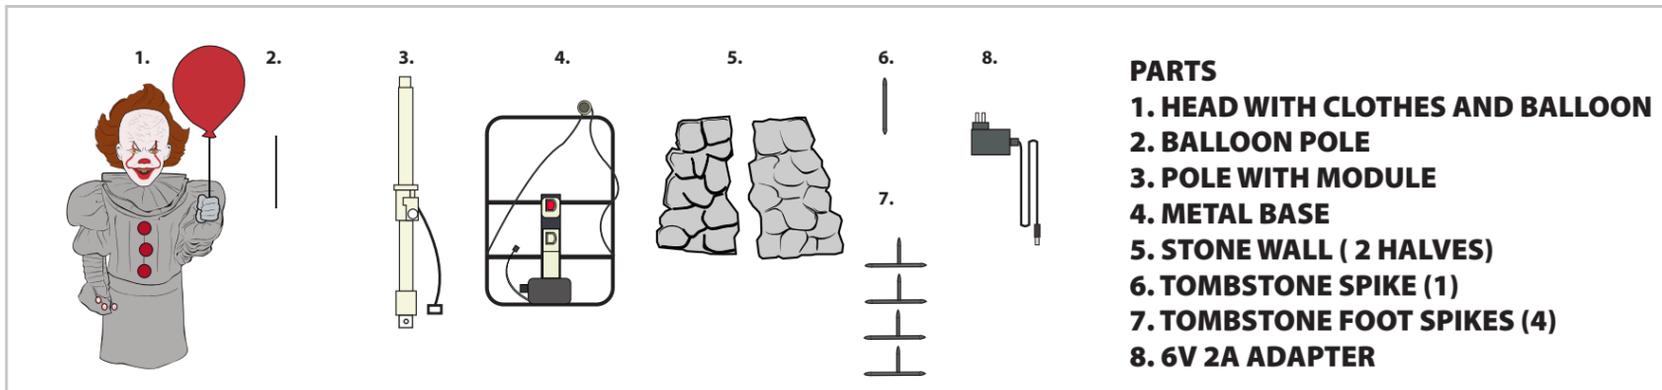

PARTS

1. HEAD WITH CLOTHES AND BALLOON
2. BALLOON POLE
3. POLE WITH MODULE
4. METAL BASE
5. STONE WALL (2 HALVES)
6. TOMBSTONE SPIKE (1)
7. TOMBSTONE FOOT SPIKES (4)
8. 6V 2A ADAPTER

1. Insert 4 **TOMBSTONE FOOT SPIKES** into the bottom halves of the **STONE WALL**.

***Note:** For indoor use, insert **TOMBSTONE FOOT SPIKES** as seen in illustration 1A. For sheltered outdoor use, see illustration 1B. Use caution when inserting the plastic spikes into the ground, as they may break easily. We recommend puncturing a hole into the ground **BEFORE** inserting plastic spikes. Use a screwdriver or similar tool to puncture ground.

2. Insert the **TOMBSTONE SPIKE** into the pre-drilled hole towards the top of one half of the wall and attach right half of **STONE WALL** to the left half of **STONE WALL**.

3. Place **METAL BASE** in back of **STONE WALL**. The base must be moved back far enough from the wall so the **BALLOON** does not hit the wall during operation.

IMPORTANT: MAKE SURE ITEM SWITCH IS IN "OFF" POSITION BEFORE ASSEMBLY

4. Push the circular locking pin in while lowering the **POLE WITH MODULE** into **BASE**. Release circular locking pin when **POLE WITH MODULE** is firmly seated in **BASE**. (Match A to A)

5. Attach **HEAD WITH CLOTHES AND BALLOON** to the **POLE WITH MODULE**. (Match B to B)

*** Note:** Push the circular locking pin in while lowering the **HEAD WITH CLOTHES AND BALLOON** down on to the **POLE WITH MODULE**. Release circular locking pin when head is firmly seated on pole.

IMPORTANT: HEAD WITH CLOTHES MUST BE PROPERLY SECURED TO POLE WITH MODULE TO OPERATE.

6. Locate the circular plastic connector attached to the cables located on **METAL FRAME**. Connect the cable and connector to the post on the **POLE WITH MODULE**. (Match C to C)

7. Connect the wires located under the **HEAD WITH CLOTHES AND BALLOON** to the control box on the **METAL BASE**. (Match D to D) and (Match E to E)

8. Connect the wire located on the control box on the **METAL BASE** to the wire located on the **STONE WALL**. (Match F to F)











9. Twist **BALLOON POLE** clockwise into the bottom of Pennywise's hand. Tighten securely.

10. Insert 4 AA alkaline batteries (not included) into the battery compartment located on the **METAL BASE**, or connect **6V 2A ADAPTER** (included) to control box on **METAL BASE**.

*** Note:** Turn switch on top of **METAL BASE** to ON to operate in sound activation mode. Leave switch in OFF position when not in use.

IMPORTANT: IMMEDIATELY STAND CLEAR WHEN TURNING SWITCH TO ON POSITION

STONE WALL ASSEMBLY

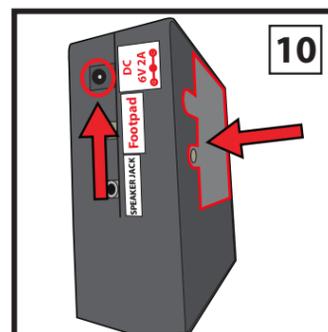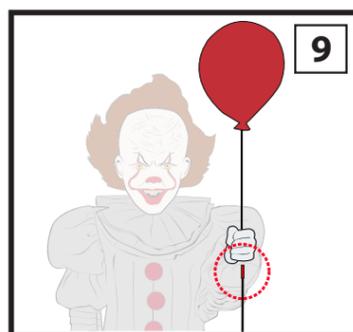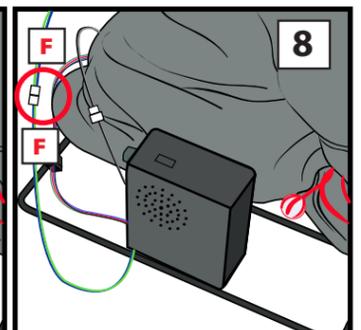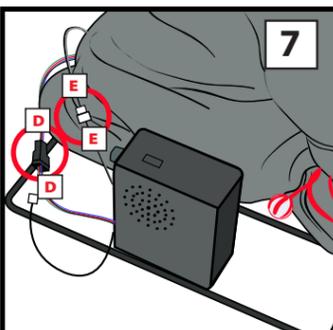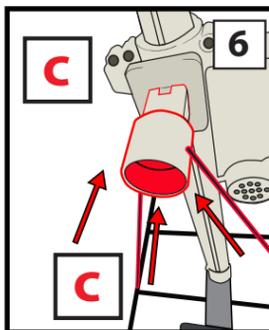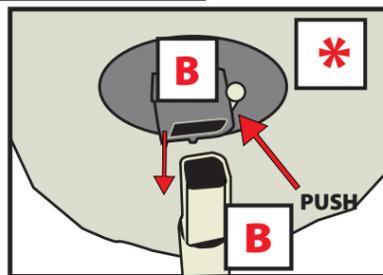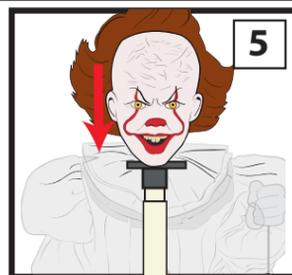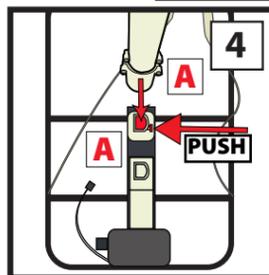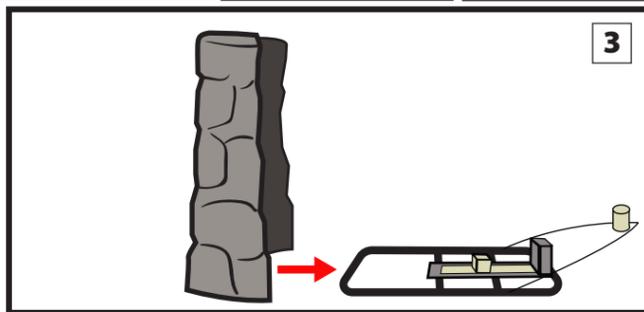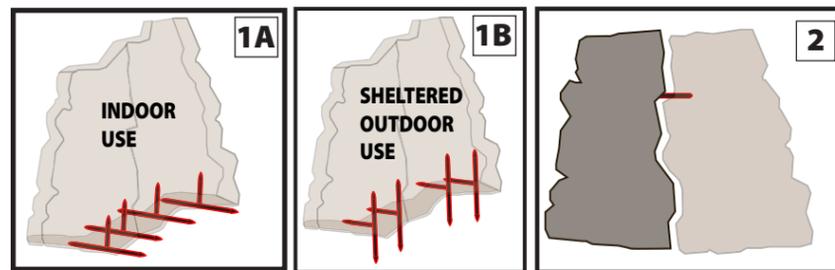

OPTIONAL FOOTPAD SETUP

Follow steps #1 through #9 on initial installation first.

1. Connect the cable from the optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence. (go to instruction #10 to continue setup)



OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.


Follow steps #1 through 9 on initial installation first.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on top of the base.
2. Use volume knob on external speaker to control volume levels. (go to instruction #10 to continue setup)



BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

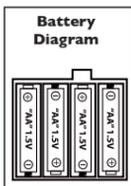

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.
**** FOR INDOOR USE ONLY****



IT CHAPTER 2 and all related characters and elements © &™ WBEL (s19)

Requires 4 AA batteries (not included)

ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER

Surface washable only.
MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.