WARNING! CHOKING HAZARD—Small Parts. This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older. Not intended for use by children 14 years of age and younger.

OPERATING INSTRUCTIONS: KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN. Requires 4 "AA" batteries (not included).

1. Carefully remove and discard packaging.

2. Lift Ghost Lady's skirt and insert 4 brand new "AA" alkaline batteries into the battery pack.

3. Place switch on the battery pack to the "ON" position to bring your PRE-LIT HANGING GHOST

NOTE: Keep switch in the "OFF" position when not in use.

LADY™ to life!

SURFACE WASHABLE ONLY. All new materials: Fabric, plastic, wire.

BATTERY INSTRUCTIONS & CAUTIONS: Battery installation and removal should be performed by an adult. • Remove batteries when not in use. Use only batteries recommended in the instructions. • Do not mix new and used batteries. • Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. • Be mindful to insert batteries with the correct polarity (+/-) as indicated. • Remove all exhausted batteries. • Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. • Nonrechargeable batteries are not to be recharged. • The supply terminals are not to be shortcircuited. • Always dispose of exhausted batteries properly. • Do NOT dispose of batteries in fire, they may leak or explode.


PRE-LIT #90171 HANGING



DO NOT RETURN THIS ITEM TO THE STORE!

If experiencing technical difficulties, please go to tekkydesign.com for assistance.

FOR FOOTPADS, ADAPTERS AND ALL OTHER ACCESSORIES, PLEASE VISIT: **tekkvaccessories.com**

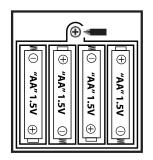

USES 4 "AA" BATTERIES (not included)



PRE-LIT HANGING GHOST LADY™ is a trademark of Tekky. Copyright © 2019 Tekky. All Rights Reserved.

MADE IN CHINA