


SPiRiT

BLACK & RED JUMPING SPIDER™ Patent RE46,087

Installation and Operating Instructions

Keep all plastic and wire parts away from children.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.

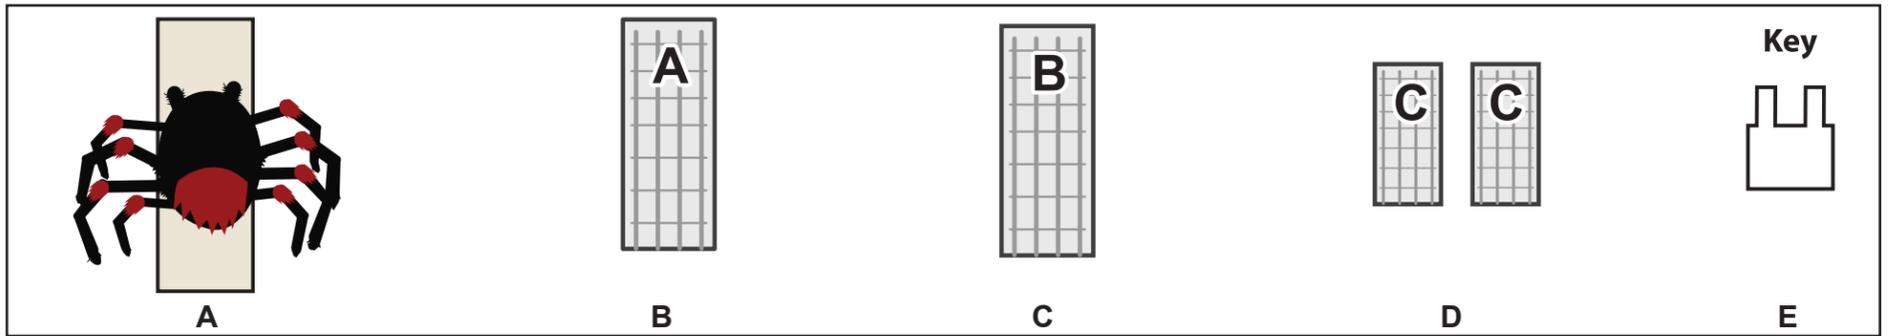

PARTS:

A: MODULE WITH SPIDER

B: FRONT FOOT

C: BACK FOOT

D: SIDE FEET

E: FOOT REMOVAL "KEY"








Assembly:

1. Insert FRONT FOOT into bottom of MODULE WITH SPIDER until it locks into place. (Match A to A)
NOTE: Press to make sure each FOOT is flush with rectangular base.
2. To remove FOOT, insert plastic "KEY" (included) into holes on bottom. To release locks, twist and pull.
3. Insert BACK FOOT into bottom of MODULE WITH SPIDER until it locks into place. (Match B to B)
4. If needed place weight on FOOT to increase stability.
5. Insert SIDE FEET into bottom of MODULE WITH SPIDER until they lock into place. (Match C to C)
6. **IMPORTANT:** Lift SPIDER wrapped in fabric until poles are vertical. Attach the 2 metal springs by pulling each spring backward and securing them to the posts located on either side of the pole on MODULE WITH SPIDER. Pull black fabric bag up and over the springs.
7. Insert 4 AA alkaline batteries (not included) into the battery compartment located on the top of the MODULE or connect the DC Adapter (sold separately).

NOTE: Make sure there are no obstructions to hinder the SPIDER'S movement.

8. Remove spring instruction label located on the corner of the MODULE and turn switch on top of MODULE to ON to operate in sound and motion activation mode. Make a loud sound (clap) or move in front of the item to activate. Leave switch in OFF position when not in use.



9. Release fabric around SPIDER and attach hook and loop fasteners under fabric to the opposite hook and loop fasteners located on all four FEET. Spread out fabric and pose legs as desired.

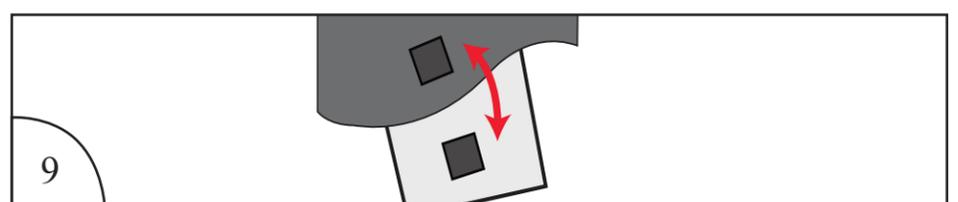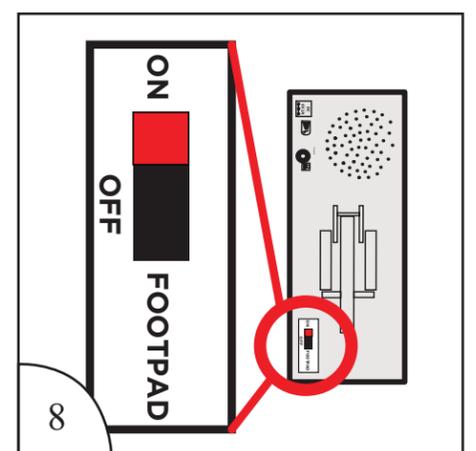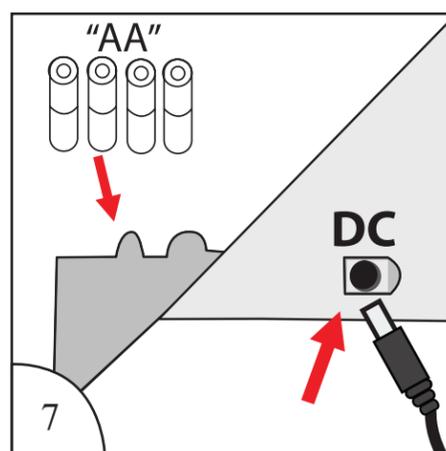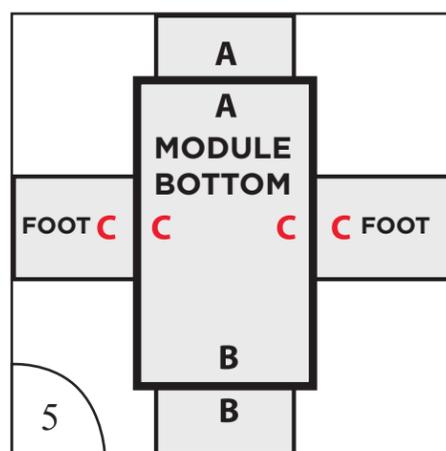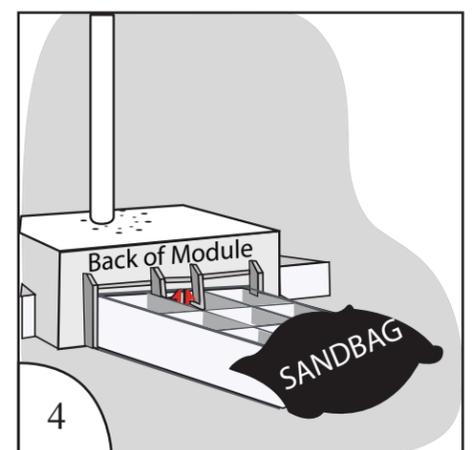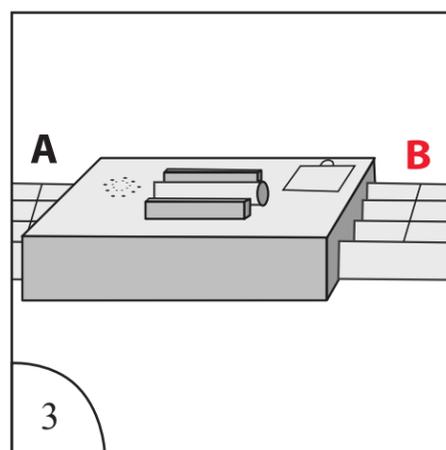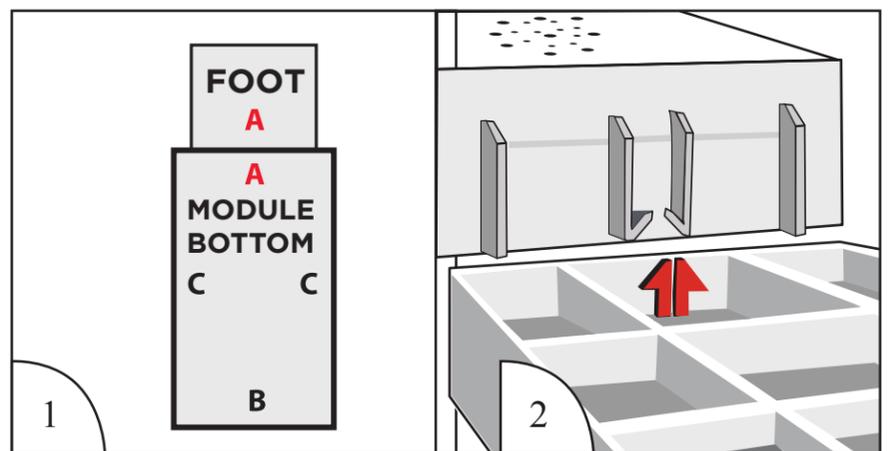

OPTIONAL FOOTPAD SETUP


1. Connect the cable from the optional FOOTPAD to the jack labeled FOOTPAD located on the MODULE. (See Fig. 1)
2. Turn switch on top of MODULE to the 'FOOTPAD' position to enable FOOTPAD activation. (See Fig. 2)
3. Step on FOOTPAD to activate the prop.

Step Pad (SKU #01181288) is sold separately and can be purchased in-store and online at www.SpiritHalloween.com

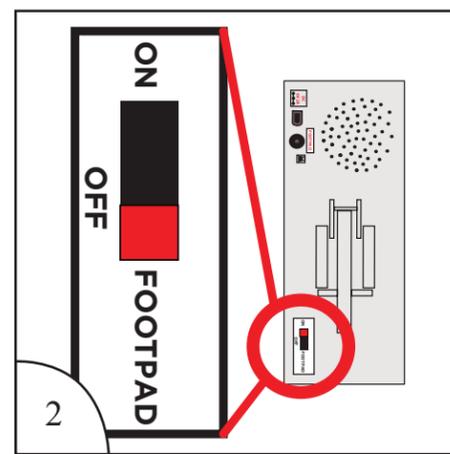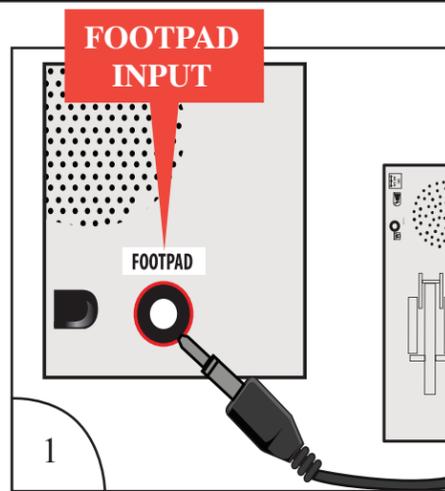

OPTIONAL BATTERY ADAPTER SETUP


1. Install 4 D Batteries into Spirit Battery Adapter. (See Fig. 1)
2. Connect wire from Spirit Battery Adapter to the DC adapter port on the MODULE. (See Fig. 2)
3. Turn switch on Battery Adapter to the ON position to power the prop.

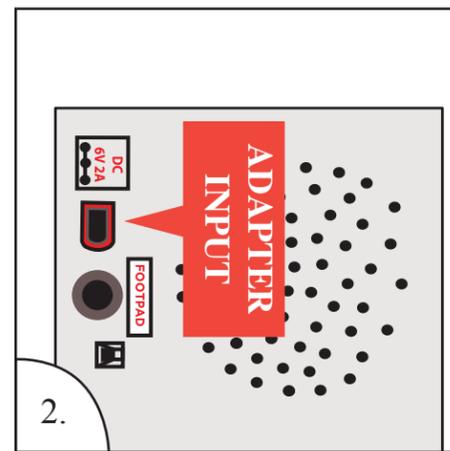

OPTIONAL MULTI-PROP REMOTE SETUP

Connect one of the transponders to the prop by inserting the wire of the transponder into the Footpad jack as labeled on the MODULE. (See Fig. 1)

1. Flip the switch on the transponder to the ON position.
2. Click the button on the Multi-Prop Remote that matches the letter on the transponder to activate the prop. (See Fig. 2)

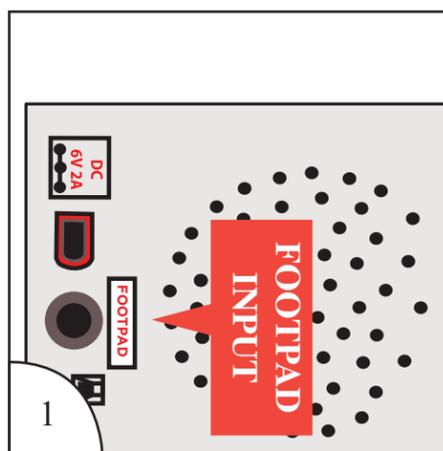

TROUBLESHOOTING STEPS

If you hear a constant clicking sound and the item does not function properly, it means there is an obstruction preventing the item from operating (rock, bush, incline, etc.). Remove the obstruction and the item should function normally.

Make sure the springs are attached. (See illustration 6) If item is stuck in up or down position: 1. Turn the item OFF. 2. Detach the springs from the module. 3. Turn the item ON and activate for 1 full cycle. 4. Turn the item OFF, reattach the springs and turn the item back ON.

Motion Sensor – make sure that the motion sensor on SPIDER'S head is facing forward and there are no obstructions blocking sensor tube. To test the motion sensor, shine a flashlight into the tube.

BATTERY INSTALLATION

Battery installation should be performed by an adult.

- Use only batteries recommended in the instructions.
- Do not mix old and new batteries.
- Do not mix alkaline, rechargeable, standard, or different types of batteries.
- Be mindful to insert batteries with correct polarity as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.

WARNINGS:

- **This product is designed for indoor or covered porch use only, and should not be placed outdoors subject to the weather.**
- **This item is not a toy. For decoration only.**
- **Choking hazard due to small parts.**
- **Keep all plastic and wire parts away from children.**
- **This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 and under.**
- **Do not turn item on until you have completed assembly.**
- **Stay clear of item while operating.**
- **Do not place weight on item while in operation.**

Questions about setup? Prop not working?
There's no need to go back to the store, just...



ASK DR. ZOMBIE!

He's dying to bring your prop to life!

✉ DrZombie@SpiritHalloween.com ☎ 1.866.586.0155