



# REVEAL GEORGIE

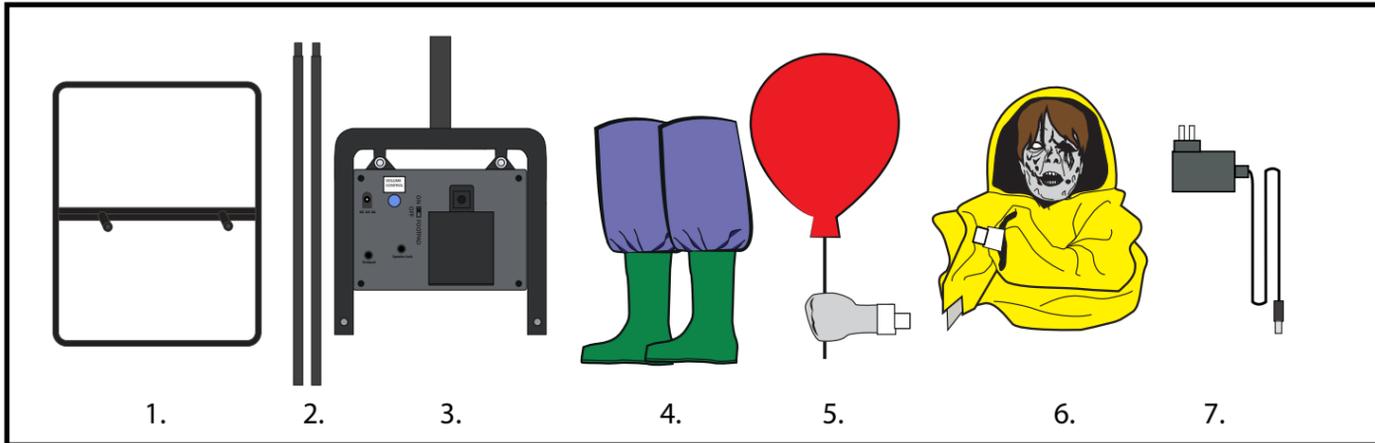

- PARTS**
1. METAL STAND
  2. SNAP LOCK POLES
  3. WAIST AND CONTROL BOX
  4. LEGS AND BOOTS
  5. HAND AND BALLOON
  6. BODY AND HEAD
  7. ADAPTER

1. Place METAL STAND with *FRONT* label facing forward. Insert SNAP LOCK POLES onto METAL STAND. Snap to lock. (Match A to A)
  2. Place the opening located on the bottom of the BOOTS over the SNAP LOCK POLES and slide the LEGS AND BOOTS OVER the SNAP LOCK POLES.
  3. Insert the WAIST AND CONTROL BOX onto the METAL SNAP LOCK POLES. Snap to lock. (Match B to B)
  4. Reach inside the coat on the BODY AND HEAD and snap-lock the BODY AND HEAD onto the WAIST AND CONTROL BOX. Snap to lock. (Match C to C)
  5. Snap-lock the HAND AND BALLOON into the left arm on the BODY AND HEAD. Snap to lock. (Match D to D)
  6. Connect the wire harness running from the BODY AND HEAD to the wire harness on the CONTROL BOX. (Match E to E)
  7. Reach inside the coat on the BODY AND HEAD and connect 6V 2A ADAPTER (included) or insert 4 AA alkaline batteries (not included) into the battery compartment located on the CONTROL BOX.
- Turn the switch to the ON position to activate the item. Make a loud sound (clap) to activate. Turn the item OFF when not in use.
8. Attach hook and loop fastener inside both LEGS to the hook and loop fasteners on the METAL SNAP LOCK POLES.
  9. Adjust the top of the PANTS upward and adjust the bottom of the coat as seen in Illustration 9.

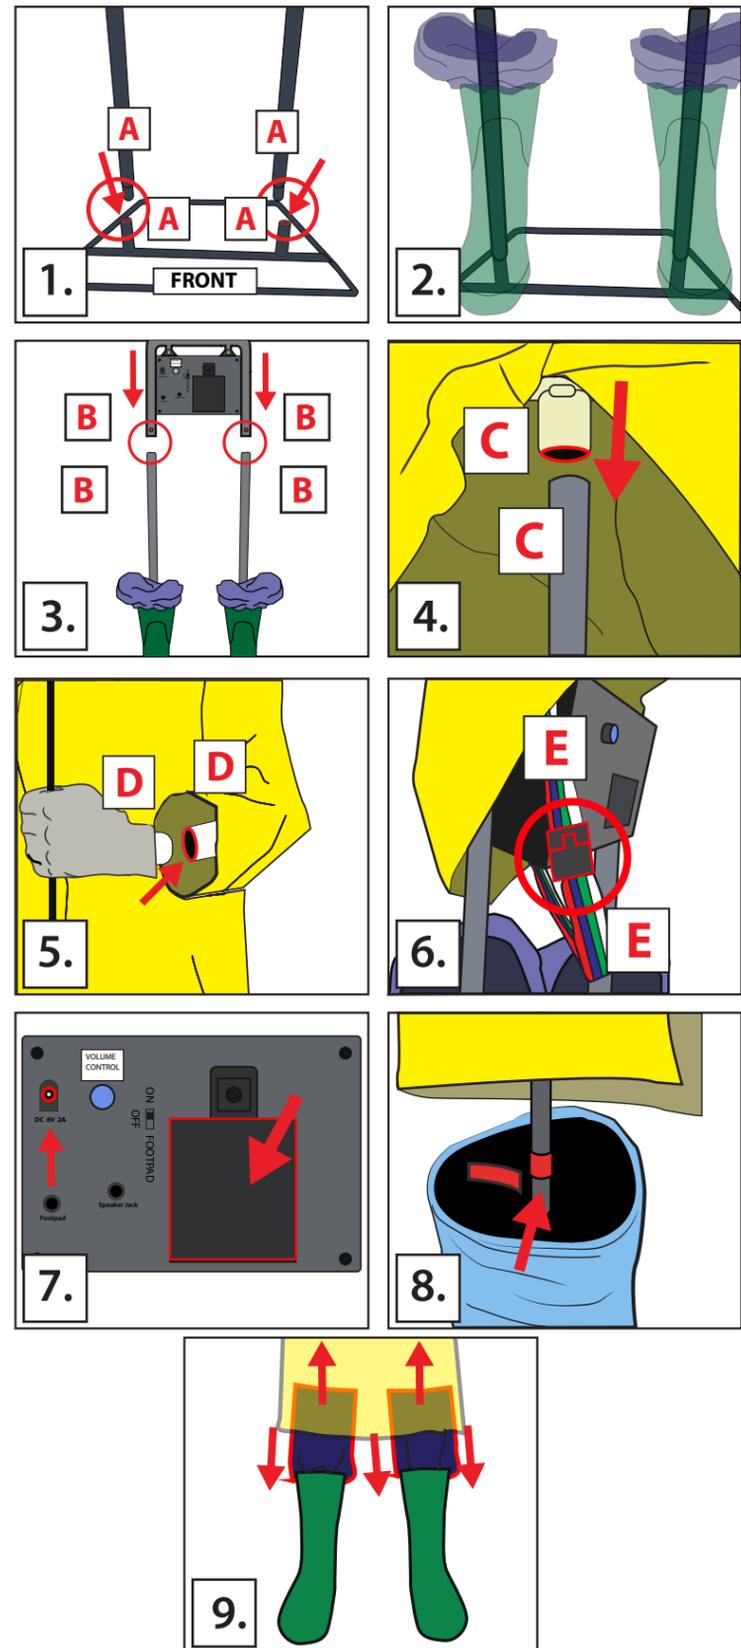

**OPTIONAL EXTERNAL SPEAKER SET UP**  
 EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on side of the control box.
2. Use volume knob on external speaker to control volume levels.

**OPTIONAL FOOTPAD SET UP**  
 FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the control box.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!

**Battery Diagram**

**BATTERY INSTRUCTIONS AND CAUTIONS**  
 Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

**Warning!** This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

**WARNING**  
 DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.  
 STAY CLEAR OF ITEM WHILE OPERATING.  
 DO NOT PLACE ITEM ON UNEVEN GROUND.  
 DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.

IT CHAPTER 2 and all related characters and elements © &™ Warner Bros. Entertainment Inc. WB SHIELD and NL LOGO: © &™ WBEI. (s20)

Requires 6V 2A (included)  
 Requires 4 AA batteries (not included)  
 ALL NEW MATERIALS: PLASTIC, FABRIC, METAL  
 Surface washable only.  
 MADE IN CHINA



**DO NOT RETURN THIS ITEM TO THE STORE!**  
 If experiencing technical difficulties, please go to [www.tekkydesign.com](http://www.tekkydesign.com) for assistance.