 


RATTLING GRAVE BUSTER™

 
INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED: STAY CLEAR OF THE PROP WHILE OPERATING

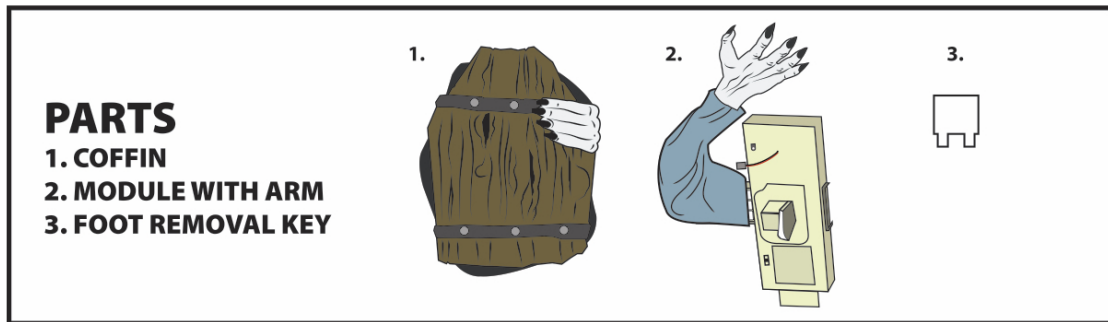


1. Pull the **ARM** through the fabric hole located on the left side of the **COFFIN**.
 2. Insert the bracket located on the **COFFIN** into the bottom of the **MODULE**. Snap into place to secure (Match **A** to **A**)
- IMPORTANT:** Press to make sure the bracket is flush with **MODULE**. To remove bracket, insert plastic **FOOT REMOVAL KEY** (included) into holes on bottom to release locks, twist and pull.
3. Insert 4 AA batteries (not included) into the battery compartment or insert 6V 2A adapter.
 4. Position the Arm above the coffin as pictured below and spread out the fabric behind the item.
 5. Reach under the **COFFIN** and move the switch to the **ON** position to activate in sound activation mode. Make a loud sound (clap) to activate. Leave switch in off position when not in use. Move the switch to **TIMER**, (clap) during 2.5 minute break to instantly start the item activation. Turn item off when not in use.

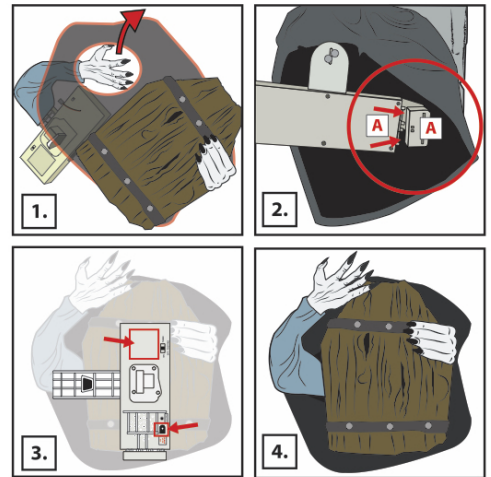

OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

 
1. Insert the cable from the optional footpad into jack labeled footpad on the module.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation
3. Step on the FOOTPAD to activate the scary sequence!

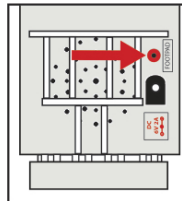

* Footpads, adapters and all other accessories are sold separately and can be purchased at www.tekkyaccessories.com

 SMART PHONE SCAN SETUP VIDEO



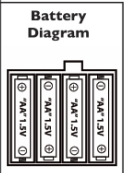

Battery Diagram

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION



TEKKY

visit us at tekkydesign.com

Requires 6V 2A ADAPTER or 4 AA batteries. (not included)
ALL NEW MATERIALS:
FOAM, PLASTIC, POLYESTER FABRIC
Surface washable only.
RATTLING GRAVE BUSTER™
is a trademark of Tekky.
Copyright © 2018 Tekky.
All Rights Reserved.
MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.