

MOTION AND SOUND ACTIVATED ANIMATED RAVEN CLOCK™

AGES 15+

3AA

BATTERIES INCLUDED
(FOR DEMO PURPOSES ONLY)

WARNING CHOKING HAZARD—Small parts.
This item is not a toy. For decoration only.
Intended for use by persons 15 years of age and older.
Not intended for use by children 14 years of age and younger.

**AS THE CLOCK HAND SPINS,
THE RAVEN HIDING WITHIN POPS OUT!**

OPERATING INSTRUCTIONS

1. CAREFULLY REMOVE AND DISCARD “TRY ME” WIRE.
2. REPLACE DEMO BATTERIES WITH 3 BRAND NEW “AA” ALKALINE BATTERIES.
3. PLACE THE SWITCH ON BACK OF CLOCK TO “ON” POSITION.
4. MAKE A LOUD SOUND (CLAP) OR WAVE HAND IN FRONT OF ANIMATED RAVEN CLOCK™ TO ACTIVATE SCARY SEQUENCE.

NOTE: KEEP SWITCH IN “OFF” POSITION WHEN NOT IN USE.

REQUIRES 3 “AA” BATTERIES
(INCLUDED FOR DEMO PURPOSES ONLY.)

ALL NEW MATERIALS: PLASTIC
SURFACE WASHABLE ONLY

ITEM #56009.
ANIMATED RAVEN CLOCK™
IS A TRADEMARK OF TEKKY.
COPYRIGHT © 2016 TEKKY.
ALL RIGHTS RESERVED.
TEKKYDESIGN.COM

BATTERY INSTRUCTIONS & CAUTIONS

- BATTERY INSTALLATION AND REMOVAL SHOULD BE PERFORMED BY AN ADULT.
- REMOVE BATTERIES WHEN NOT IN USE.
- USE ONLY BATTERIES RECOMMENDED IN THE INSTRUCTIONS.
- DO NOT MIX NEW AND USED BATTERIES.
- DO NOT MIX ALKALINE, CARBON-ZINC, NICKEL-CADMIUM, RECHARGEABLE OR DIFFERENT TYPES OF BATTERIES.
- BE MINDFUL TO INSERT BATTERIES WITH THE CORRECT POLARITY (+/-) AS INDICATED.
- REMOVE ALL EXHAUSTED BATTERIES.
- RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION.
- RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE ITEM BEFORE BEING CHARGED.
- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
- THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
- ALWAYS DISPOSE OF EXHAUSTED BATTERIES PROPERLY.
- DO NOT DISPOSE OF BATTERIES IN FIRE, THEY MAY LEAK OR EXPLODE.

