

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

5124325 Rising Creeper



This item, when assembled by the following instructions, should take 15 minutes to assemble. Please follow the step by step guide and enjoy your Rising Swamp Hag!

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors or in a sheltered outdoor area. We also recommend that you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). When not in use, store this product in it's original packaging. Keep away from heat and moisture.

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children. This product is intended for people ages 14 and up.


Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

PARTS LIST

- A. Base
- B. Torso with Electronic Components, Motor and Sound Box
- C. Shoulder Frame
- D. Head
- E. Costume
- F. Hooded Robe
- G. Right Arm
- H. Left Arm
- I. Step Here Pad


UL Power Adapter *

* UL Power Adapter Spec
Input: 100 - 240VAC 50/60Hz
Output: 6.0V 1A

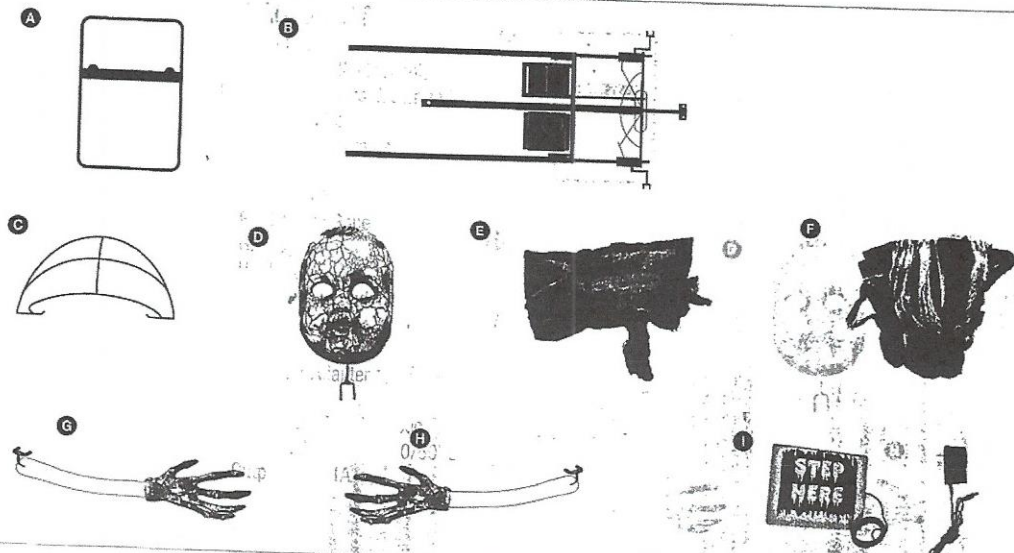

1. ASSEMBLING THE LOWER FRAME


Note: The Lower Torso with Electronic Components, Motor and Sound Box (B) Lower Support Poles should be facing towards the shorter end of the (A) Base.

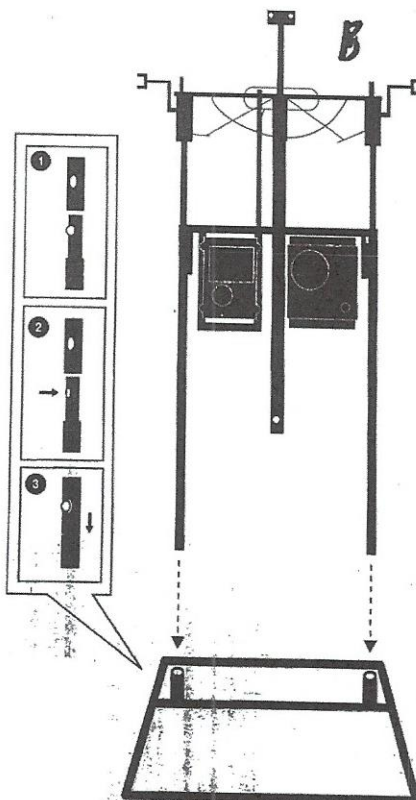

2. ASSEMBLING THE SHOULDERS AND HEAD

The curved shape of the (C) Shoulder Frame should be facing towards the shorter side of the (B) Torso with Electronic Components, Motor and Sound Box.

Place the (D) Head into the middle slot located on the (B) Torso with Electronic Components, Motor and Sound Box.

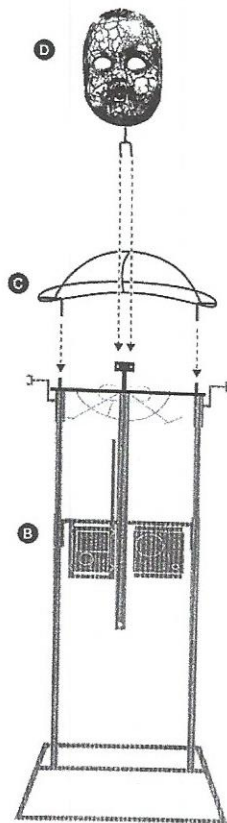


3. ELECTRONIC COMPONENTS WIRING FOR HEAD, SOUND BOX AND UL POWER ADAPTER

Connect the wire between the (D) Head and the Speaker Box located on the (B) Lower Torso.

Now, plug the UL Power Adapter into the input receiving Jack marked "DC 6V" on the Function Control box and route the power cord down towards the bottom of the frame.

Note: Do not plug UL Power Adapter into power outlet until item assembly is completed.


OPTIONAL: If you choose to use the (I) Step Here Try-Me Activation Pad, plug the connector into the input receiving Jack marked "TRY ME" on the Function Control box and route the (I) Step Here Pad down and out the bottom, then set the Step Here Pad in front of the character.

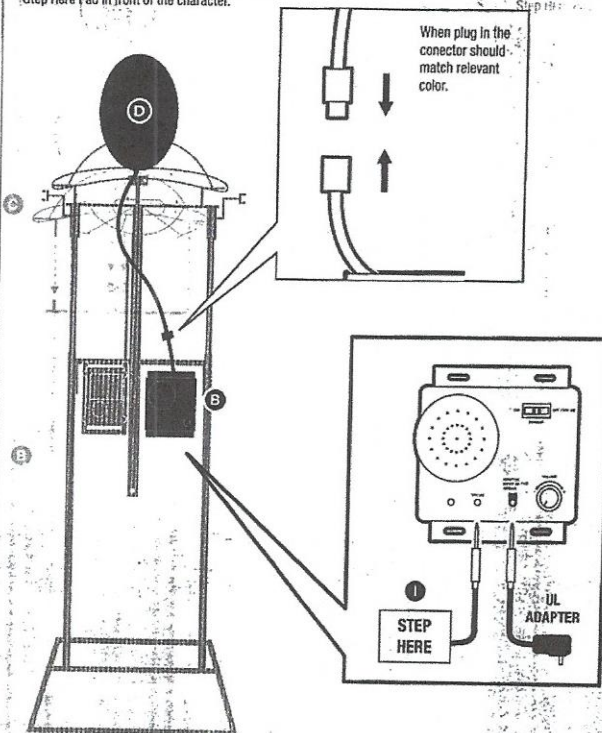

4. ASSEMBLING THE COSTUME AND ARMS


Pull the (E) Costume over the (D) Head and drape over the Assembled Frame.

Guide the (H) Left Arm and (G) Right Arm through their corresponding sleeves of the (E) Costume and attached to the slots located on the (C) Shoulder Frame.

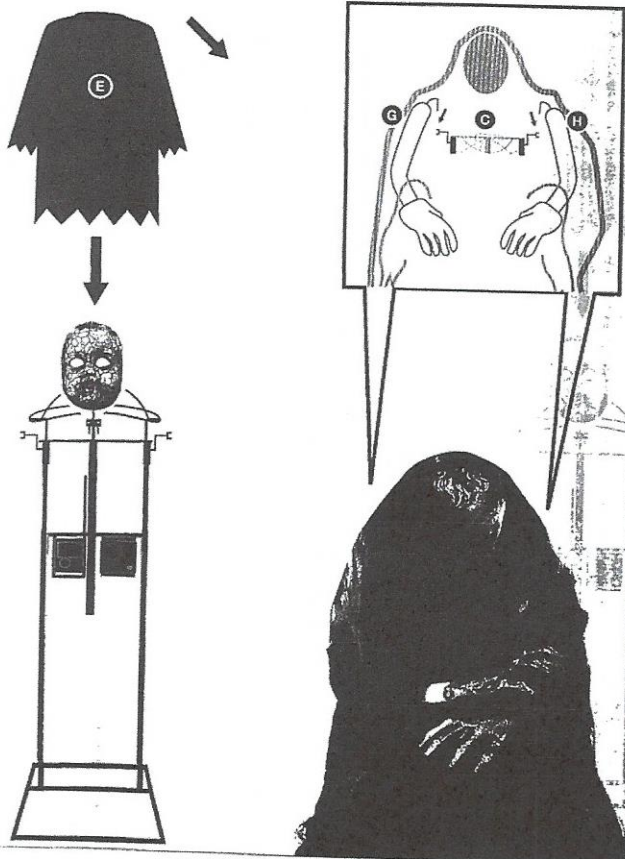

5. IR SENSOR WIRING

Connect the IR Sensor Wire from the (B) Lower Torso to the plastic ring located on the chest of the (E) Costume.

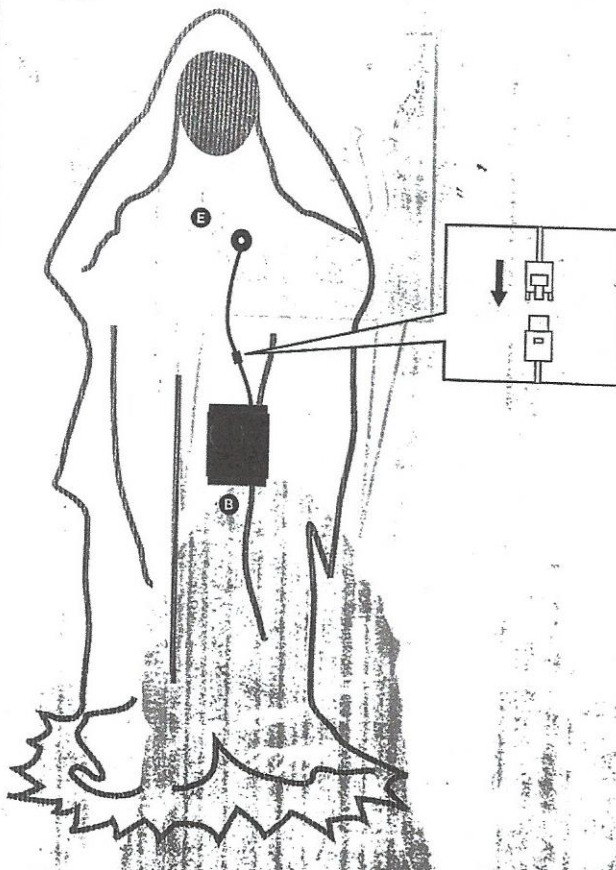


6. ADDING THE HOODED CLOAK AND FINAL COSTUME ADJUSTMENTS

Affix the hook and loop enclosure on the back of the (F) Costume near the back of the neck. Affix the hook and loop enclosures to the wrists of the (I) Left Arm and (H) Right Arm. Now drape the (G) Hooded Robe over the (E) Head.

Style the costume, hood and hair accordingly for best results.

Before connecting to the power, please be sure that bottom of the costume can not be blocked by the base, otherwise, the rising function will be affected.

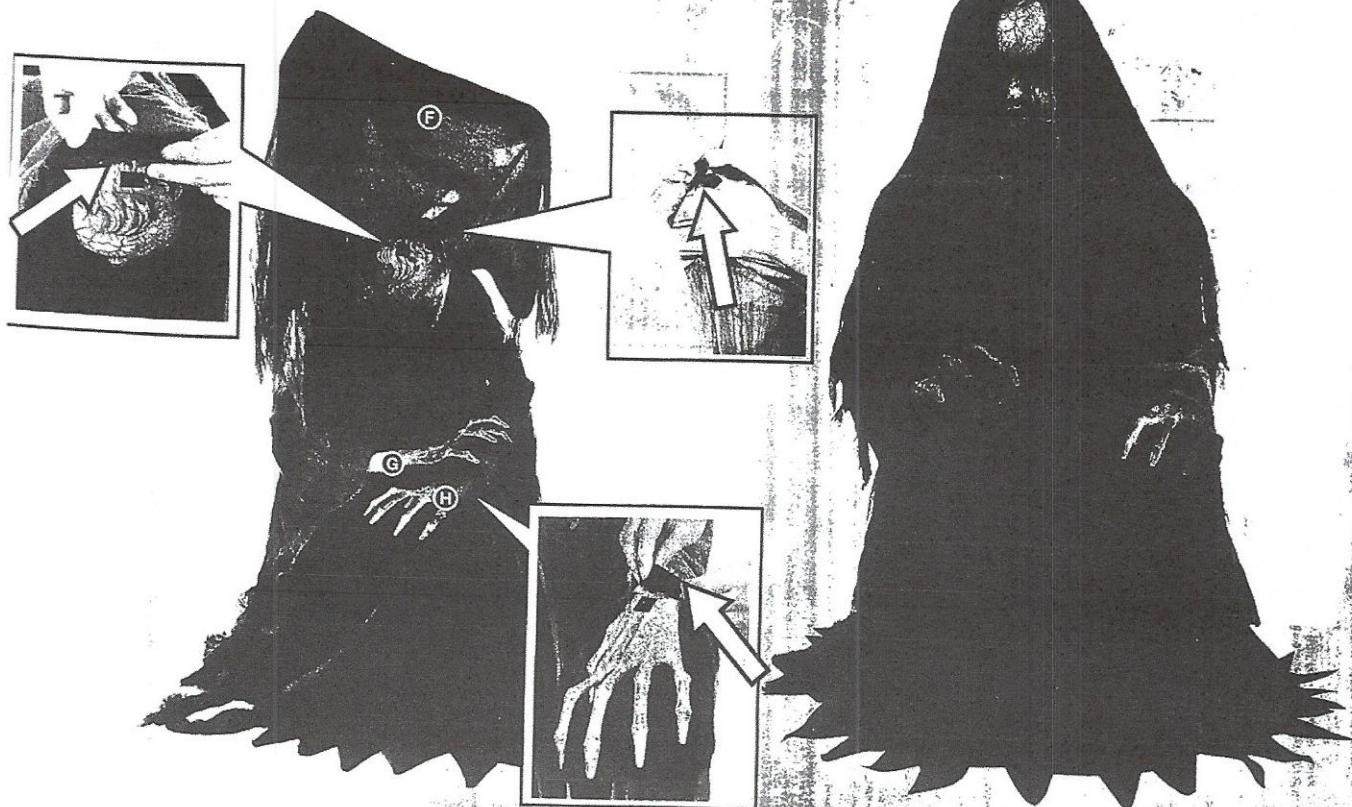

OPERATION INSTRUCTIONS

1. Plug the UL Power Adapter into a standard power outlet and adjust the settings on the Function Control Box to your liking.
2. The Rising Creeper has 3 operation settings which can be found on the main Function Control Box on the (B) Torso Frame:
 - On: This setting allows the item to run continuously.
 - Sensor: This setting allows the item to only be activated when the infra-red sensor is activated. The item will operate for one audio-cycle with each sensor activation.
 - The Infra-red (IR) sensor will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
 - The Infra-red (IR) sensor has a range of up to 2 meters/6.56 feet, and can work in all lighting conditions – bright light to no-light!
 - Off/Try-Me: This setting allows the item to be activated only if the Try-Me is triggered. The item will operate for one audio-cycle with each Try-Me activation.

The Function Control box also includes a Volume Control knob, which allows you to adjust the volume to be as loud or as quiet as needed. Be sure to test the item before finalizing your display so you can set the volume to your liking.

ENJOY YOUR RISING CREEPER!

