

LED | ROTTED CROW™

LIGHTS UP

Uses (3) 357 Button Cell Batteries
(included for demo purposes only)

OPERATING INSTRUCTIONS: KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN. Requires 3x357 button cell batteries (included for demo purposes only). 1. Carefully remove pull tab from battery compartment. 2. Replace demo batteries with 3 brand new 357 button cell batteries into the battery compartment located under the CROW's neck. 3. Place switch under CROW's neck to the "ON" position to light up the CROW's glowing eyes!

NOTE: Keep switch in the "OFF" position when not in use.

All new materials: polyfoam, plastic, plastic paper.



WARNING! CHOKING HAZARD—Small Parts.


This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.

BATTERY INSTRUCTIONS AND CAUTIONS:

Battery installation and removal should be performed by an adult. • Remove batteries when not in use. • Use only batteries recommended in the instructions. • Do not mix new and used batteries. • Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. • Be mindful to insert batteries with the correct polarity (+/-) as indicated. • Remove all exhausted batteries. • Rechargeable batteries are only to be charged under adult supervision. • Rechargeable batteries are to be removed from the item before being charged. • Non-rechargeable batteries are not to be recharged. • The supply terminals are not to be short-circuited. • Always dispose of exhausted batteries properly. • Do NOT dispose of batteries in fire, they may leak or explode.

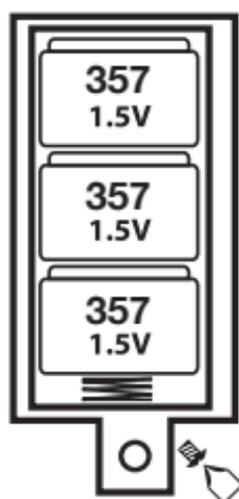

Item #90125
LED ROTTED CROW™
is a trademark of Tekky.
Copyright © 2019 Tekky.
All Rights Reserved.

TekkyDesign.com