

WELCOME TO THE PLACE WHERE DREAMS COME TRUE... **ESPECIALLY THE SCARY ONES!** WINGED SENTINEL GUARDS THE SPELLCASTING MYSTIC BOOK OF EYE!

OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

- 1. Carefully remove and discard "Try Me" wire.
- 2. Replace demo batteries with 3 brand new "AA" alkaline batteries into the battery compartment located on bottom of SEEKER OF SOULS™.
- 3. Place switch on bottom of item to the "ON" position.
- 4. Make a loud sound (clap) or wave hand in front of item to activate scary sequence!

NOTE: Keep the switch in the "OFF" position when not in use.

> INDOOR USE ONLY. DISPLAY ON LEVEL SURFACE, SURFACE WASHABLE ONLY. All new materials: plastic, fabric,

TekkyDesign.com

BATTERY INSTRUCTIONS AND CAUTIONS

MO

ПŒ

M (I)

"AA" 1.5V

"AA" 1.5V

"AA" 1.5V

- · Battery installation and removal should be performed by an adult.
- · Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- · Do not mix new and used batteries. · Do not mix alkaline, carbon-zinc,
- nickel-cadmium, rechargeable or different types of batteries.
- · Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- · Remove all exhausted batteries.
- · Rechargeable batteries are only to be charged under adult supervision.
- · Rechargeable batteries are to be removed from the item before being charged.
- · Non-rechargeable batteries are not to be recharged.
- . The supply terminals are not to be short-circuited.
- · Always dispose of exhausted batteries properly.
- . Do NOT dispose of batteries in fire, they may leak or explode.

↑ WARNING! CHOKING HAZARD—Small Parts.

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older. Not intended for use by children 14 years of age and younger.



Item #58762. SEEKER OF SOULS™ is a trademark of Tekky. Copyright @ 2020 Tekky, All Rights Reserved.



Manufactured for and distributed by: Tekky, Orland Park, IL 60467 USA MADE IN CHINA