

SPIRIT SITTING SCARE WITCH

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED: STAY CLEAR OF THE PROP WHILE OPERATING

A




B



C



D

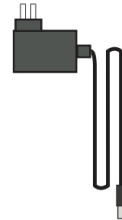

Parts:

A: BOWL

B: POLE

C: HEAD WITH CLOTHES & BASE

D: 6V2A ADAPTER

Assembly:

1. Locate the opening on the back of Sitting Witch's robe and insert POLE into back of HEAD WITH CLOTHES & BASE. Snap lock the POLE into the base of the neck. (Match A to A) Press POLE until it clicks into place. Insert POLE into BASE. (Match B to B) Press until it clicks into place.
2. Connect wires located on BASE to wire located on BOWL. (Match C to C)
3. Attach three hook and loop fasteners on the front of the dress to the LOWER hook and loop located on the bowl.
* Note: Bowl must be level, and have a light source above the bowl to enhance the motion sensor function.
4. Attach hook and loop fasteners located on the inside of both sleeves to the UPPER hook and loop fasteners on both sides of the bowl.
5. Attach hook and loop fastener (located on the inside of the Witch's CLOTHES above the rear of the base) to the hook and loop fastener located on the bottom of the BASE.
6. Place the lace fabric down and over the lap.
7. Reach into the back of the dress above the base, and Connect 6V2A ADAPTER (included) or insert 4 AA alkaline batteries into the battery compartment located on the BASE.
8. Reach into the back of the dress above the base, and turn the switch to the ON position to operate in Sound and Motion activation mode. Any sound or motion inside the candy bowl will activate the item. For MOTION ONLY, only motion inside the candy bowl will activate the item. Turn item OFF when not in use. Adjust volume control knob as needed.

