



**MOTION
& SOUND
ACTIVATED!**

**¡MOVIMIENTO Y
SONIDO ACTIVADOS!**

STRIKING SPIDER DOOR KNOCKER™

Aldaba con Araña Atacante™

Fast striking movement!
Hangs on your door!
Scary lights & sounds!

¡Rápido movimiento de ataque!
¡Cuelga en su puerta!
¡Luces y sonidos espeluznantes!


3AA

Batteries Included
(for demo purposes only)

3 pilas "AA" incluidas
(solo con fines de demostración)

BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

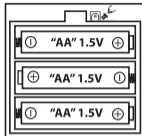

WARNING! CHOKING HAZARD—Small Parts.

This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.

Knock, knock...who's scared?!
Fast striking movement!
Lights up! Scary sounds!
Motion and sound activated

WALL MOUNTING & OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

1. Remove existing picture from the hook on your wall.
2. Carefully remove and discard the "Try Me" wire and packaging.
3. Insert 3 brand new "AA" alkaline batteries into the battery compartment located on the back of the module.
4. Hang Striking Spider Door Knocker™ on the nail. Check to make sure your nail is securely inserted into the wall before hanging up Striking Spider Door Knocker™.
5. Turn switch on module to the "ON" position.
6. Make a loud sound (clap), operate the ring (knocker) or wave hand in front of Door Knocker to activate scary sequence!
NOTE: Keep the switch in the "OFF" position when not in use.

FOR USE WITH OVERDOOR/WREATH HANGER

1. Hang the overdoor/wreath hanger over the top of your door.
2. Insert the hanger hook into the opening on back of the Striking Spider Door Knocker™.

SURFACE WASHABLE ONLY.

All new materials:
polyester fibres, plastic, wire

Item #58467
Striking Spider Door Knocker™

is a trademark of Tekky.

Copyright © 2018 Tekky.

All Rights Reserved.

MADE IN CHINA

Manufactured for

and distributed by:

Tekky, Orland Park, IL 60467 USA

TekkyDesign.com