


# JACK O' LUNGER

## INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

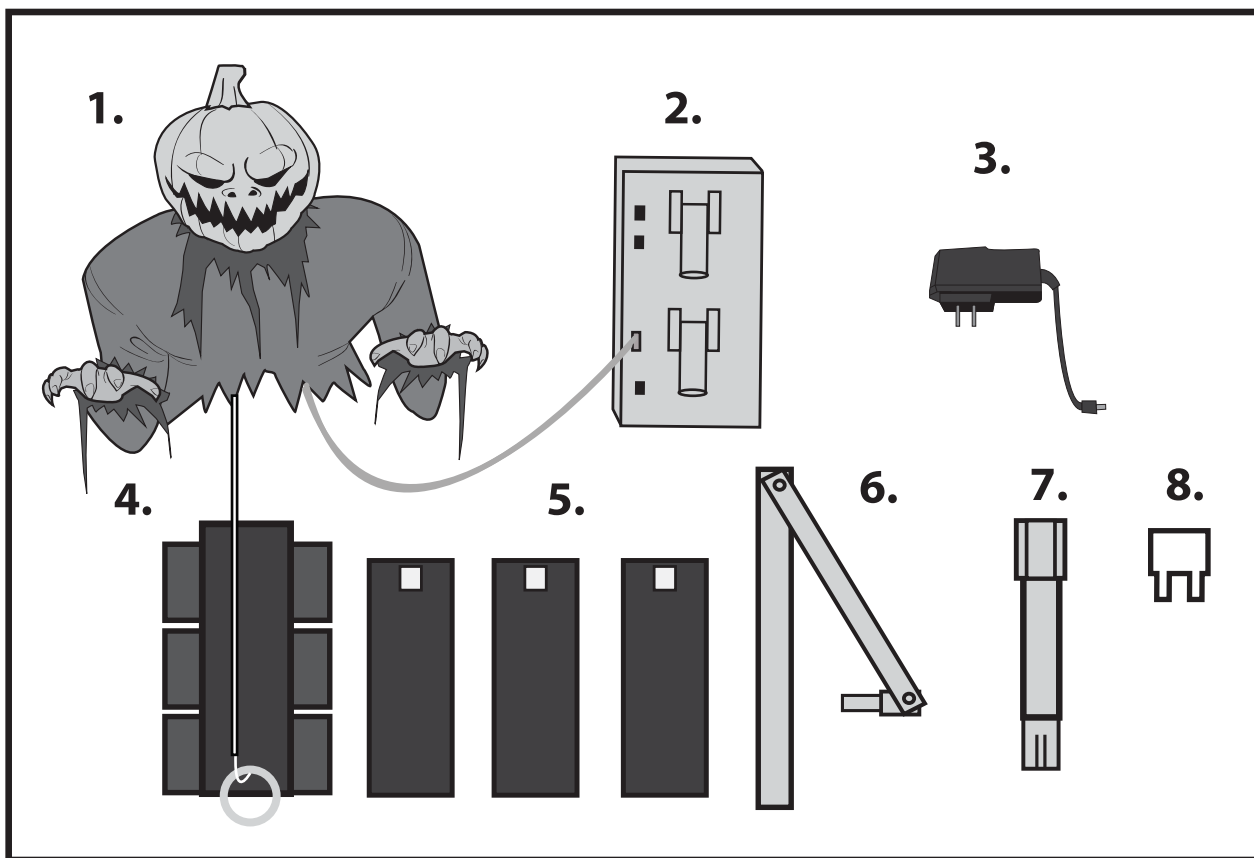

### PARTS

- 1. BODY
- 2. MODULE
- 3. ADAPTER
- 4. BACK FOOT WITH WEIGHT
- 5. FRONT AND SIDE FEET
- 6. BOTTOM POLE
- 7. TOP POLE
- 8. FOOT REMOVAL KEY

1. Insert **FRONT AND SIDE FEET** into the bottom of **MODULE**.  
(Match A to A)

✳ **IMPORTANT:** Press to make sure each **FOOT** is flush with **MODULE**.  
To remove **FOOT**, insert plastic **PLASTIC FOOT REMOVAL KEY**  
(included) into holes on bottom to release locks, twist and pull.  
To avoid damage do not pick item up while **BACK FOOT** is attached.









2. Insert **BACK FOOT WITH WEIGHT** into the bottom of the **MODULE**.  
(Match B to B)

3. Insert **BOTTOM POLE** into the **MODULE**. (Match C to C and D to D)

4. Attach **BODY** to **BOTTOM POLE**. (Match F to F)

5. Open the hook and loop on the inside of the shirt sleeve. Insert bottom arm into top arm. (See illustration 5b) Repeat step on opposite arm.

6. Close hook and loop on the inside shirt sleeve. Repeat step on opposite arm.

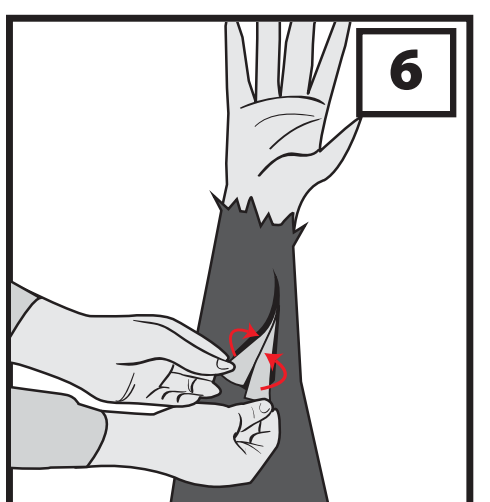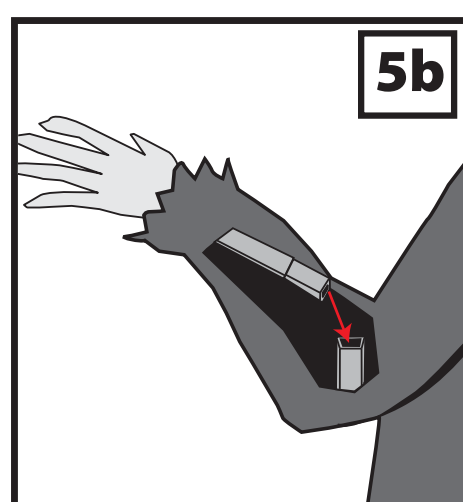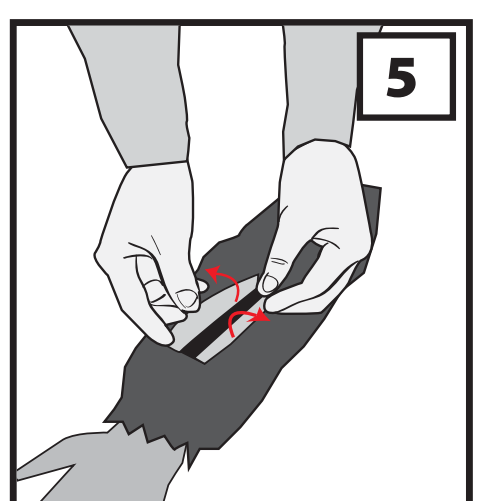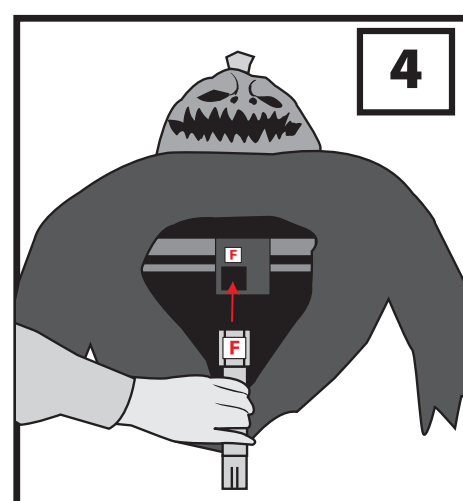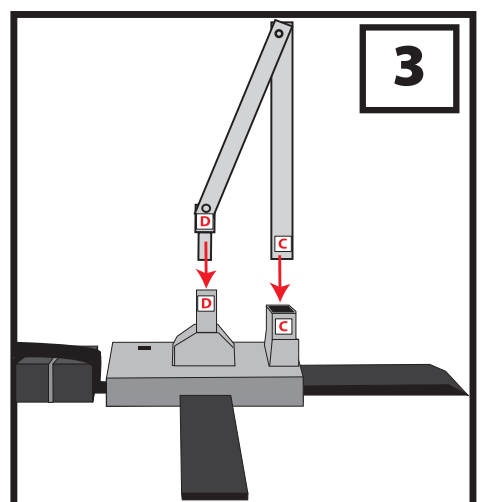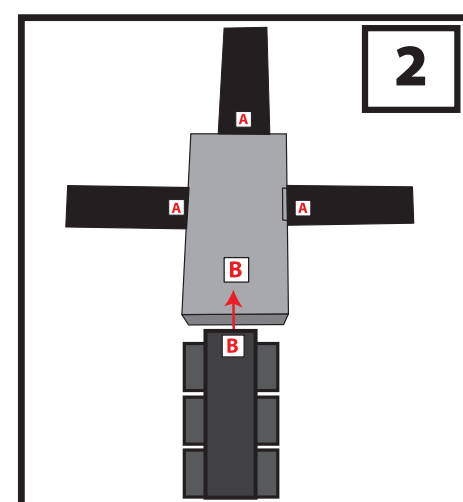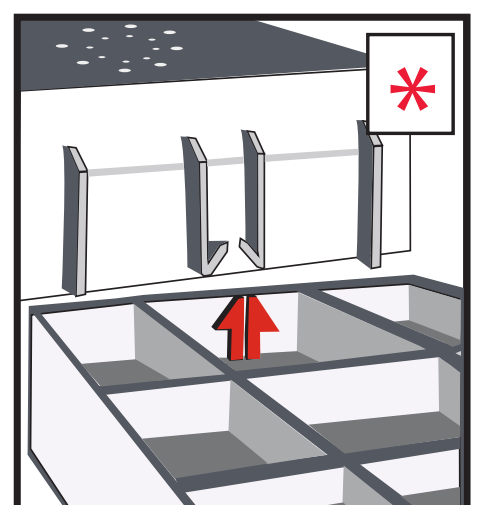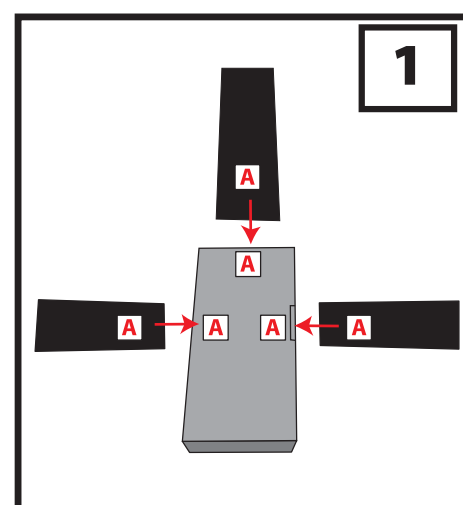

7.


Attach **BODY** to **BOTTOM POLE**. (Match **E** to **E**)
8.

Slide hook and loop strap located on **BACK FOOT WITH WEIGHT** through metal bracket. Pull tight, and attach hook and loop as seen in illustration 8.  
**NOTE: HOOK AND LOOP MUST BE PULLED VERY TIGHT.**
9.

Connect **ADAPTER** or insert 4 AA alkaline batteries (not included) into the battery compartment located on the **MODULE**.  
**Note:** Turn the switch to the **ON** position to operate in Sound or Motion activation mode. Make a loud sound (clap), or move in front of the item to activate. Turn item **OFF** when not in use.
10.

Attach hook and loop located under clothing to **FRONT AND SIDE FEET** and **BACK FOOT WITH WEIGHT**.
11.


Adjust **VOLUME CONTROL** knob on **MODULE** as needed.

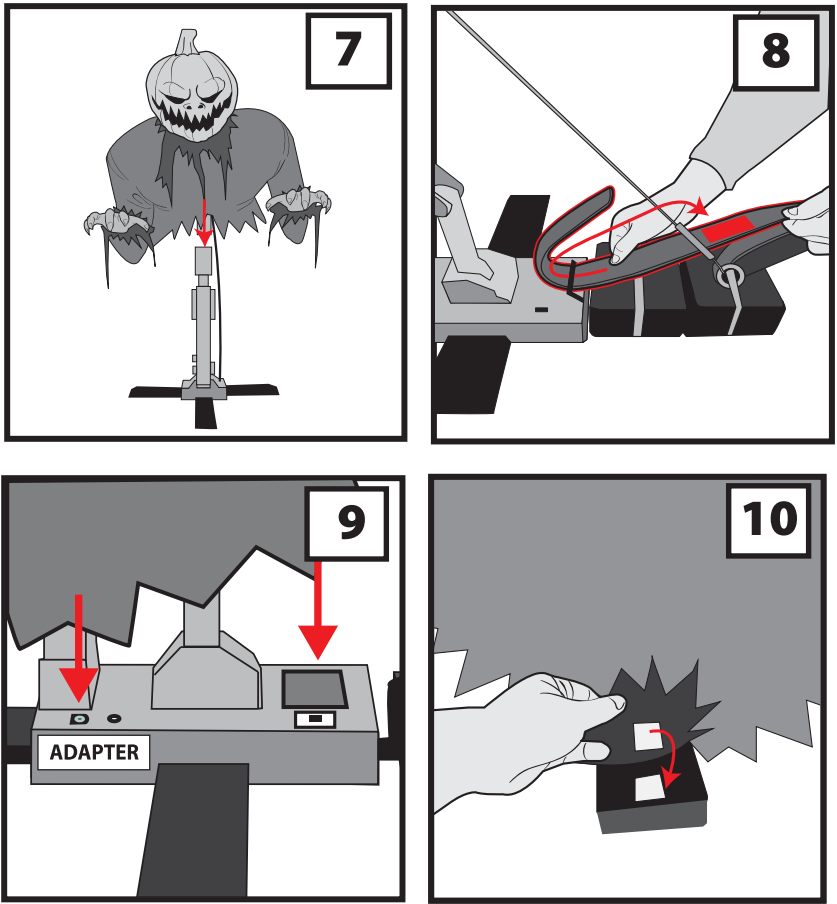

## Optional Footpad Setup


Follow steps #1 through #9 on initial installation first.

1. Connect the cable from the optional footpad to the jack labeled FOOTPAD located on the module.
2. Turn the switch on the base to the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence. (go to instruction # 10 to continue setup)

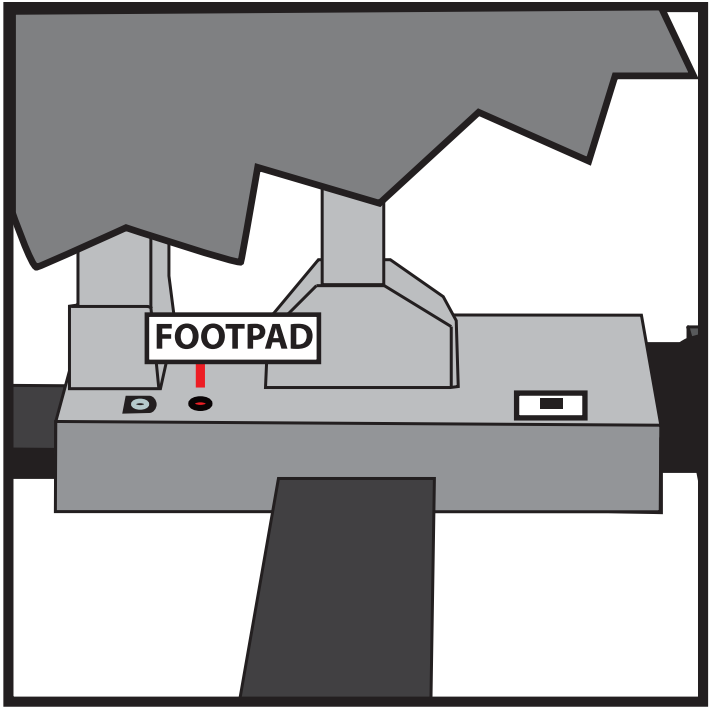

\*Footpads are sold separately and can be purchased at [www.tekkytoys.com](http://www.tekkytoys.com)

## SMART PHONE SCAN SETUP VIDEO

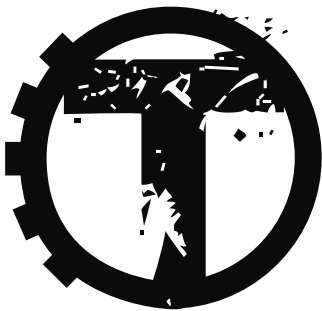

**TEKKY**

VISIT US AT [TEKKYTOYS.COM](http://TEKKYTOYS.COM)

Surface Washable Only.  
ALL NEW MATERIALS : PLASTIC,  
POLYESTER, POLYESTER FIBER  
Requires 4 'AA' Batteries  
or 6V 2A DC adapter (included)  
JACK O LUNGER is a  
trademark of Tekky Toys.  
Copyright © 2014 Tekky Toys.  
All Rights Reserved.  
MADE IN CHINA

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.  
This product is intended for use by persons 15 years of age and older.  
Not intended for use by children ages 14 years and younger.

**WARNING**  
**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.**  
**STAY CLEAR OF ITEM WHILE OPERATING.**  
**DO NOT PLACE ITEM ON UNEVEN GROUND.**  
**DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION**



**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go to  
[www.tekkytoys.com](http://www.tekkytoys.com) for assistance.

Tekky Toys Hours of Operation: Monday - Friday 9am to 5pm CST  
T: 708-478-8424 E: [support@tekkytoys.com](mailto:support@tekkytoys.com)  
visit us: [tekkytoys.com](http://tekkytoys.com)

