

# TERROR VISION™ (RETRO)


Item# 58308

## INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

1. Carefully remove and discard "Try Me" hangtag.
2. Insert 4 brand-new AA alkaline batteries into the battery compartment on the back of the TV.
3. Place the switch on the back of the TV to the "ON" position. Make a loud sound to initiate scary sequence.
4. Place the switch to the "KNOB" position to activate using the right knob only.

**NOTE:** Keep the switch in the "OFF" position when not in use.

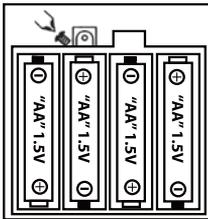

### BATTERY INSTRUCTIONS AND CAUTIONS:

- Use only the batteries recommended.
- Remove batteries when not in use.
- Do NOT use rechargeable batteries.
- Be sure to insert the batteries with the correct polarity +/-.
- Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium.
- Always dispose of exhausted batteries properly.

**ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.**

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children 14 years of age and younger.**

**WARNING**  
**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.**  
**STAY CLEAR OF ITEM WHILE OPERATING.**  
**DO NOT PLACE ITEM ON UNEVEN SURFACE.**  
**DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION**



**If experiencing technical difficulties, please go to [tekkydesign.com](http://tekkydesign.com) for assistance.**

**FOR FOOTPADS, ADAPTERS, AND ALL OTHER ACCESSORIES, PLEASE VISIT: [www.tekkyaccessories.com](http://www.tekkyaccessories.com)**

**Surface Washable Only.**

ALL NEW MATERIALS : PLASTIC, POLYESTER

Battery Powered:

Requires 4 AA Batteries (included for demo purposes only)

TERROR VISION is a trademark of Tekky.

Copyright © 2016 Tekky.

All Rights Reserved.

**MADE IN CHINA**



**TEKKY**

**VISIT US AT [TEKKYDESIGN.COM](http://TEKKYDESIGN.COM)**