


STANDING SURPRISE SCARECROW™

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

1. HEAD AND BODY
2. MODULE
3. METAL STAND
4. METAL SNAP LOCK POLES
5. WAIST BRACKET

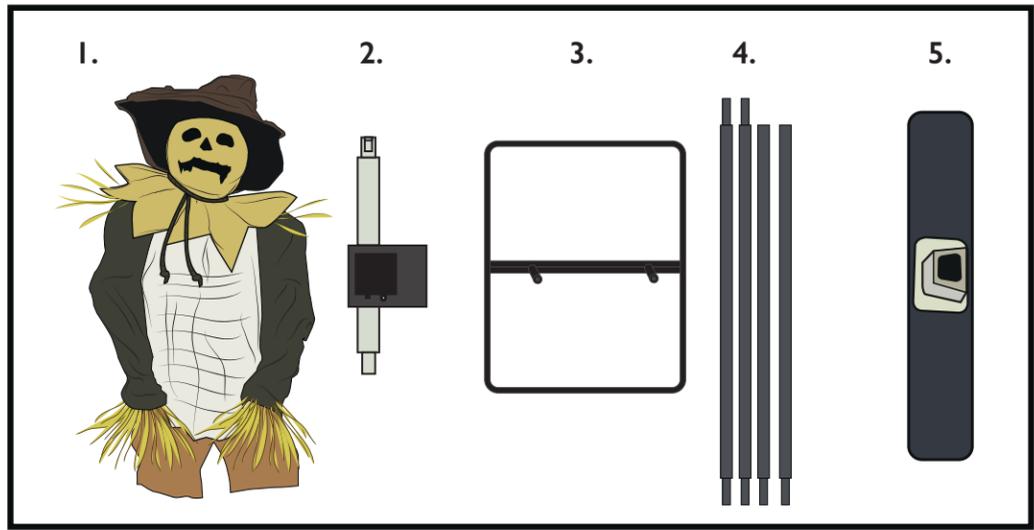

1. Insert METAL SNAP LOCK POLES into METAL STAND. (Match **A** to **A**)
2. Insert METAL SNAP LOCK POLES into METAL STAND. (Match **B** to **B**)
3. Slide HEAD AND CLOTHES over metal poles exposing the tops of metal poles marked **C** through the opening in front of the clothes.
4. Insert the WAIST BRACKET into the top of the METAL SNAP LOCK POLES. (Match **C** to **C**)
5. Insert the MODULE into the WAIST BRACKET. (Match **D** to **D**)
6. Insert MODULE pole into the base of the neck on the HEAD AND BODY. (Match **G** to **G**)
7. Connect the wire running from MODULE to the wire located inside the HEAD AND BODY. (Match **E** to **E**)
8. Connect the wire running from MODULE to the wire located inside the HEAD AND BODY. (Match **F** to **F**)
9. Connect hook and loop on the inside of the shirt to the hook and loop on the front of the pants.
10. Reach inside the fabric on the HEAD AND BODY. Connect 6V 2A ADAPTER (not included) or insert 4 AA alkaline (not included) batteries into the battery compartment located on the MODULE. Turn the switch to the ON position to activate the item. Move in front of the item to activate. Turn item OFF when not in use.


*** NOTE:** A human activated sensor detects the human infrared signature and must be uncovered and facing forward to trigger this item. In order for the STANDING SURPRISE SCARECROW™ to function optimally, make sure the human activated sensor located on the front of the item is facing forward, and not blocked by any fabric.

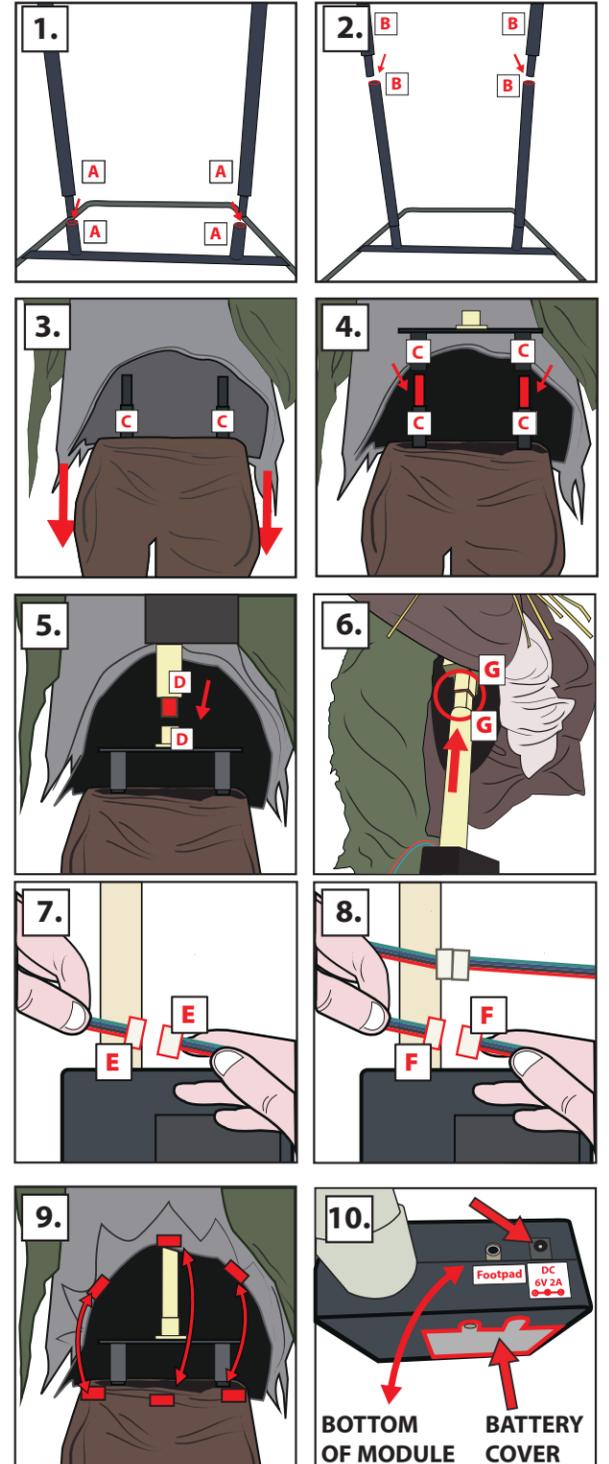

OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad to the jack labeled FOOTPAD located on the MODULE.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!

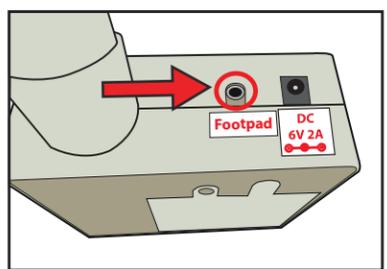


* Footpads, adapters and all other accessories are sold separately and can be purchased at www.tekkyaccessories.com

Battery Diagram

BATTERY INSTRUCTIONS AND CAUTIONS
 Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.

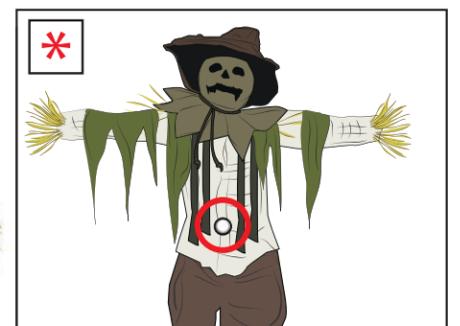

SMART PHONE SCAN SETUP VIDEO



visit us at tekkydesign.com

Requires 6V 2A ADAPTER (not included) or 4 AA batteries (not included)

ALL NEW MATERIALS:
 METAL, FOAM, PLASTIC, POLYESTER
 Surface washable only.

STANDING SURPRISE SCARECROW™ is a trademark of Tekky. Copyright © 2019 Tekky. All Rights Reserved. MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
 If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.