


LADY IN GRAY™

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.

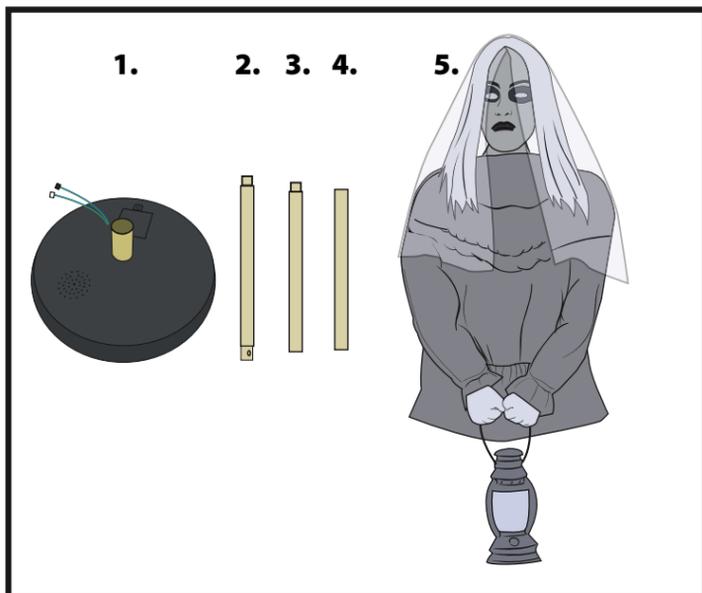

Parts:


1. FLOATING BASE
2. BOTTOM POLE
3. CENTER POLE
4. UPPER POLE
5. BODY AND HEAD

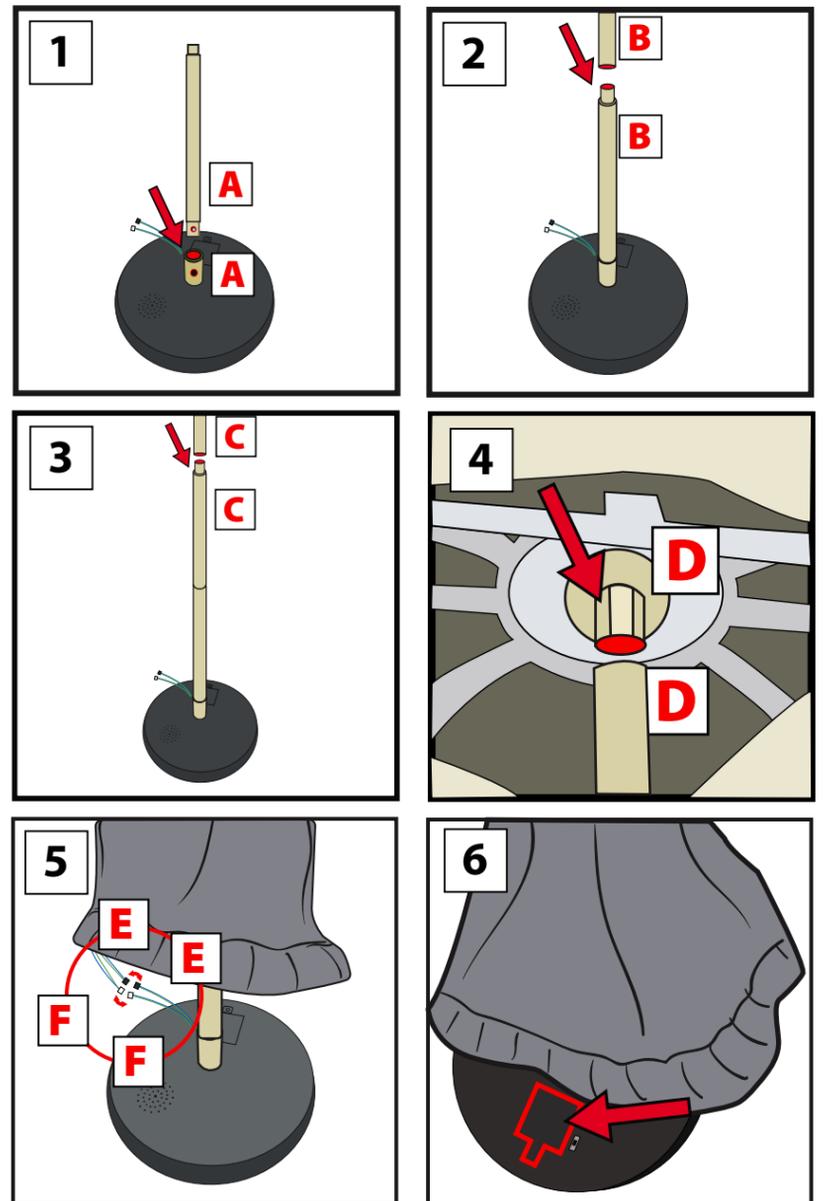

1. Insert BOTTOM POLE into the FLOATING BASE. (Match A to A) Pole is secure when snap lock pin clicks into post on base.
2. Connect CENTER POLE to the BOTTOM POLE. (Match B to B) Twist to lock.
3. Connect UPPER POLE to the CENTER POLE. (Match C to C) Twist to lock.
4. Reach inside the clothing of the BODY AND HEAD and connect the HEAD to the UPPER POLE. (Match D to D) Twist to lock.
5. Connect the wires from the FLOATING BASE to the wires located under the dress located on the BODY. (Match E to E) and (Match F to F)
6. Insert 4 AA batteries (not included) into the FLOATING BASE.
7. Turn switch on top of FLOATING BASE to the ON position (with sound) or NO SOUND (silent). Make a loud sound (clap) to activate the item. Turn the item OFF when not in use.

*NOTE: Use LADY IN GRAY™ on a smooth, flat surface to function optimally.

8. Bend the arms on the BODY so the lantern is facing forward as pictured below for the item to function optimally.

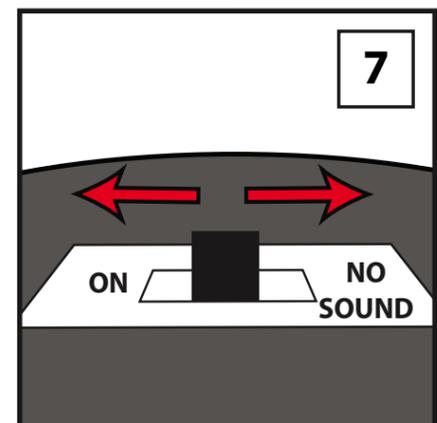


SMART PHONE SCAN SETUP VIDEO



TROUBLESHOOTING:
IF THE ITEM KEEPS MOVING IN CIRCLES, CAREFULLY PICK THE ITEM UP BY THE CENTER POLE, AND GENTLY PLACE THE ITEM BACK DOWN TO CONTINUE OPERATION.

Battery Diagram

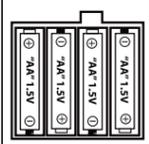

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.
**** FOR INDOOR USE ONLY****



TEKKY

visit us at tekkydesign.com

Requires 4 AA batteries (not included)

ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER
Surface washable only.

Lady In Gray™ is a trademark of Tekky.
Copyright © 2019 Tekky.
All Rights Reserved.
MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.