## **EASY ASSEMBLY AND OPERATION INSTRUCTIONS**

5124262 The Corn Stalker



This item, when assembled by the following instructions, should take 15 minutes to assemble. Please follow the step by step guide and enjoy The Corn Stalker!


## CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors or in a sheltered outdoor area. We also recommend that you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). When not in use, store this product in it's original packaging. Keep away from heat and moisture.


## WARNING


This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazerd. Keep all plastic and wire parts away from children. This product is intended for people ages 14 and up.

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

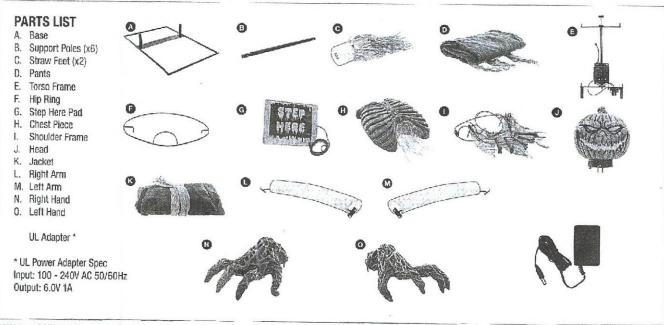


BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE FROM 8:30AM TO 5:30PM PST AT 1-855-428-3921, EXT. 207.

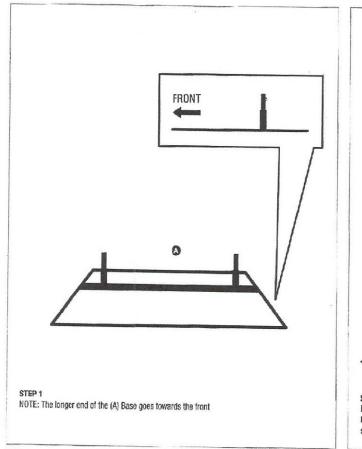


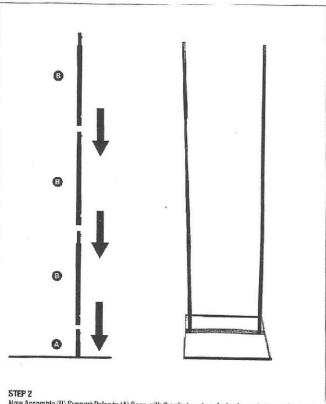

Now Assemble (B) Support Poles to (A) Base with the slot housings facing in as shown, and secure by aligning the quick-connect push buttons into the pre-drilled holes. Repeat this three times per side.

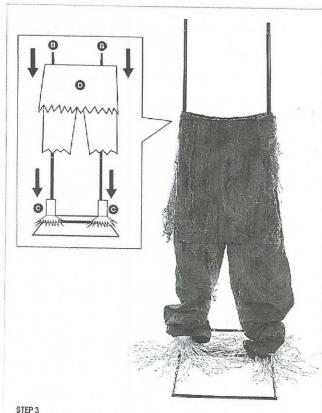

Lower the (C) Straw Feet onto the (B) Support Poles as shown. Lower the (D) Pants By feeding the Support Poles through each leg. Note; The Gauze detail on the (D) Pants should be facing front.

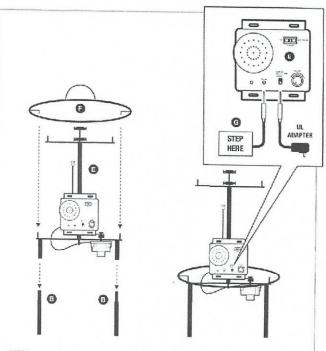


STEP 4
Next date (E) Torso Frame onto the tops of (B) Support Poles as shown and secure by aligning the quick-connect push bettoos into the pre-drifted bale. Note: the Speaker should be facing towards the front. Lower the (F) Hip Ring over the (E) Torso Frame and attach through the slots located in the sides at the bottom of the (G) Torso Frame as shown.

Now plug the UL Power Adapter into the input receiving jack marked "DC 6V" on the Function Control box and route the power cord down and out of the botom of one of the legs.


Note: To not plug UL Power Adapter into power outlet until Item assembly is completed.

OPTICHAL: If you choose to use the (G) Step Here Try-Me Activation Pac, plug theconnector into the input receiving jack marked "TRY ME" on the Function Control box and route the (G) Step Here pad drwn and out of the hotom of one of the legs, box soft the Step Here Pad in front of the cheracter.

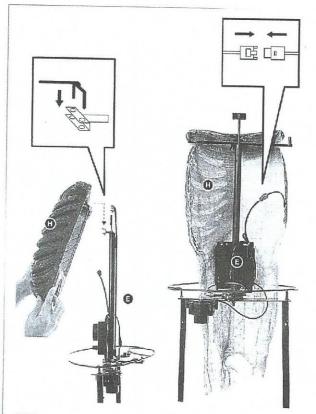



STEP 5

Now place the (H) Chest Piece onto the (E) Torso Frame by sliding the forked-hook into the front slot housing on the (E) Torso Frame, and connect the IR Sensor cable from the (H) Chest Piece to the coordinating cable on the (E) Torso Frame as shown.

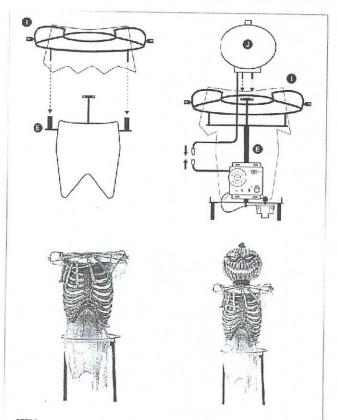


STEP 6
Place the (I) Shoulder Frame onto the (E) Torso Frame as shown, then place the (J) Head in to the (E) Torso Frame by sliding the forked-hook into "neck" slot housing on the top (E) Torso Frame then attach the cable from the (J) Head to the power box as shows.

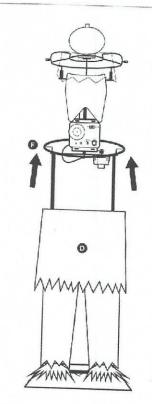

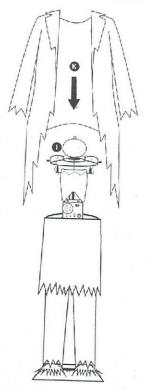



Pull (D) Pants up and over the (F) Hip Ring as shown, then place the (K) Jacket over the (I) Shoulder Frame as shown.

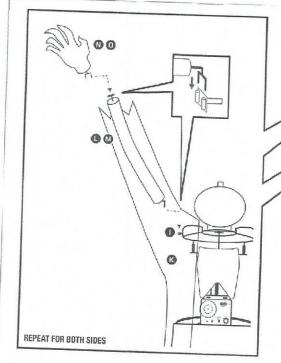




STEP 8

Now slide the (L) Right Arm up through the right sleeve and slide the forked-hook into the right "shoulder" slot housing on the (I) Shoulder Frame. Slide the (M) Left Arm up through the left sleeve and slide the forked-hook into the left "shoulder" slot housing on the (I) Shoulder Frame. Set the (N) Right Hand into place by sliding the forked-hook into the "wrist" slot housing on the end of the arm. Set the (O) Left Hand into place by sliding the forked-hook into the "wrist" slot housing on the end of the arm. At this point you can secure the sleeves of the (K) Jacket to the hands with the Hook and loop closure. hands with the Hook and loop closure.



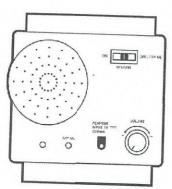

## **OPERATION INSTRUCTIONS**

- Plug the UL Power Adapter into a standard power oudet and adjust the settings on the Function Control Box to your
- 2. The Corn Stalker has 3 operation settings which can be found on the main Function Control Box on the (5) Torso Frame;

  - On: This setting allows the item to run continecasty.

    Sensor: This setting allows the item to only be activated when the infra-red sensor is activated. The item will operate for one audio-cycle writh each sensor activation.

    The Infra-red (RI) sensor will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.

    The infra-red (RI) sensor has a range of up to 2 motors/6,56 (ref., and can work in all lighting conditions—bright light to no-light!

    Off/Tiry-Mc This setting allows the item to be activated only if the Try-Mc is triggared. The item will operate for one audio-cycle with each Try-Mc activation.

The Function Control box also includes a Volume Control knob, which allows you to adjust the volume to be as foud or as quiet as needed. Be sure to test the item before thatizing your display so you can set the volume to your lifting.

ENJOY YOUR CORN STALKER!