

ACTIVATING AN ESCAPEKEEPER WITH A NORMALLY CLOSED LIGHT & LASER SENSOR

If you would like to trigger the EscapeKeeper when the laser hits the sensor, you will need to switch the Trigger Input you are using to Normally Closed.

