

Factory default jumper settings and wiring are shown. To open the case remove the small philips head screw,

For wiring to your controller please see your controller manual and the PIR manual located on the product page.

