


The PicoBoo controllers allow up to 2 minutes of programming. If you want to automatically trigger the PicoBoo on intervals greater than 2 minutes you must use something like the Simple Timer to set it off. This document describes how to do this.

- Power the PicoBoo with a 12V power supply as usual. If wired as shown, the PicoBoo will supply power to the Simple Timer so it does not need a separate power supply.
- In order for the Simple Timer to repeatedly trigger you will need to cut jumpers J1 and J2
- This data applies to all of our controllers that contain triggers.



TRIGGER A PICOBOO FROM A SIMPLE TIMER

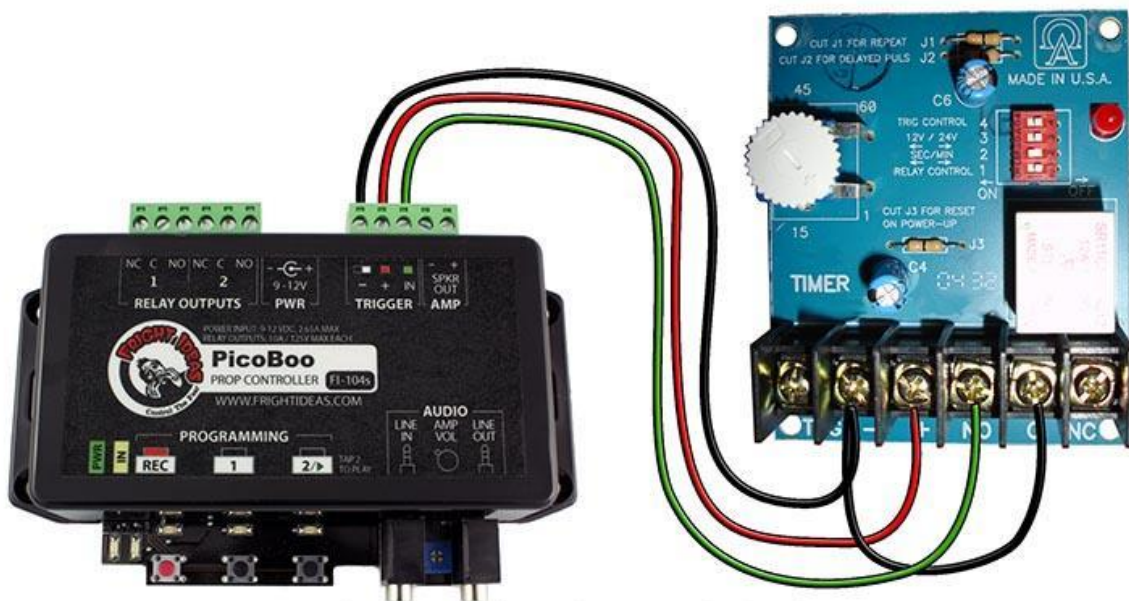

The PicoBoo will provide power to the Simple Timer.
Cut J1 & J2 on the Simple Timer to have it trigger the PicoBoo on timed intervals.