


You can trigger 12vDC and 24vDC solenoids directly without the use of a controller or timer as shown in the image. The solenoid will activate as long as the button is pressed (or step mat is stood upon). Never run 110vAC household power directly through our Hand Triggers or Step Mats. These triggers are only rated for DC voltage.



TRIGGER SOLENOIDS DIRECTLY

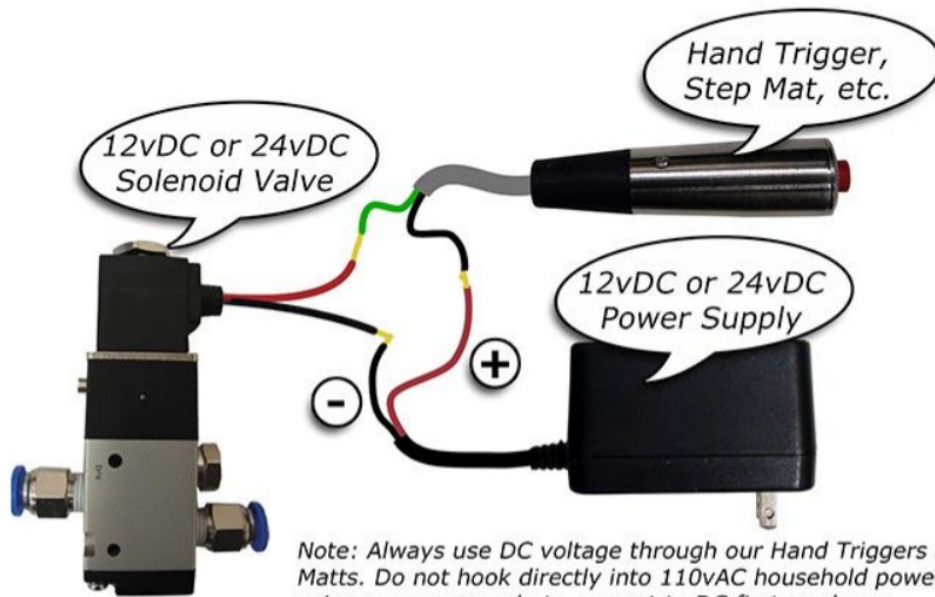

Note: Always use DC voltage through our Hand Triggers and Step Mats. Do not hook directly into 110vAC household power without using a power supply to convert to DC first as shown.