

Easy to follow Instructions

WARNING:
KEEP AWAY FROM OPEN FLAME
Not intended for use
in play by children
under 14 years of age.


FORUM
NOVELTIES INC.
©2015
Melville, NY 11747
MADE IN CHINA / FABRIQUE EN CHINE

Item # 75390


PROP-ANIM.WALKING
ZOMBIE GIRL

Please read all instructions
Carefully before assembling.

Parts List

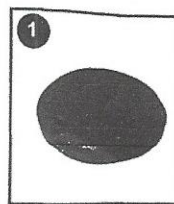

Module chassis

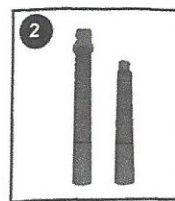

Connecting pipes




The body

Finished Picture




.For indoor use
.Voice activation

Assembly Instructions:

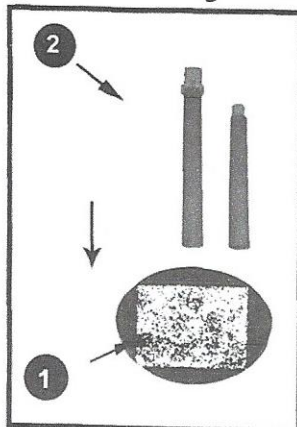


STEP 1

Insert the connecting pipes
to the module chassis
(Letters corresponding need)

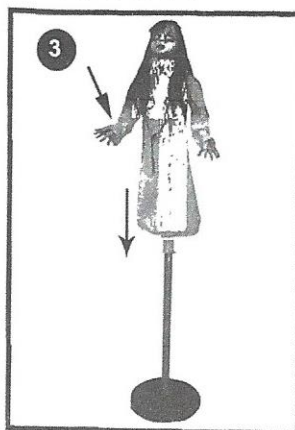

STEP 2

The body will be inserted
into the connecting pipes

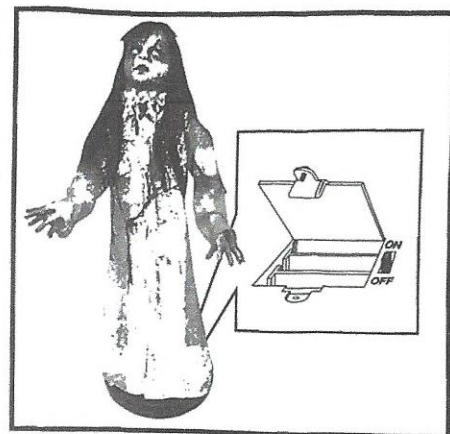

STEP 3

Install the battery,
turn on the power switch

For use with electric,
AC Adapter sold separately.

– Requires 3 "AA" Batteries (not included)

– Battery removal and replacement requires adult supervision

BATTERY WARNING: • Do NOT use rechargeable (nickel-cadmium) batteries • Do NOT recharge NON-rechargeable batteries • Do NOT mix old batteries with new or different types of batteries • Do NOT mix alkaline standard (carbon-zinc) batteries or rechargeable (nickel-cadmium) batteries • Do NOT place batteries near open flame or heat • Remove batteries from product before storing for an extended period of time • Only batteries of the same or equivalent type as recommended are to be used • Batteries are to be inserted with the correct polarity • Exhausted batteries are to be removed • The supply terminals are not to be short circuited • Retain the above information for future reference.

TO REPLACE BATTERIES:

1. Remove battery compartment screw. 2. Pull back battery compartment tab. 3. Lift battery compartment lid. 4. Remove old batteries & install new batteries with negative (-) ends touching springs.

BATTERY DISPOSAL- This product contains batteries and electronics that may be harmful to the environment; they should not be discarded with normal household waste but taken to your local collection centre for recycling. Please retain this information for future reference.

– Requier 3 piles "AA" (non incluses)

– Présence d'un adulte requise pour retirer ou changer les piles

Avertisseur de batterie: • N'utilisez PAS de piles rechargeables (nickel-cadmium) • NE rechargez PAS des piles NON rechargeables • NE mélangez PAS les piles neuves et les piles usagées, ni différents types de piles • NE mélangez PAS les piles alcalines ordinaires (charbon-zinc) et les piles rechargeables (nickel-cadmium) • NE placez PAS les piles à proximité d'une flamme nue ou d'une source de chaleur • Retirez les piles de l'appareil si vous ne devez pas utiliser ce dernier pendant un certain temps • Utilisez uniquement des piles de même type ou les piles de type équivalent conseillées • Respectez la polarité en installant les piles • Retirez les piles usagées du jouet • Ne mettez pas les bornes d'alimentation en court-circuit • Conservez les informations ci-dessus en vue d'une consultation ultérieure.

Para reemplazar las pilas:

1. Retirez la vis du compartiment des piles. 2. Tirez sur le taquet du compartiment des piles. 3. Soulevez le couvercle du compartiment des piles. 4. Retirez les piles usagées et installez les piles neuves de façon à ce que les pôles négatifs (-) touchent les ressorts.

Batteries usagées- Ce produit contient des batteries et composants électroniques susceptibles de nuire à l'environnement; Ils ne doivent pas être jetés avec les déchets ménagers mais être portés aux centres de collecte locaux de recyclage. Veuillez conserver ces instructions à titre de référence ultérieure.